

# ADWS6



# Owner's Manual



245 West Dakota Avenue • Clovis, CA 93612 Phone: 559/292-1444 800/233-4151 • Fax: 559/292-1555

## **Table of Contents**

Important Safety/Record Information	3
Use and Care of the Drinking Water Container	
Electrical Requirements	
The Use of Extension Cords	
How Distillation and Your Distiller Work	5
Getting Acquainted With Your ADWS6	6-7
Unpacking Your ADWS6	8
First Time Start-Up	8-9
Normal Operation	9
Maintenance & Cleaning Maintenance Cleaning Replacing the Carbon Filter	10-11
Troubleshooting	12-13
Ordering Parts and Servicing	18
Individual Parts List	14
Exploded View of ADWS6	15
Warranty	16

Page 2 AMI50000 Rev.5/99

## **Congratulations**

You've taken an important step to ensure that you and your dental office have contaminant free, pure water.

The AquaSource ADWS6 distiller is built of the finest materials and constructed with care and attention to detail. If you need assistance, please contact your local Apollo Dental Products dealer or ADP Technical Support at (800) 233-4151. We encourage you to take time to read and understand the Safety Information section below.

We are sure you will have many years of use from your AguaSource ADWS6 distiller.

Thank you,

Apollo Dental Products, Inc.

## **Record Important Information**

The model and serial number are found on the back panel. You should record both the model and serial numbers below for future references.

Date of Purchase:	
Model:	AquaSource ADWS6
Serial Number:	
Purchased from: _	

This product has been thoroughly tested in the laboratory and field tested under a variety of conditions. Due to the wide variation of water contamination and the conditions of use which are beyond the control of Apollo Dental Products, Inc., it is the responsibility of the user to ensure the distilled water produced meets the requirements for intended use. Apollo Dental Products, Inc. recommends the distilled water be tested as frequently as the application deems prudent.

# Please Read... Important Safety Information

- Make sure lid is removed from water container before inserting into holding area, and before unit is turned on.
- Operate indoors only in a well ventilated area.
- Always unplug the power before assembling, repairing or doing any work on the distiller.
- NEVER immerse the distiller in water or any other liquid.
- NEVER operate the distiller with a damaged cord or allow the cord to become exposed to hot surfaces.
- Make sure your electrical outlet is properly grounded. If in doubt, contact a qualified electrician.
- NEVER remove the boiling chamber from the unit until it has cooled down.
- The physiological effect of the operation of this appliance, beneficial or otherwise, have not been investigated by UL.

## **Use and Care of the Water Container**

To ensure proper performance and a lifetime of trouble-free service, please read the following information on general use and care of the water container:

- Do not use on stove-top burner, under heating elements, in microwave or conventional ovens.
- Do not store hot liquids nor food in water container.
- Freezer-safe.
- Do not place base in dishwasher. Lid: Dishwasher safe, top rack only.
- Do not use abrasive cleaners or sharp utensils.

## **Electrical Requirements**

The AquaSource ADWS6 must be plugged directly into a fully grounded outlet.

The AquaSource ADWS6 will use approximately 8 amps when operating, so isolate a 10 amp fuse or circuit breaker for the unit.

This unit operates on 110V, 60 cycles, or as otherwise specified on the back of the distiller.

### The Use of Extension Cords

An extension cord is not recommended. However, an extension cord may be used if care is exercised.


If an extension cord is used:

- a. The marked electrical rating of the extension cord should exceed the electrical rating of the AquaSource ADWS6 (see the specifications on back of the unit).
- b. The extension cord must be a three-pin grounded type.
- c. The extension cord should not be placed under carpet or left where persons may trip over it.
- d. Do not overload extension cord with other power consumers.

## **How Distillation And Your Distiller Work**


Nature has a way to produce pure water from contaminated sea water (1). When the sun rises in the morning, it starts to heat the surface of the ocean (2). The heat causes molecules or pure water to escape from the surface of the ocean (3) and rise to form clouds (4). When the conditions are right, (5) the clouds cannot hold any moisture and water falls to earth as rain (6). The rain collects in rivers, lakes and reservoirs and is available for drinking (7).

#### NATURE'S DISTILLATION CYCLE...

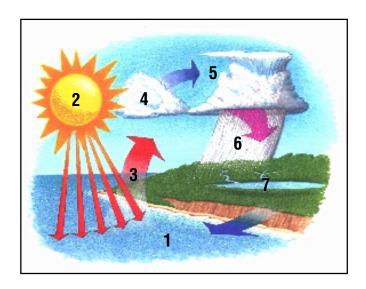


#### THE AQUASOURCE WAY...

A distiller operates the same way. Water is taken into a boiling chamber (1) where heat is applied (2). The water boils and water molecules (steam) rise (3). The steam enters the condenser (4) where cool air (5) causes the steam to lose energy and it forms droplets of pure water (6). This water is collected and is fresh, great-tasting, distilled drinking water (7) - the purest kind.

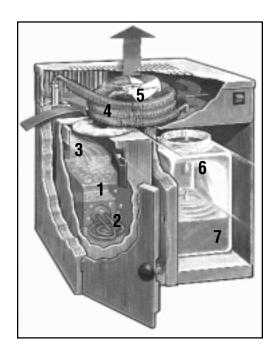

## **Getting Acquainted With Your AquaSource ADWS6**

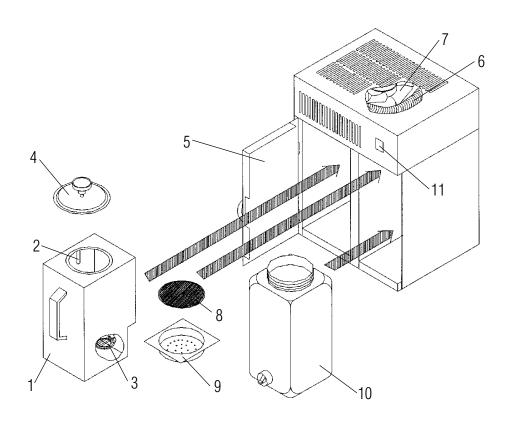

### **Component Identification:**



**Boiling Chamber (1).** The manually-filled stainless steel boiling chamber holds one gallon of water when filled to the proper level.



**Water Level Indicator (2).** A small rod which extends down inside the boiling chamber. The boiling chamber should be filled to touch the bottom of this indicator.

**CAUTION:** DO NOT overfill.



**Heating Element (3).** The 750-watt heating element provides the heat to boil the water in the boiling chamber.



**Lid (4).** The lid is constructed of heavy-gauge stainless steel and has a special gasket and handle which tightens to seal.



**Door (5).** The hinged stainless steel door improves the look of the unit and serves an important safety role. DO NOT open the door until the unit has stopped distilling for a minimum of 30 minutes.



**Condenser (6).** A hollow, finned stainless steel tube where the steam from the boiling chamber is collected and cooled by the air from the fan. The steam is converted into high-purity drinking water. At the top portion of the condensing coil there are two small holes. These are gas vents to allow volatile compounds to escape.



**Fan (7).** An electrical fan which works automatically to provide a flow of air across the outside of the condenser.



**Filter (8).** Before the distilled water flows into the drinking water container, it passes through a carbon filter pack to polish the taste of the water.



**Filter Housing (9).** An FDA approved food-grade housing designed to slide into the guides in the distiller and holds the carbon filter pack.



**Drinking Water Container (10).** This FDA-approved food-grade PET plastic container collects the distilled water. It is equipped with a spigot for ease of use.



**Power Switch (11).** The power switch is located on the front of the unit. It is a 3-position switch. The top position is ON, and when pushed and released, it automatically resets to the center for operation. The bottom position is OFF.

## **Upacking Your AquaSource ADWS6**

Your ADWS6 water purification system is shipped to you in a durable carton. Carefully remove the contents from the box.

The ADWS6 carton contains:

- The AquaSource ADWS6 distiller.
- Food-grade plastic container and lid.
- Filter kit.
- Owners Manual and Warranty Card.

If these are not present, please look for the Quality Assurance Inspection Slip and note the name of the inspector. Call your Dental Dealer; or, in the event you can't reach them, contact ADP Customer Service Department at (800) 233-4151 (outside the USA, please call (559) 292-1444).

**Note:** Save the box and packing materials for future use in the unlikely event your ADWS6 should require service work.

## **First Time Start-Up**

Starting the unit for the first time:

- 1. Open the door (5) and remove the boiling chamber (1) by pulling on the handle.
- 2. Remove the lid (4) by turning the black lid knob counterclockwise and moving the lid (4) side to side and lift out.
- 3. Fill the boiling chamber (1) with tap water until the water touches the bottom of the water level indicator (2). DO NOT overfill.
- 4. Replace the lid (4) on the boiling chamber (1). Turn the black lid knob clockwise and tighten firmly, ensuring a good seal. DO NOT overtighten.
- 5. Push the boiling chamber (1) into the left side of the distiller until it fits snug and the element prongs plug into the controller.
- Close the door.

**Note:** DO NOT install the post filter at this time. Keep the first batch of distilled water for soaking the post filter.

#### First Time Start-Up Continued...

- 7. Put the water container in place.
- 8. Plug the power cord into the electrical source.
- 9. Turn the power switch (11) to START.
- 10. Allow the unit to operate until it automatically shuts off (approximately 4 hours).
- 11. Keep the first batch of distilled water for soaking the post filter as described in the next section, but do not use.
- 12. Replace the water container (10) to the distiller.

## **Normal Operation**

- 1. Ensure that the boiling chamber is cool.
- 2. Open the door (5) and remove the boiling chamber (1) by pulling on the handle.
- 3. Loosen the black knob on the lid (4) and slide the lid from side to side and lift the lid out.
- 4. Swirl and empty out any water left in the boiling chamber (1) from the prior batch.
- 5. Fill the boiling chamber (1) with tap water until it touches the bottom of the water level indicator (2).
- 6. Place the lid (4) on the boiling chamber (1). Tighten the black lid knob firmly, ensuring a good seal. DO NOT overtighten.
- 7. Push the boiling chamber (1) into the left side of the distiller until it fits snug and the element prongs plug into the controller. Close the door.
- 8. Submerge the filter (8) completely in a separate container with distilled water for one minute. Remove the filter (8) and place inside the filter housing (9).
- 9. Slide the filter housing (9) into the guide above the water container.
- 10. Be sure lid is removed from container. Put the water container (10) in place.
- 11. Turn the power switch (11) to START. Note: To activate the unit, the switch must be fully depressed.
- 12. Allow the unit to operate until it automatically shuts off. This will take approximately 4 hours.

**CAUTION:** Never open the door during operation and never remove the boiling chamber while the unit is operating.

## **Maintenance & Cleaning**

With proper care on your part, your AquaSource ADWS6 will provide you with high-quality water for many trouble-free years.

The following recommendations are for typical water conditions. If you live in an area where the water quality is exceptionally poor, you may need to increase the frequency of our care.

#### Maintenance

#### **Every Batch:**

• Swirl and rinse out the residual water from the boiling chamber (1).

#### Monthly, or every 30 gallons:

 Clean the inside of the boiling chamber (1) to remove any build-up of solid residues. (See Cleaning below).

#### **Every 3 months:**

- Replace the carbon filter, stock #45518. (See page 9).
- Clean the exterior with Stainless Steel Cleaner & Polish, stock #6606.

#### Cleaning

#### **Cleaning the Exterior:**

Use Stainless Steel Cleaner & Polish (stock #6606) and follow instructions.

#### **Cleaning the Boiling Chamber:**

Sometimes scale will build up inside the boiling chamber. This needs to be removed periodically to ensure good heating element life, and high-quality water.

**Note:** If you rinse the boiling chamber every time you fill it, you will rarely get build-up of scale inside the boiling chamber, and will rarely have to clean it.

#### To Clean the Boiling Chamber:

- 1. Turn the power switch to the OFF position.
- 2. If the unit has been operating, allow it to cool for 30 minutes from the end of the distillation cycle.
- 3. Carefully remove the boiling chamber from the unit.

**CAUTION:** The boiling chamber will get hot and could cause a burn if the unit has not been allowed to cool.

- 4. Remove the boiling chamber lid (4).
- 5. Drain any residual water inside the boiling chamber (1).
- 6. Fill the boiling chamber to the water level indicator (2).
- 7. Add Lumen™ Cleaner (stock #6603) to the boiling chamber. Follow instructions on the label.


**Note:** DO NOT replace the boiling chamber back into the unit during the cleaning process DO NOT allow the unit to operate with the Lumen Cleaner in the boiling chamber.

### **Replacing the Carbon Filter**

A carbon filter (9) is used to finish or polish the water, and to improve the taste. The carbon filter should be replaced approximately every 3 months, or whenever the water develops a taste. The carbon filter is custom designed for the AquaSource ADWS6 distiller.

#### To Replace the Carbon Filter:

- 1. Remove the water container (10) from the unit.
- 2. Remove the old filter by sliding the filter housing (9) and filter (8) towards you or removing it from the opening in the water container.
- 3. Immerse the new carbon filter (9) in a separate container filled with distilled water for one minute.
- 4. Remove the soaked filter and place it into the filter housing.
- 5. Slide the new filter and housing back into the guide or replace it into the opening of the water container (9).

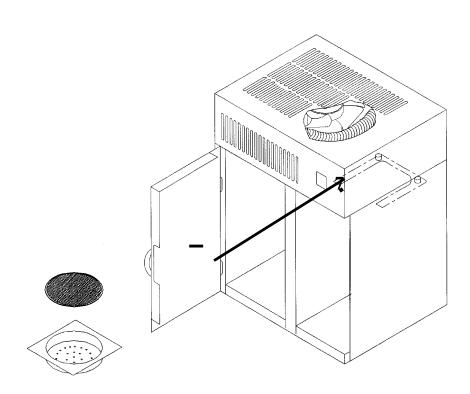

## **Troubleshooting**

The AquaSource ADWS6 distiller is designed for years of dependable service. The following guide is presented to assist you in the event of any problems with your product.

#### SYMPTOM: Unit does not produce water.

1. Possible Cause: No Power.

#### Check:

- 1. That the power cord is plugged in and is pushed in completely.
- 2. That the power to your home/office is on.
- 3. That the power switch (11) is turned on. The switch must be completely depressed at the top to initiate operation.
- 4. That there is water in the boiling chamber.
- 5. That the boiling chamber (1) is completely pushed in.

#### 2. Possible Cause: Heating Element Burned Out.

#### Check:

- 1. If there is power to your home/office...
- 2. If the power cord in plugged in...
- 3. If the power switch is turned on...
- 4. If the boiling chamber is pushed in completely, and the fan rotates when the unit is on, but the air is cool, or cold...

#### Then:

Replace the heating element (stock #9202).

#### SYMPTOM: The distilled water has a taste.

1. Possible Cause: New Carbon Filter Needed.

#### Action:

- 1. Change post filter by following directions for Replacing the Carbon Filter on page 11.
- 2. Thoroughly clean the boiling chamber. Note: Make sure the boiling chamber is cool.

#### SYMPTOM: There is steam around the unit.

1. Possible Cause: Insufficient Ventilation Of The Unit.

#### Check

- 1. That the unit is not pushed hard against the wall. Keep about 1 inch clearance.
- 2. If there are any items on the unit that may block the air flow. Remove any such items.

#### 2. Possible Cause: Fan Motor.

#### Check:

1. If the fan is not turning and you have checked that there is power to the unit, and the power switch is on, then it may be a failed fan motor. Replace the fan motor (stock #45517).

#### SYMPTOM: There is water around the unit.

1. Possible Cause: Improper Positioning.

#### Check:

- 1. That the carbon filter is in proper position and water is flowing through it.
- 2. That the water container is correctly placed to catch the water.

## **Ordering Parts & Servicing**

Apollo Dental Products recommends that you have your AquaSource ADWS6 serviced by an authorized service technician. Please see your Dental Dealer.


If you require parts or accessories at any time, please contact your Dental Dealer. In the unlikely event your Dental Dealer cannot help, you may contact Apollo Dental Products Customer Service at (800) 233-4151.

To help you identify parts for your AquaSource ADWS6 please see the parts list included in this manual on page 14.

## **Individual Parts List**

ud
ud
uu
Tank Lid
t Retainer
d
ut
lock
IUUK
ot 750\M
nt, 750W
tudded
Plastic
Washer
nent
r
W
ssembly
g w/ Lid & Labe
sembly
1
ner, Welded
er
, 7/8"
/ire
е
#10
x 1/4"
tion, Lighted
l-pack
·
tudded
sed
shown)
iute
ylock
lock
"
oil
711
it 4

## **Exploded View of Mini-Classic**

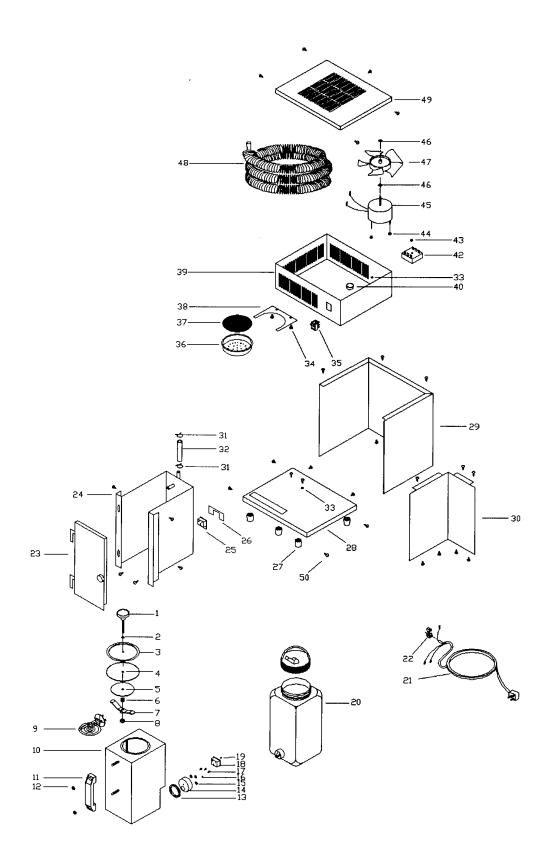

## **Limited Warranty**

Apollo Dental Products, Inc. warrants this distillation system, to the original user, to be free from defects in materials and workmanship of fabricated stainless steel components for a period of five (5) years from date of purchase, and one (1) year on all electrical components from date of purchase. This warranty is in effect provided that the installation, operation and maintenance are done in accordance with ADP procedures as outlined in the Owners Manual. In the order for this warranty to be effective, the accompanying warranty registration card must be completed and faxed or mailed to ADP within 10 days of the date the distiller is purchased.

ADP's obligation under the warranty is to provide the replacement product (excluding labor). All special, incidental and/or consequential damages are excluded. We will not issue credit for complete distillation systems without first attempting to correct the problem in the field. Written notice of breach of warranty must be given to ADP within the warranty period. The warranty must be given to ADP within the warranty period. The warranty does not cover damage resulting from improper installation or maintenance, accident, alteration of any kind or misuse. The warranty does not cover damage resulting from the use of cleaning, disinfecting or sterilizing chemicals and processes. Failure to follow instructions provided in ADP's Owner Manual may void the warranty.

Other than as stated herein, ADP makes no repressentations or warranty of any kind, express or implied, including without limitation, any warranty of merchantability, or fitness of a particular purpose. In no event will ADP be liable for incidental or consequential damages.

Page 16 AMI50000 Rev. 4/99