



Service Manual

FLIP 5 *(S/N Starting from CS)*

SKU: JBLFLIP5BLK, JBLFLIP5BLU, JBLFLIP5RED, JBLFLIP5GRY, JBLFLIP5TEAL, JBLFLIP5WHT, JBLFLIP5GREN, JBLFLIP5YEL, JBLFLIP5PINK, JBLFLIP5SAND, JBLFLIP5BLKAM, JBLFLIP5BLUAM, JBLFLIP5REDAM, JBLFLIP5GRYAM, JBLFLIP5TEALAM, JBLFLIP5WHTAM, JBLFLIP5GRENAM, JBLFLIP5YELAM, JBLFLIP5PINKAM, JBLFLIP5SANDAM



CONTENTS

Technical Specifications	2
Safety Instruction	3
Button Function Mapping	6
Disassembly Instruction	7
Set Block Diagram	11
Set Wiring Diagram	12
Circuit Diagrams	13
PCBA layout Diagrams	22
Mechanical Exploded View	29
Spare Parts List	30
Revision List	32

TECHNICAL SPECIFICATIONS

- Model name: Flip 5
- Bluetooth version: 4.2
- Signal-to-noise ratio : >80dB
- Support : A2DP V1.3, AVRCP V1.6
- Transducer :44X80mm
- Rated power : 20W RMS
- Battery type: Lithium-ion polymer 17.3WH(Equivalent to 3.6V 4800MAH)
- Battery charge time: 2.5 hours (5V/2.3A)
- Frequency response: 60Hz-20kHz
- Music playtime : Up to 12 hours (Varies by volume level and audio content)
- Bluetooth transmitter power : 0 -20DBM
- Bluetooth transmitter frequency range : 2.402 - 2.480GHZ
- Bluetooth transmitter modulation : GFSK, $\pi/4$ DQPSK , 8DPSK
- Dimensions (W × D × H): 181 x 69 x 74 mm
- Weight: 538g

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

For Products That Transmit and Receive RF Energy:

FCC Regulations (USA Only)

FCC Information For Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by Harman could void the user's authority to operate the equipment.

IC Statement and Warning (Canada Only)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Canadian Model

This Class B digital apparatus complies with Canadian ICES-003.

Modèle pour les Canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Products with Radio Receivers That Can Use an External Antenna:

CATV or Antenna Grounding

If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode.

Note to CATV System Installer:

This reminder is provided to call the CATV (cable TV) system installer's attention to article 820-40 of the NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

For CD/DVD/Blu-ray Disc™ Players:

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

Caution:

This product uses a laser system. To prevent direct exposure to the laser beam, do not open the cabinet enclosure or defeat any of the safety mechanisms provided for your protection. DO NOT STARE INTO THE LASER BEAM. To ensure proper use of this product, please read the owner's manual carefully and retain it for future use. Should the unit require maintenance or repair, please contact your local Harman Kardon service center. Refer servicing to qualified personnel only.

For Products That Include Batteries:



Instructions for Users on Removal and Disposal of Used Batteries.

CAUTION

Risk of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Alkaline batteries are considered nonhazardous. Rechargeable batteries (i.e., nickel cadmium, nickel metal-hydride, lithium and lithium-ion) are considered hazardous household materials and may pose an unnecessary health and safety risk.

In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

To remove the batteries from your equipment or remote control, reverse the procedure described for inserting batteries in the owner's manual.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build-up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together or your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES devices.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.


Components identified with the IEC symbol  in the parts list are of special significance to safety. When replacing a component identified with , use only the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

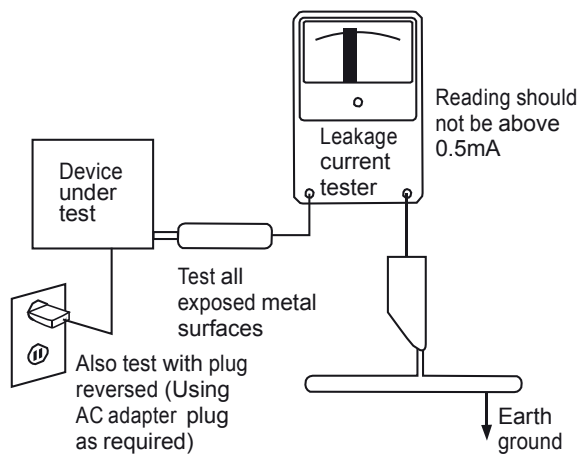

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

BOTTON FUCTION MAPPING

Button Pattern	Action	Indicator
Volume + & Bluetooth	Long press > 10s	Enter HID DFU mode in On Mode.
Volume + & Phone	Long press > 2s	Reset to factory default in On Mode.
Volume - & Bluetooth	Long press >10s	Enter by-pass mode in On Mode.
Volume - & Phone	Long press >10s	Enter Regular DFU mode in On Mode.
Volume - & Link	Long press > 2s	Show SW version in On Mode.
Volume + & Link	Long press >10s	Enter Demo mode in On Mode.

Remark: all combination function shall triggered by long pressing.

Table 4 Combination button for debug and factory test

Disassembly Instructions

1: Take out the graphic carton



2: Take out the inner box



3: Open the inner box



4: Take out the product



5: Remove the grille



6: Remove wrapping housing




7: Remove screw as shown and take out the metal ring and recess



8: Take off PR for both side



9: Remove 4 screws as shown

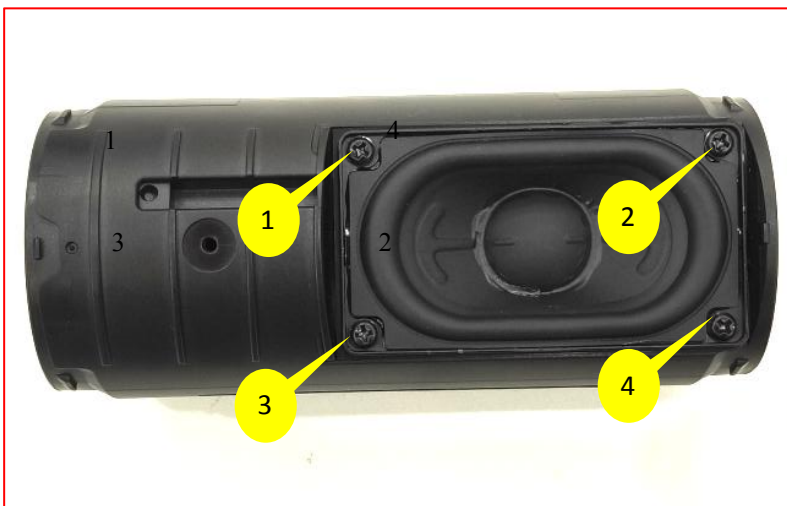


10: Take out the driver



11: Pull out the driver cable




12: Unplug 3 connectors

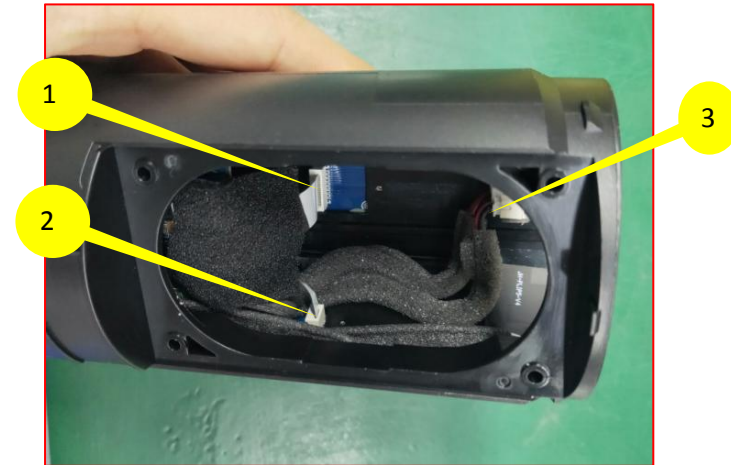


13: Tear off antenna




14: Unplug Mic connector

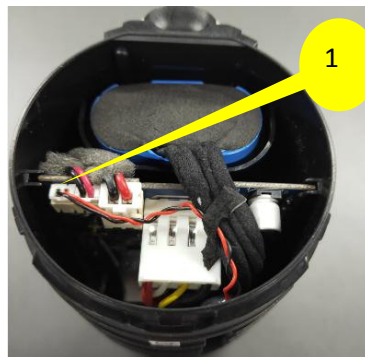

15: Pull out main PCBA and battery

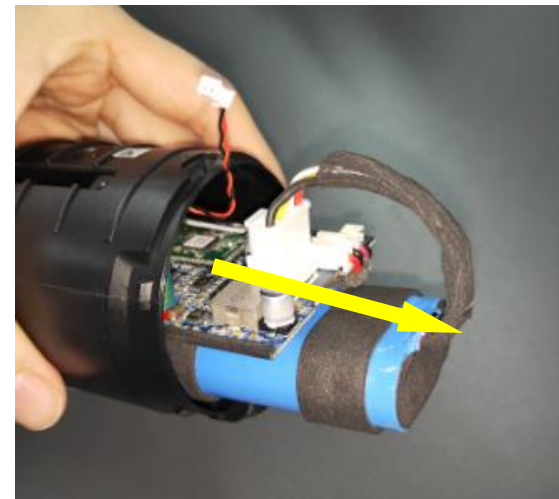


16: Unscrew below 6 screws

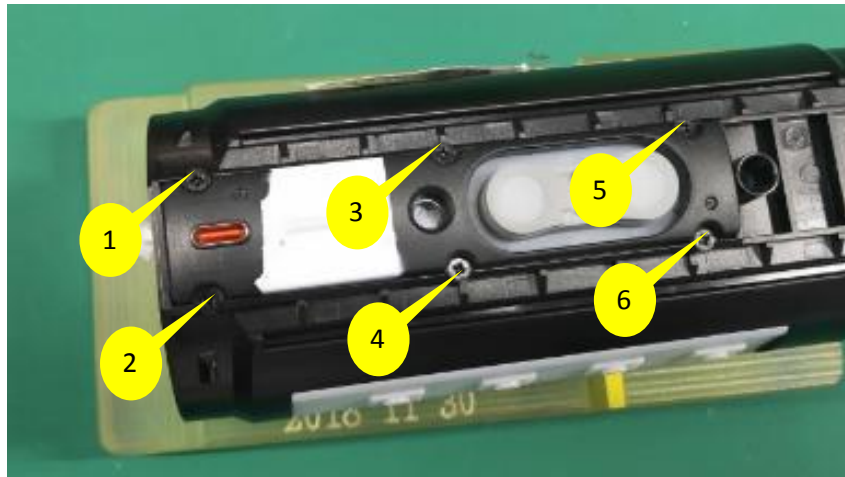

17: a. Take out Type-C socket

b. Teal off volume silicone button

c. Teal off power silicone button

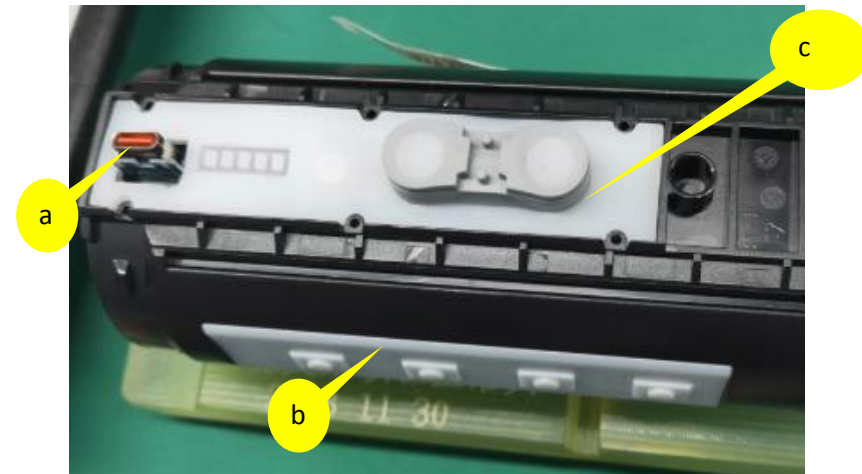


18: Unscrew below 2 screws and take out LED PCBA




19: Unscrew below 2 screws and take out Key PCBA




HMM JBL Flip5 Block Diagram

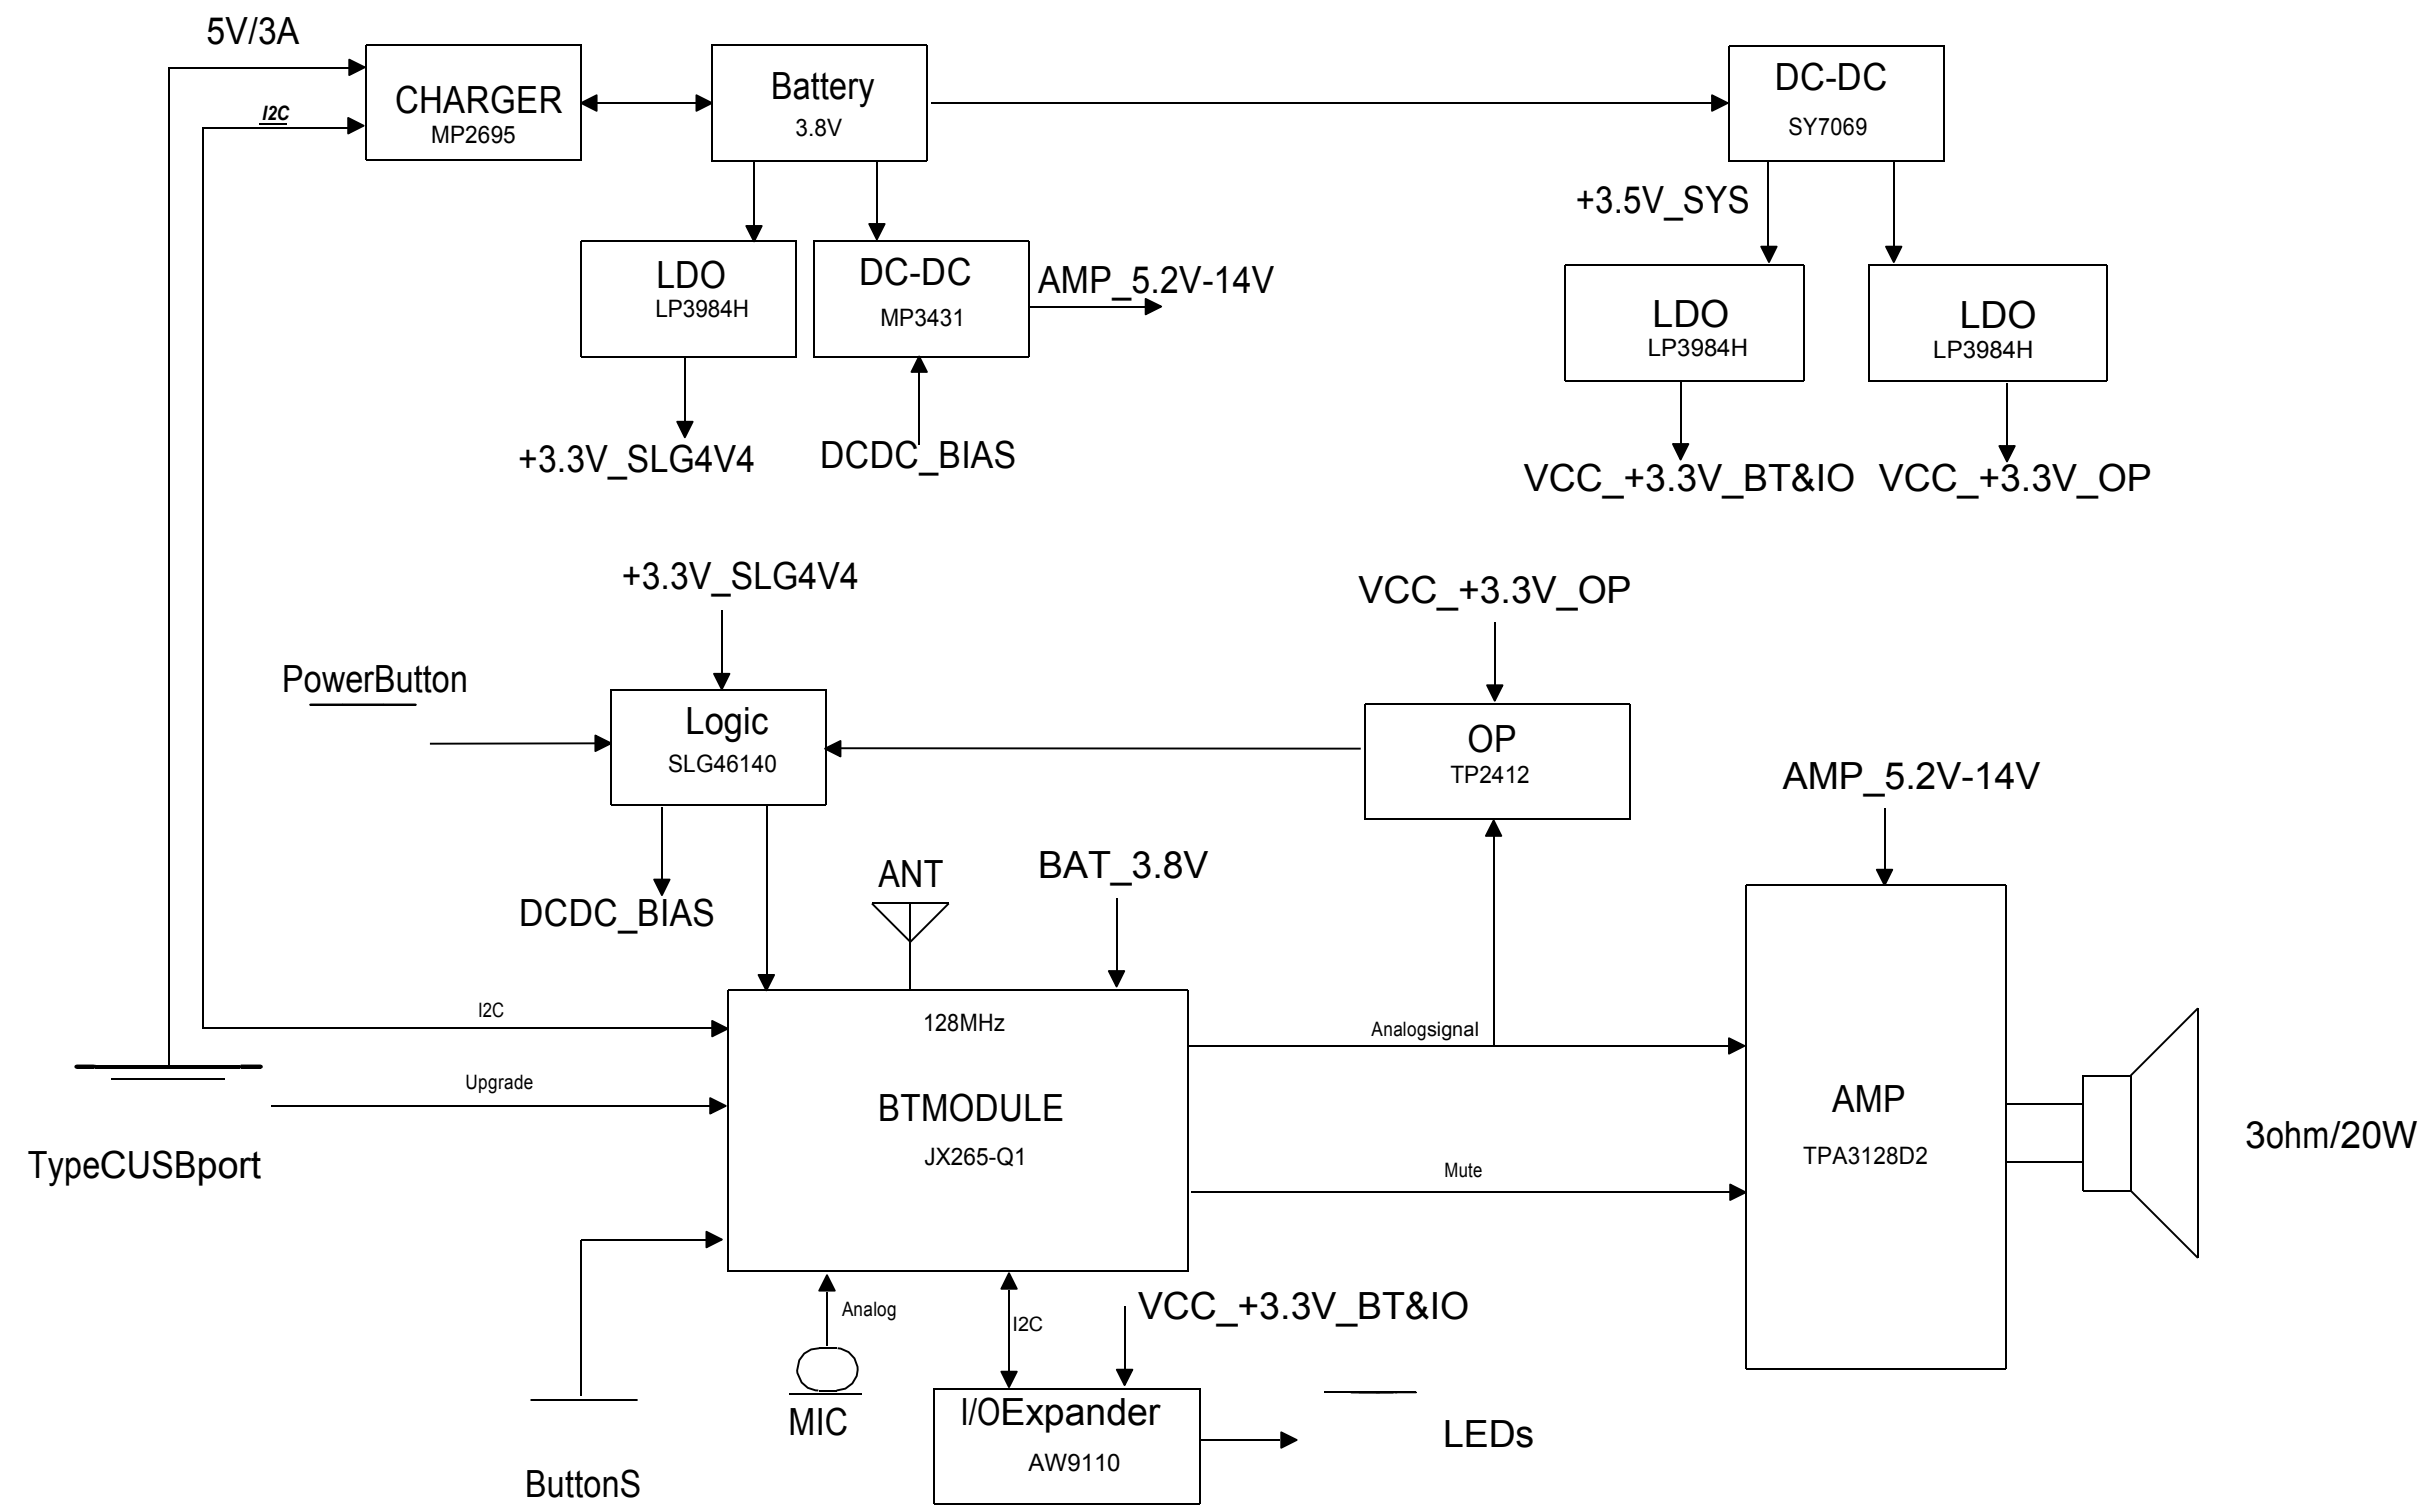



Flip5 Wiring Diagram

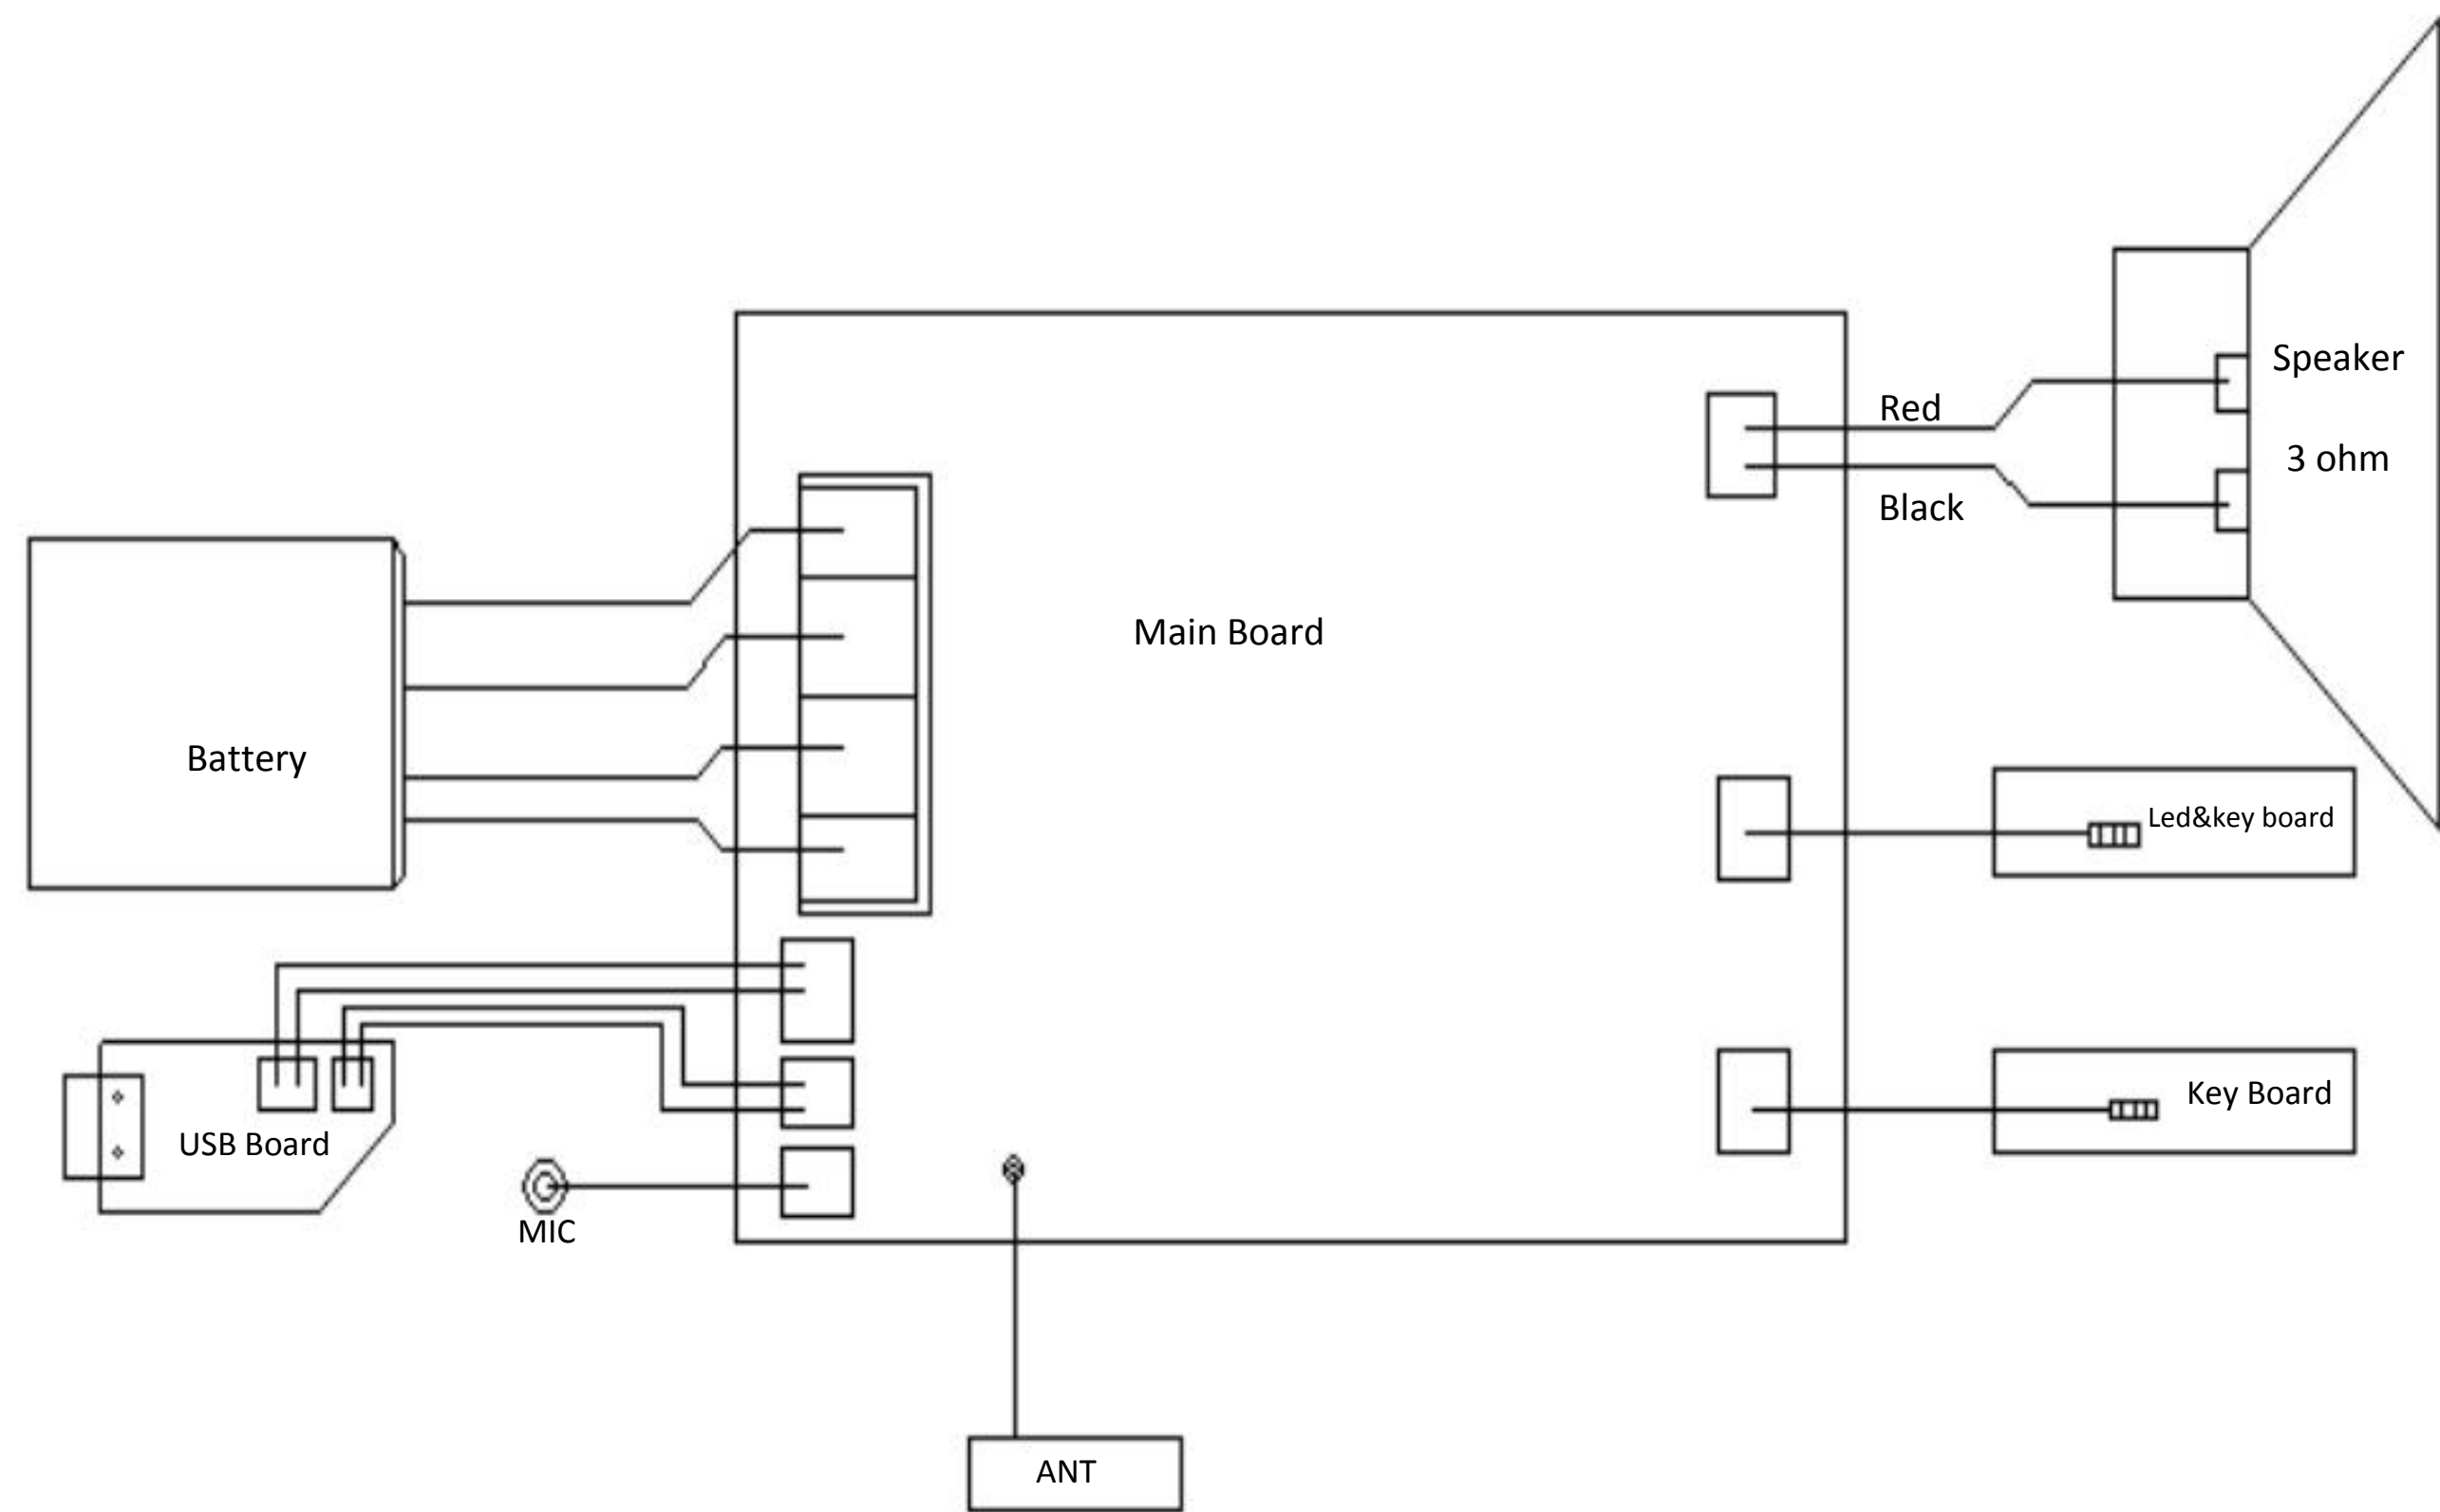


Main Board_BT & IO

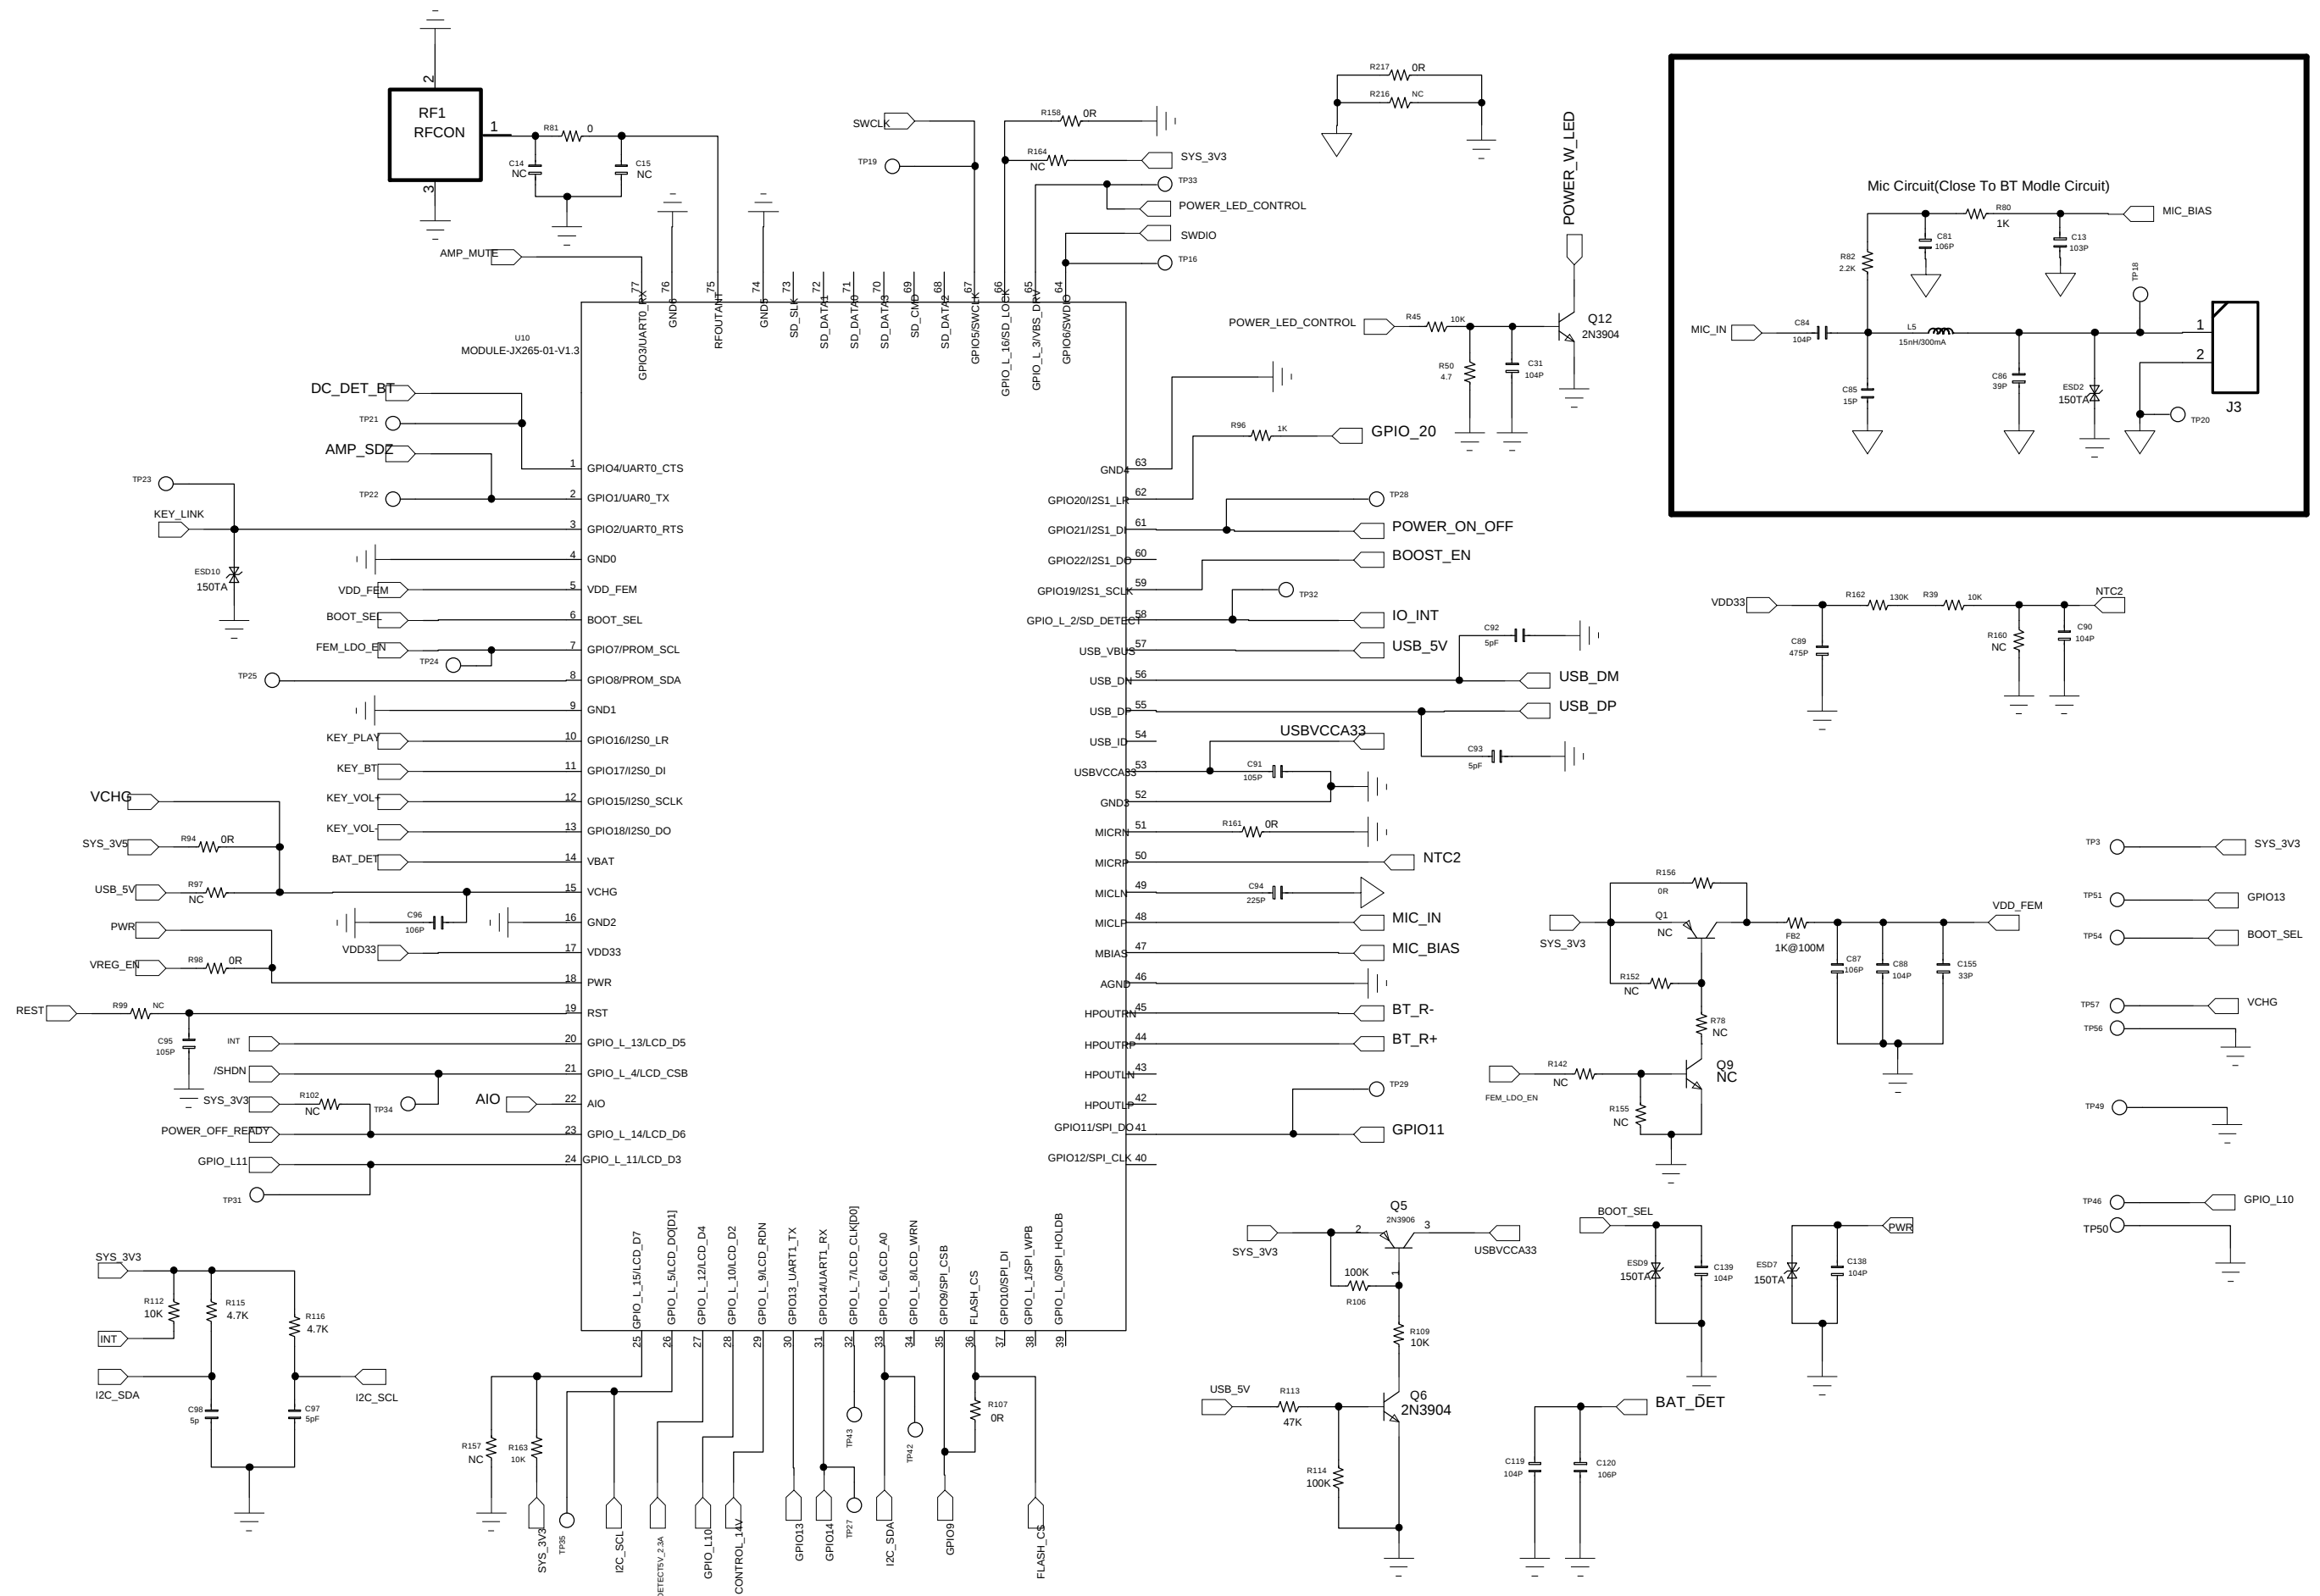


Main Board_Charge

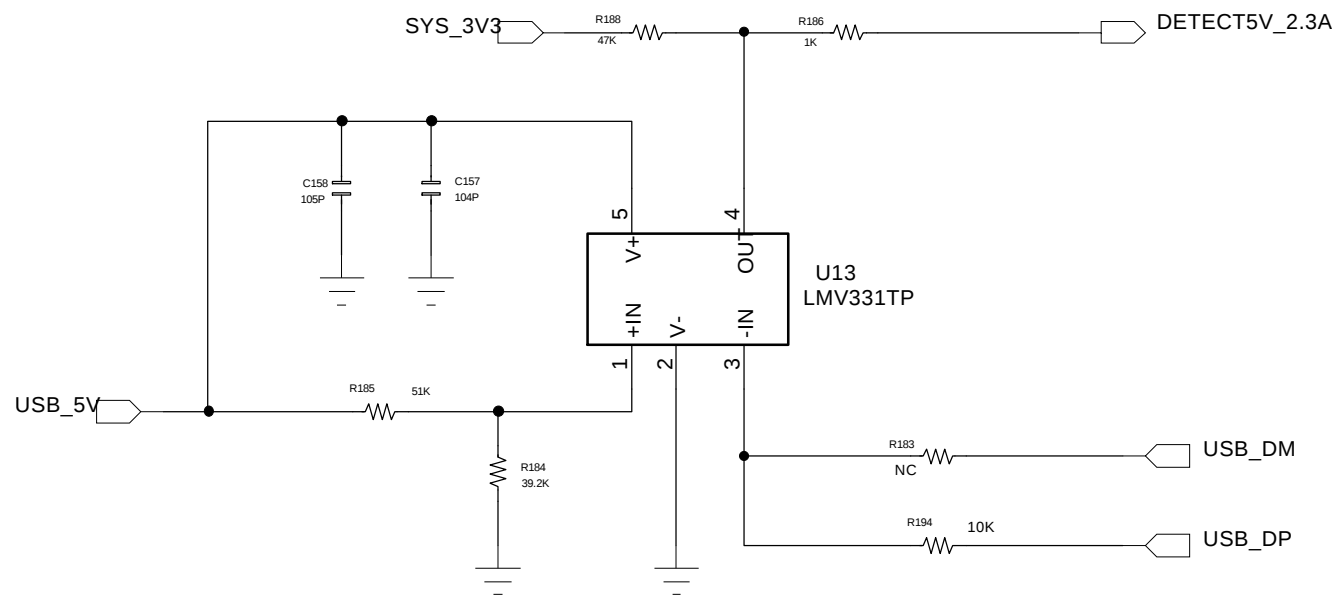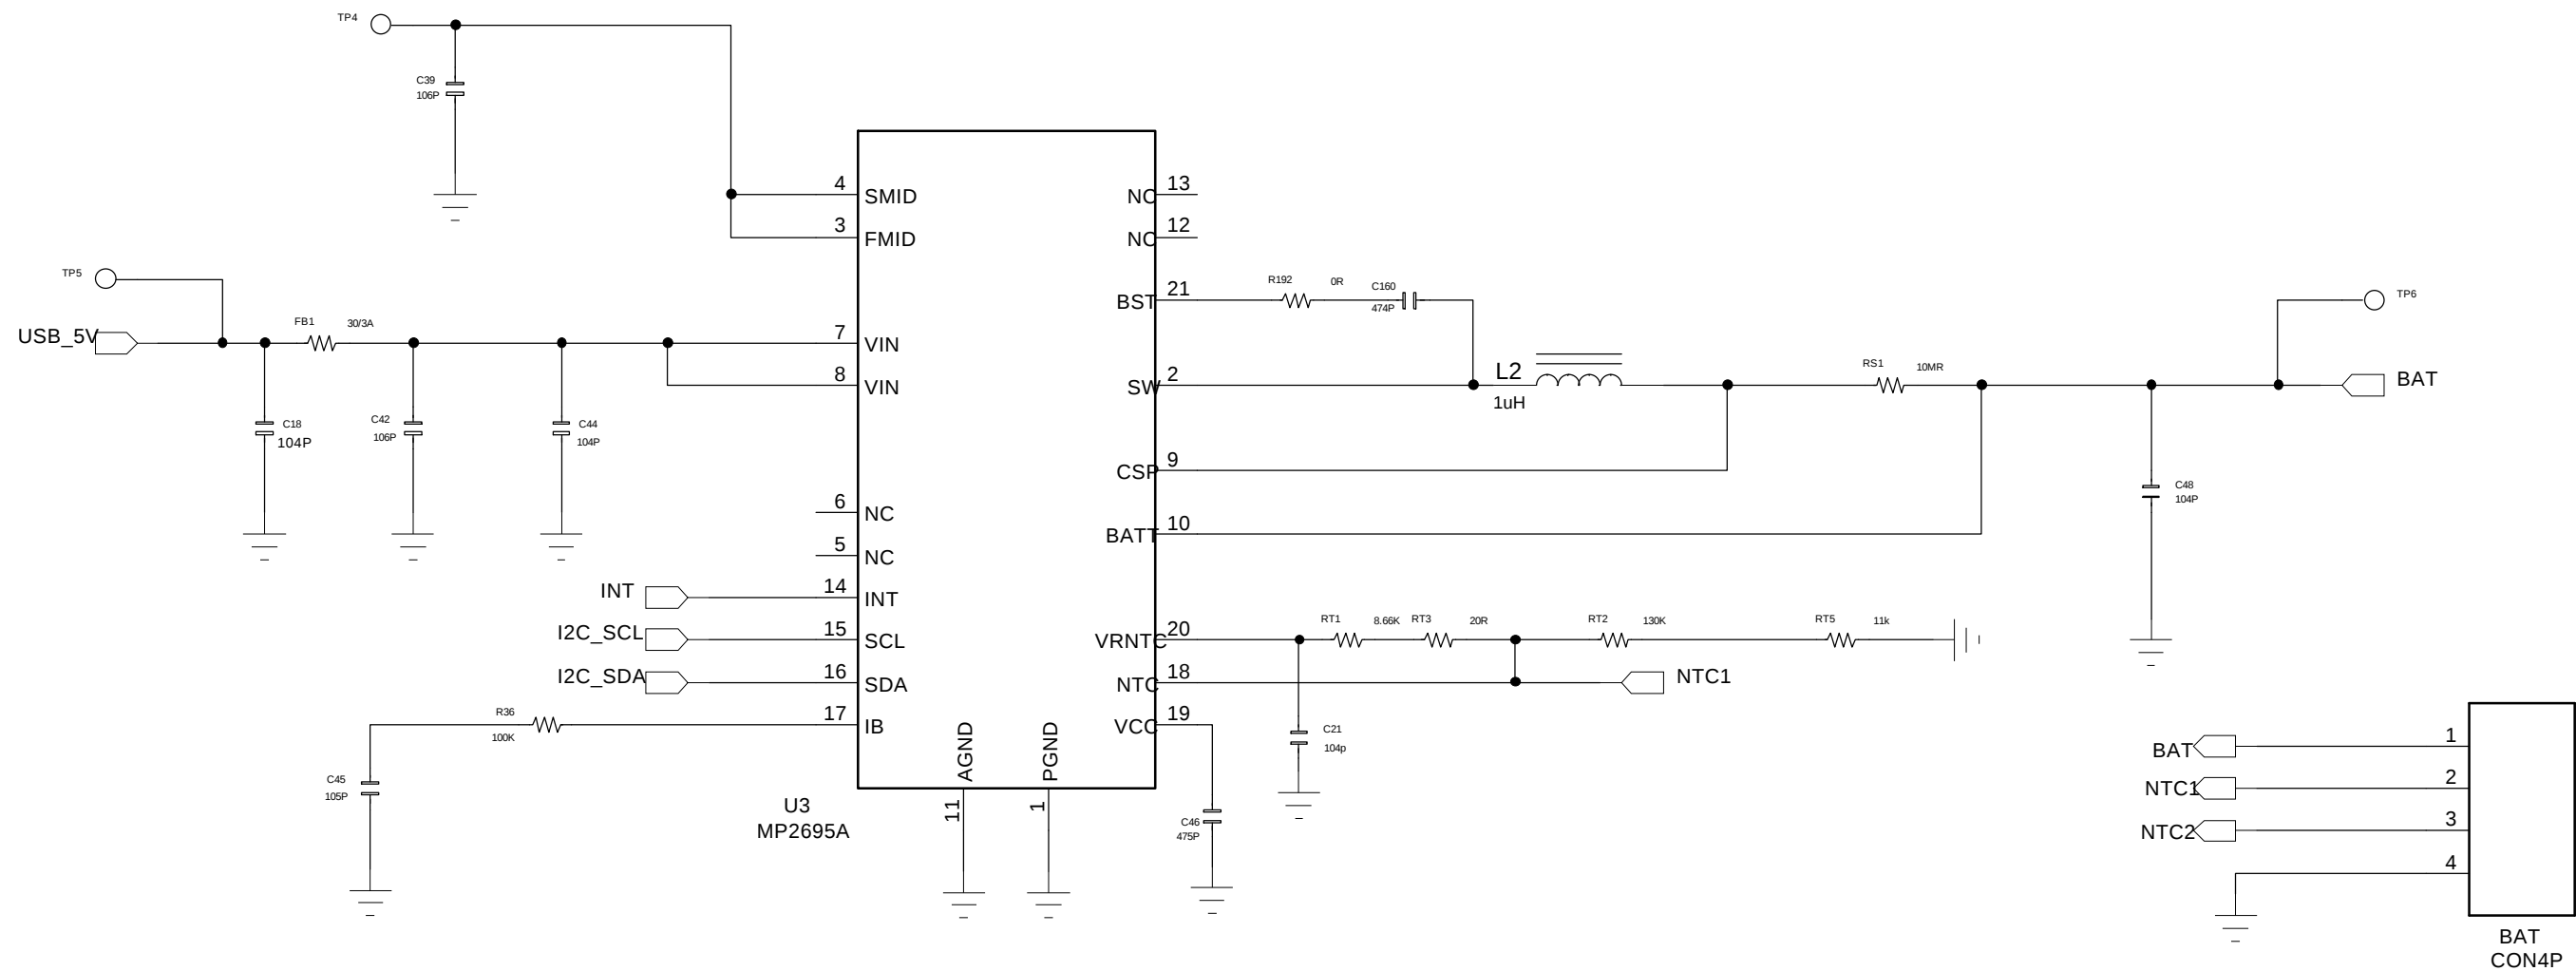



Main Board _ Power

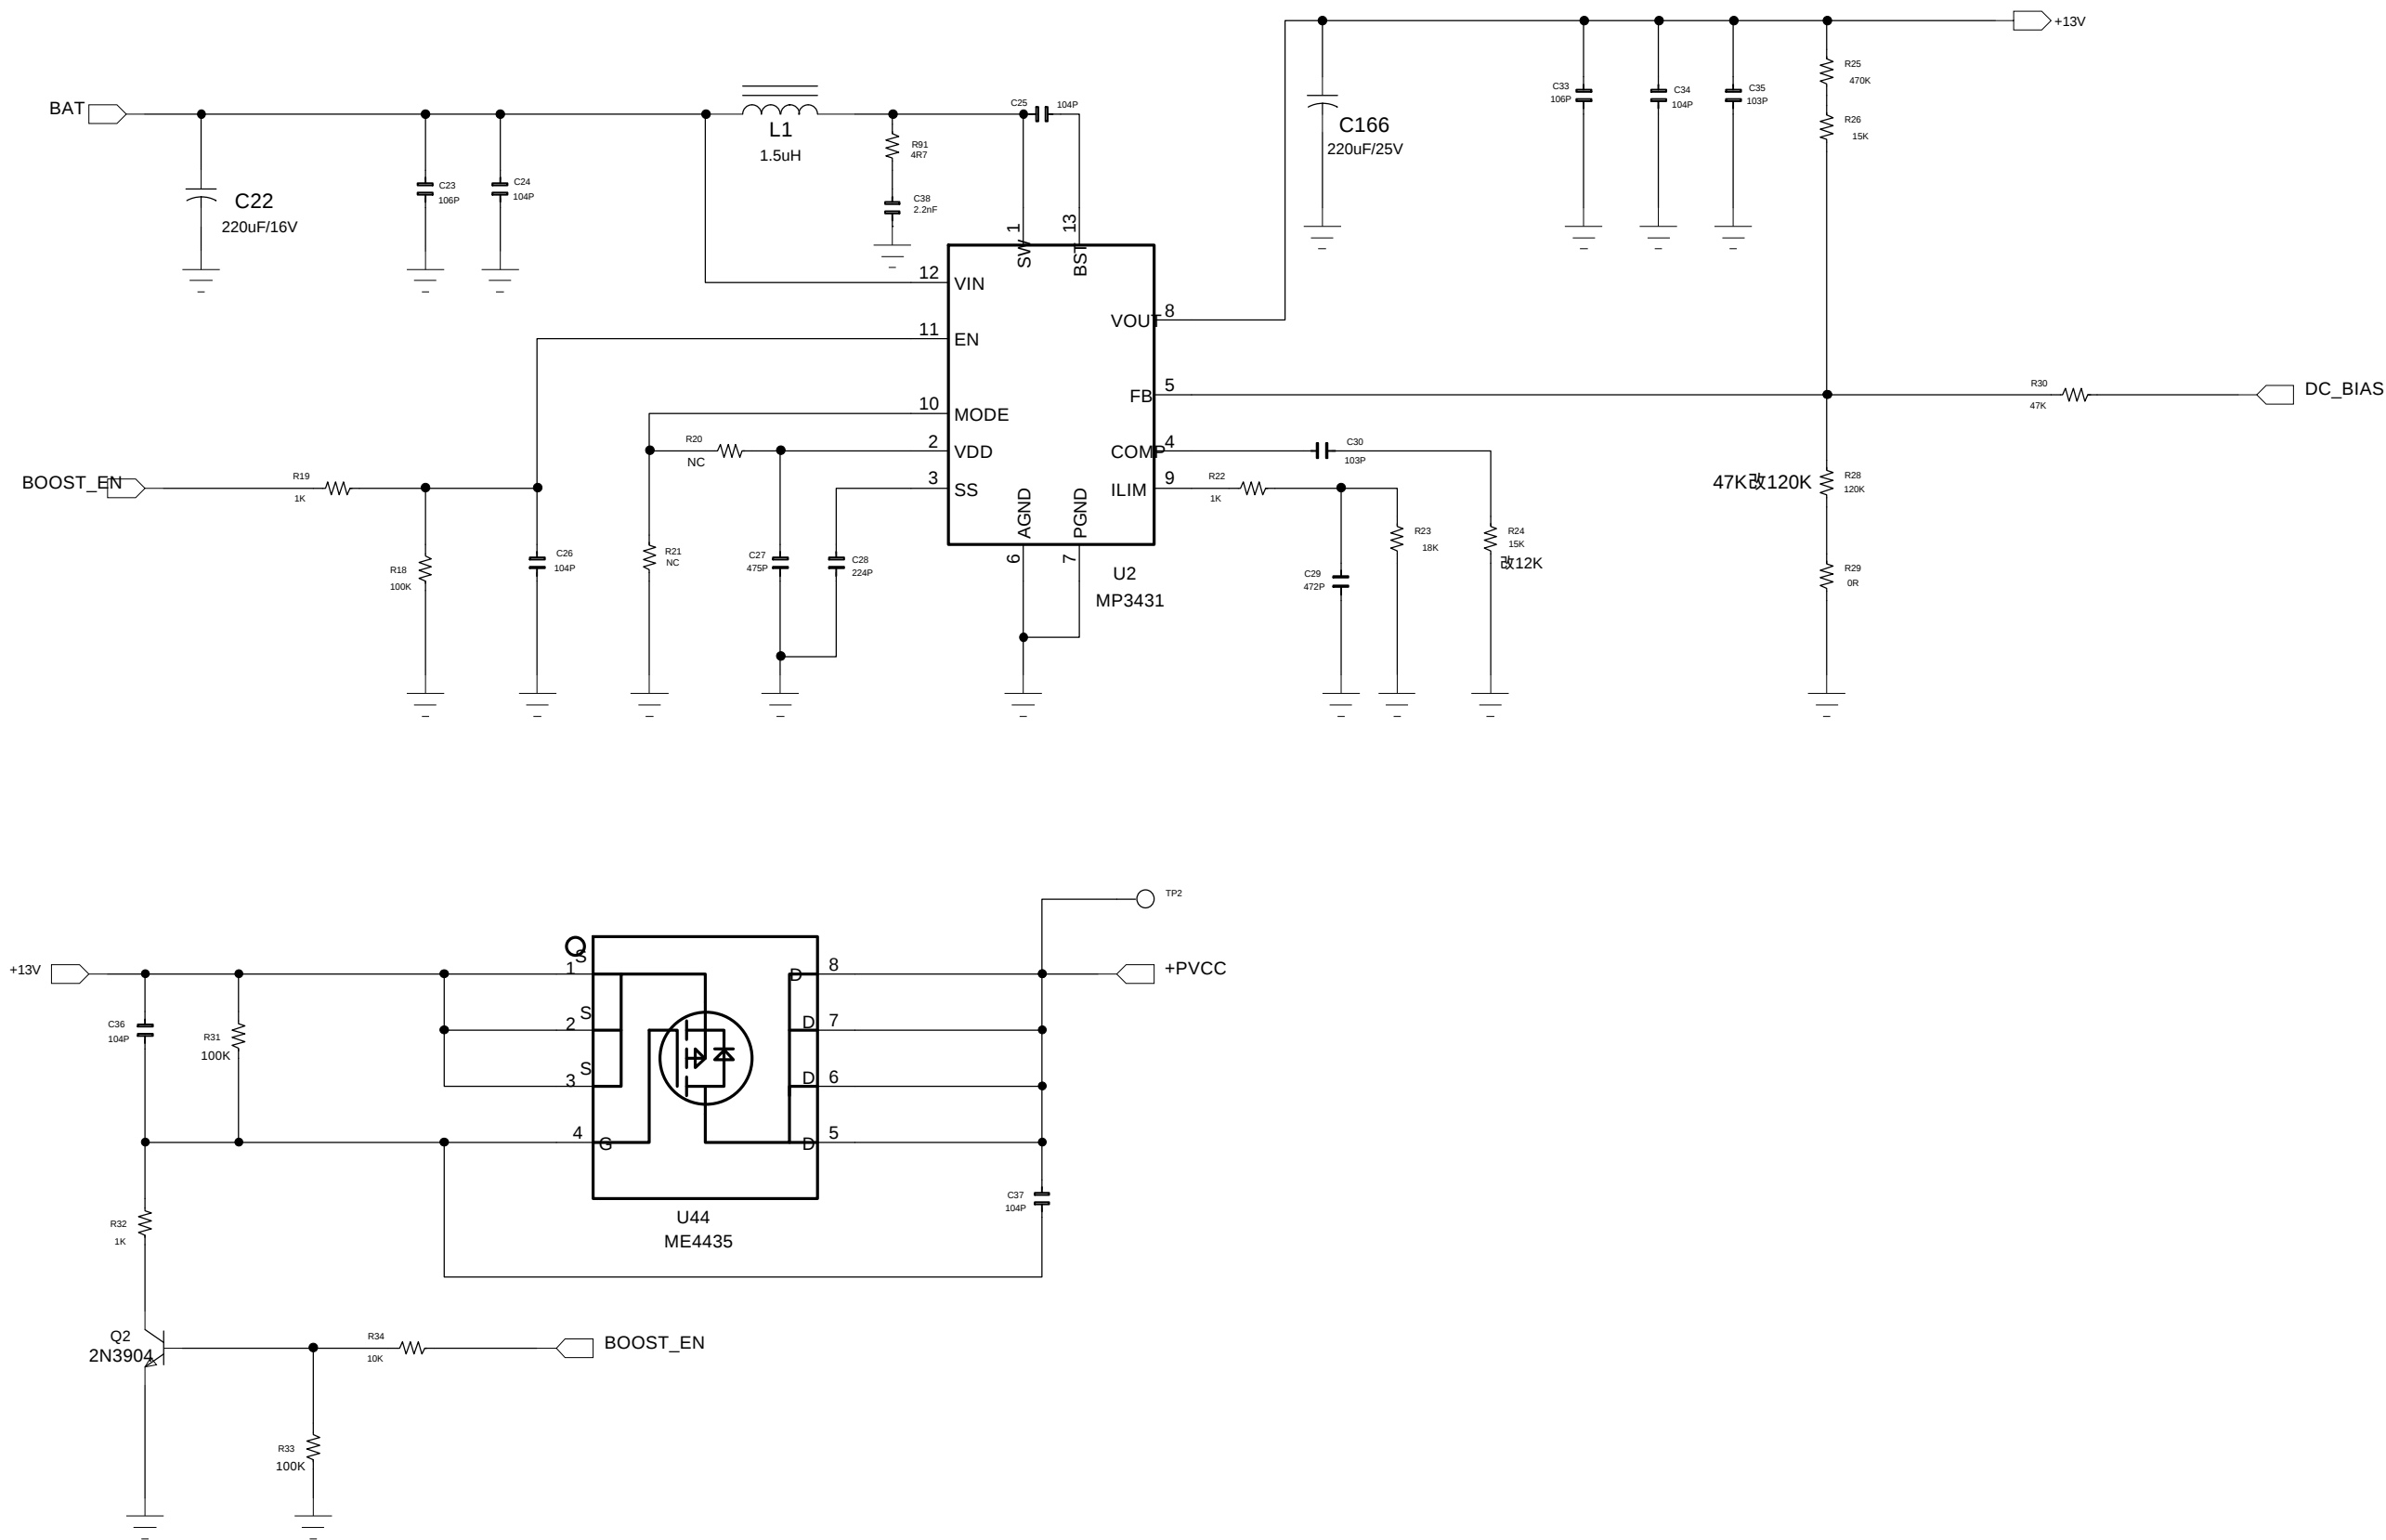


Main Board _ Ampilifier

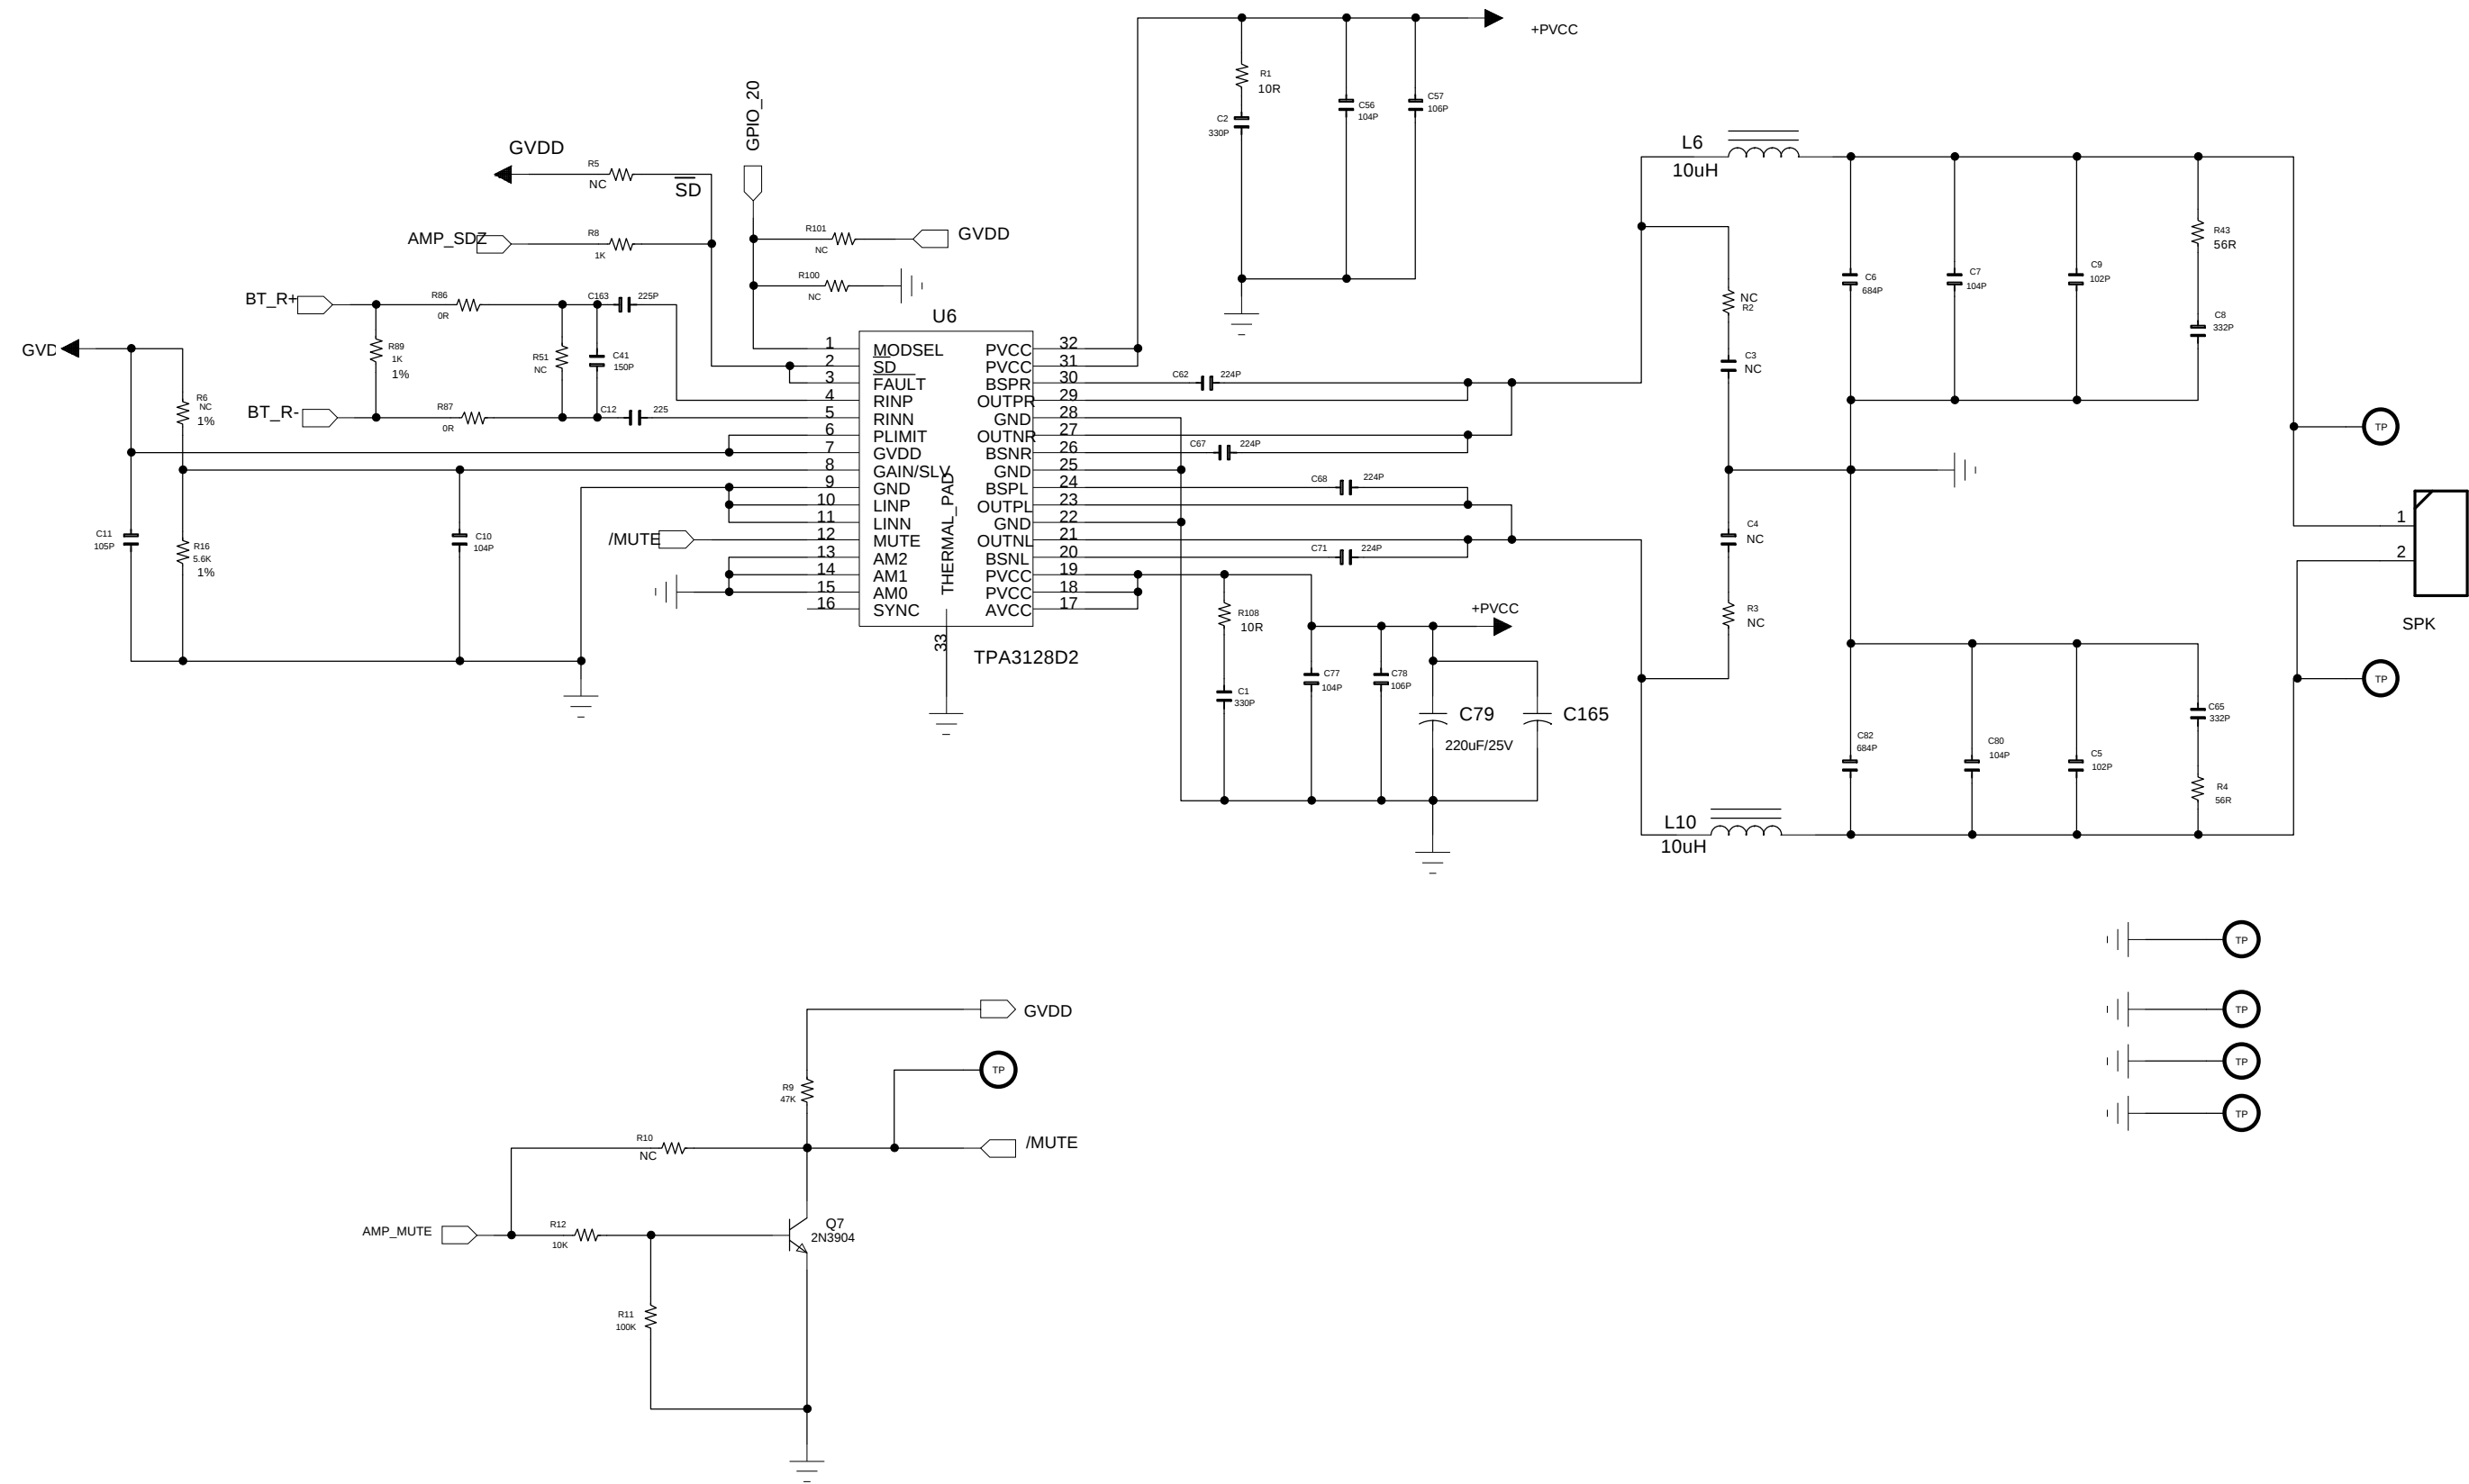


Main Board _ IO

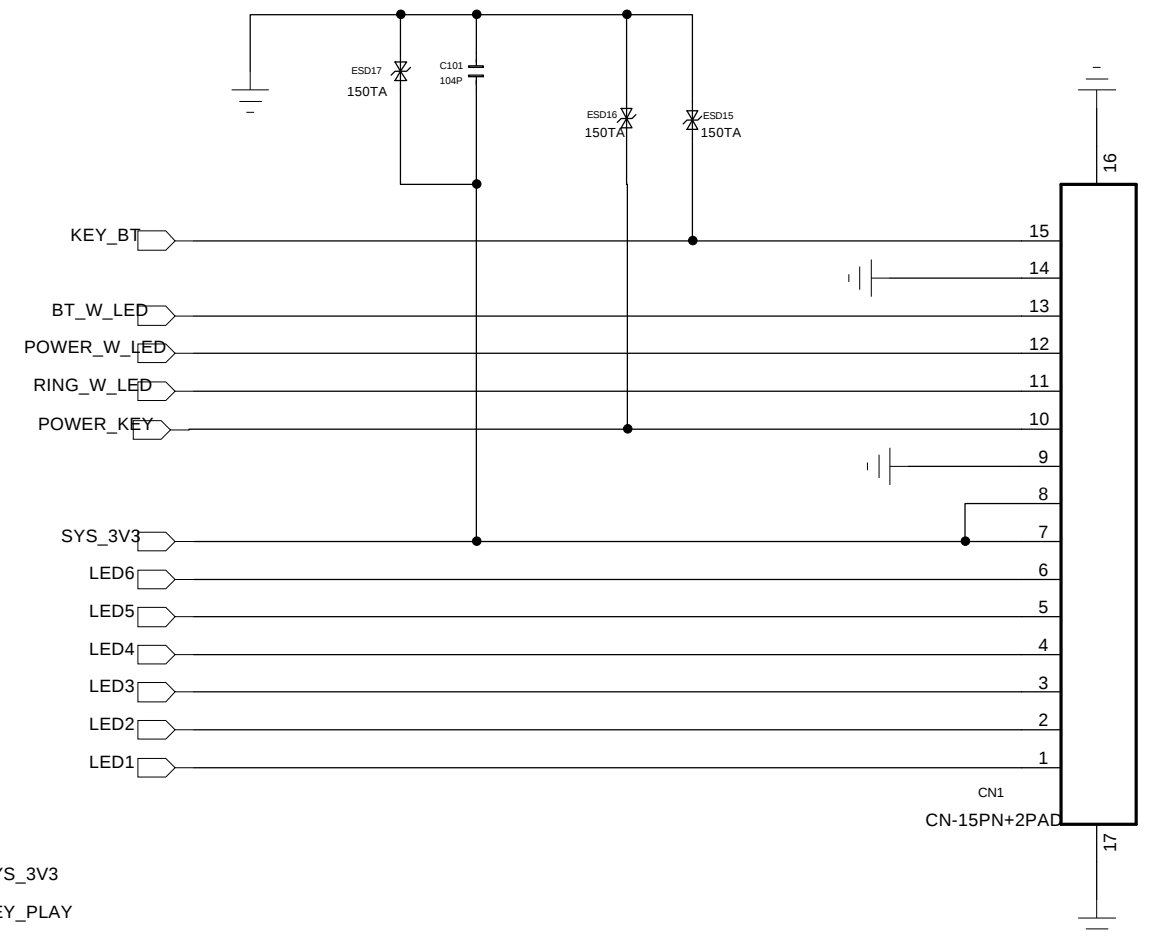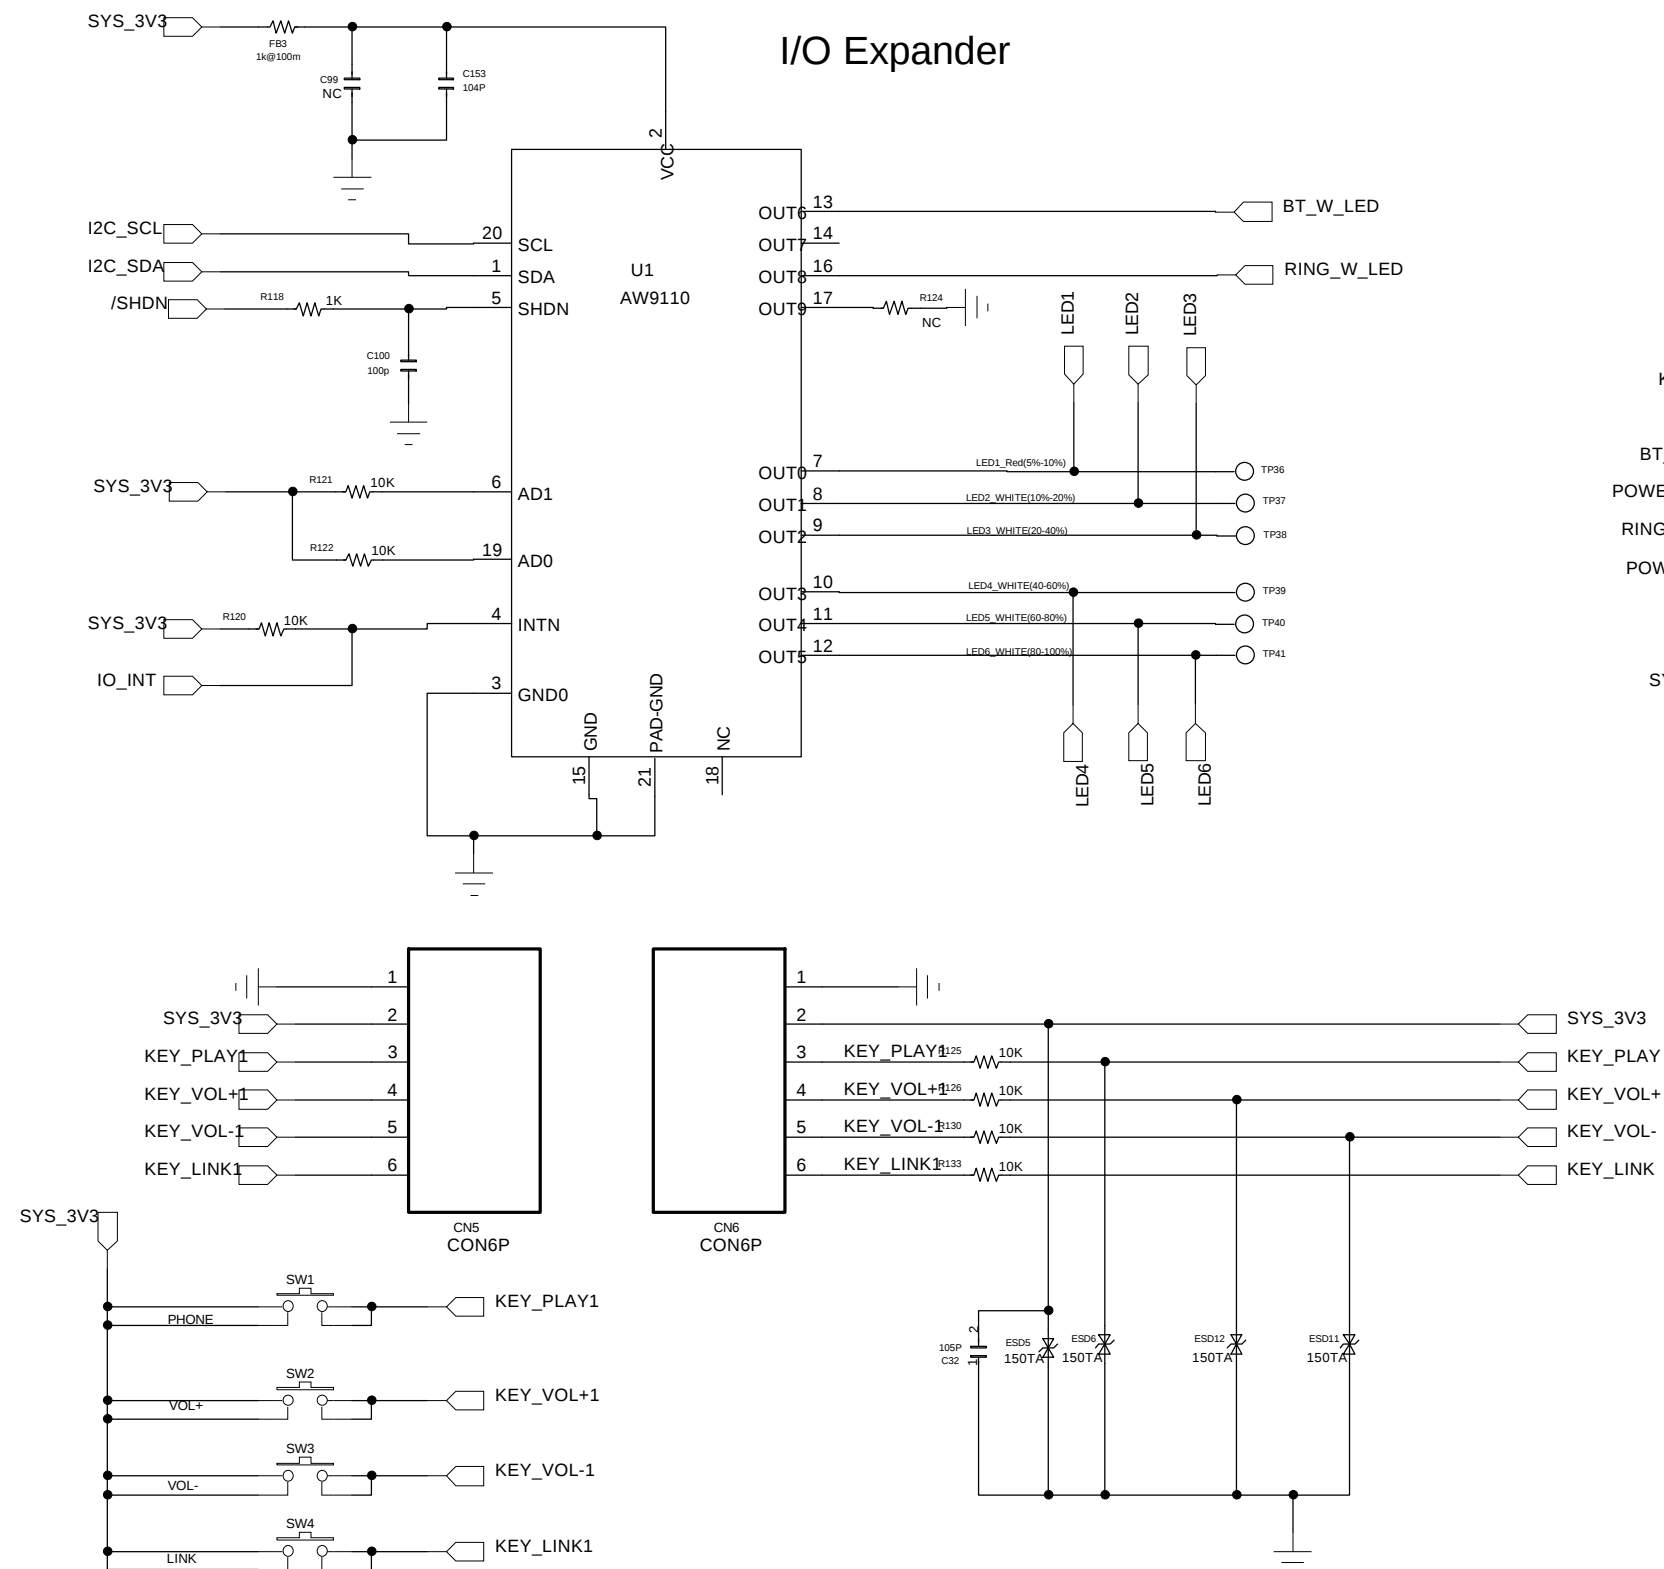


LED Board _ IO & KEY

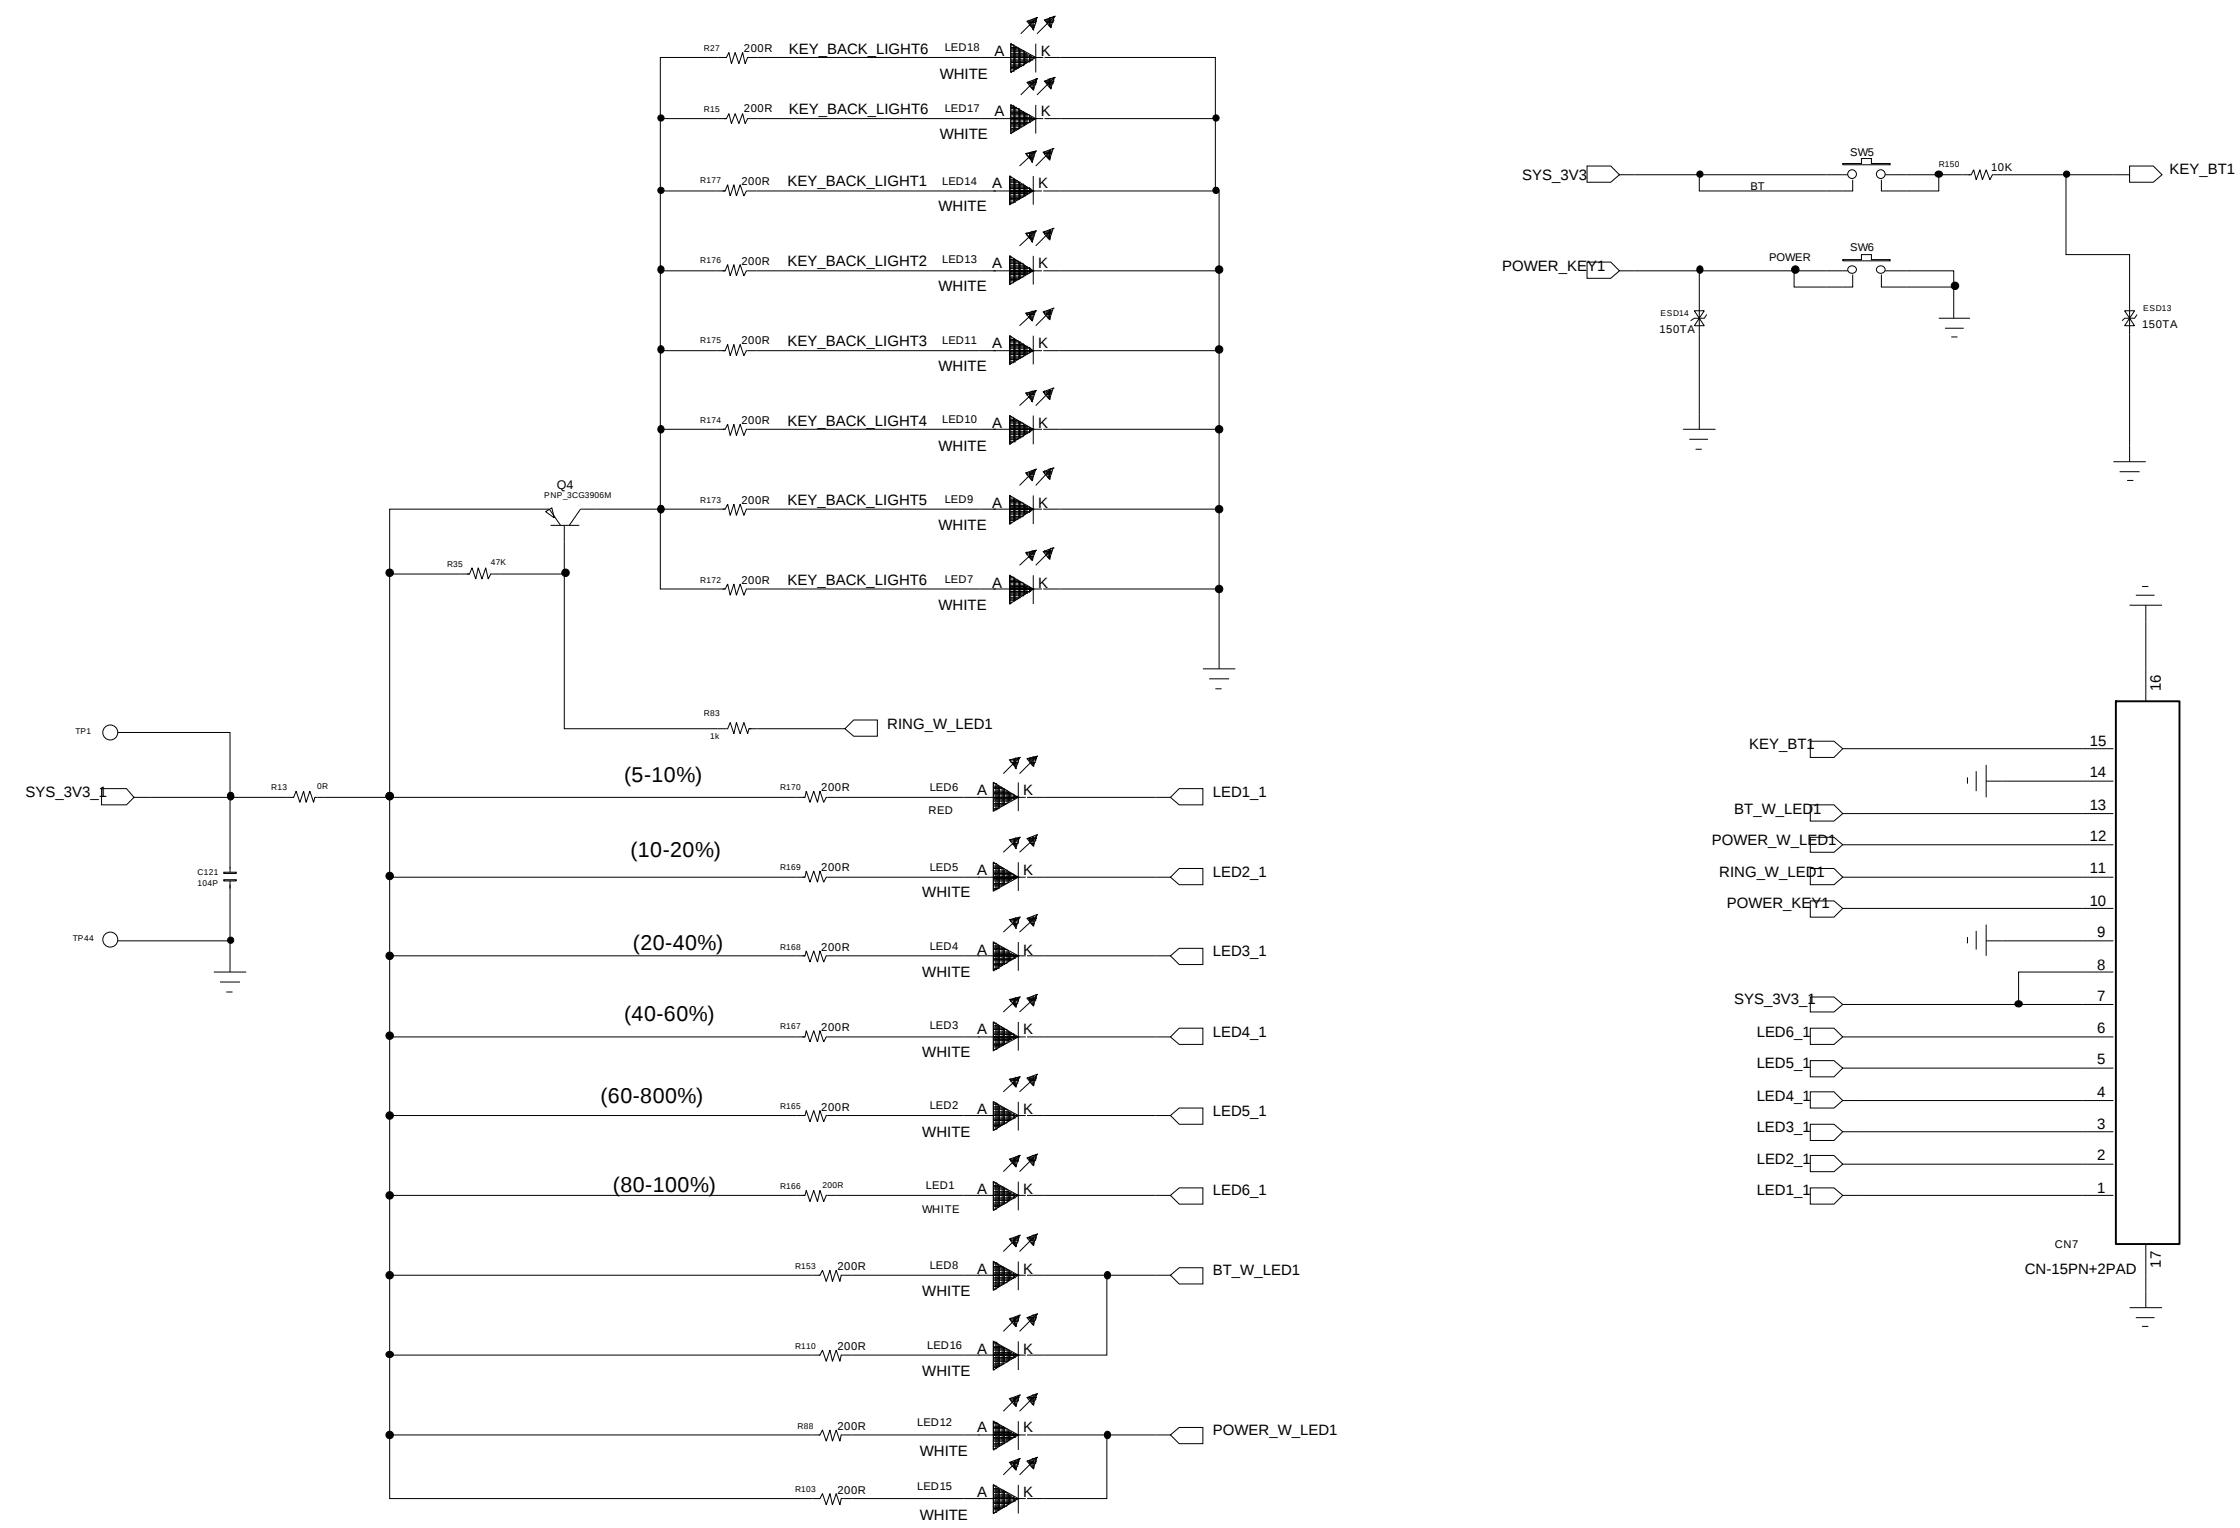



USB Board _ IO

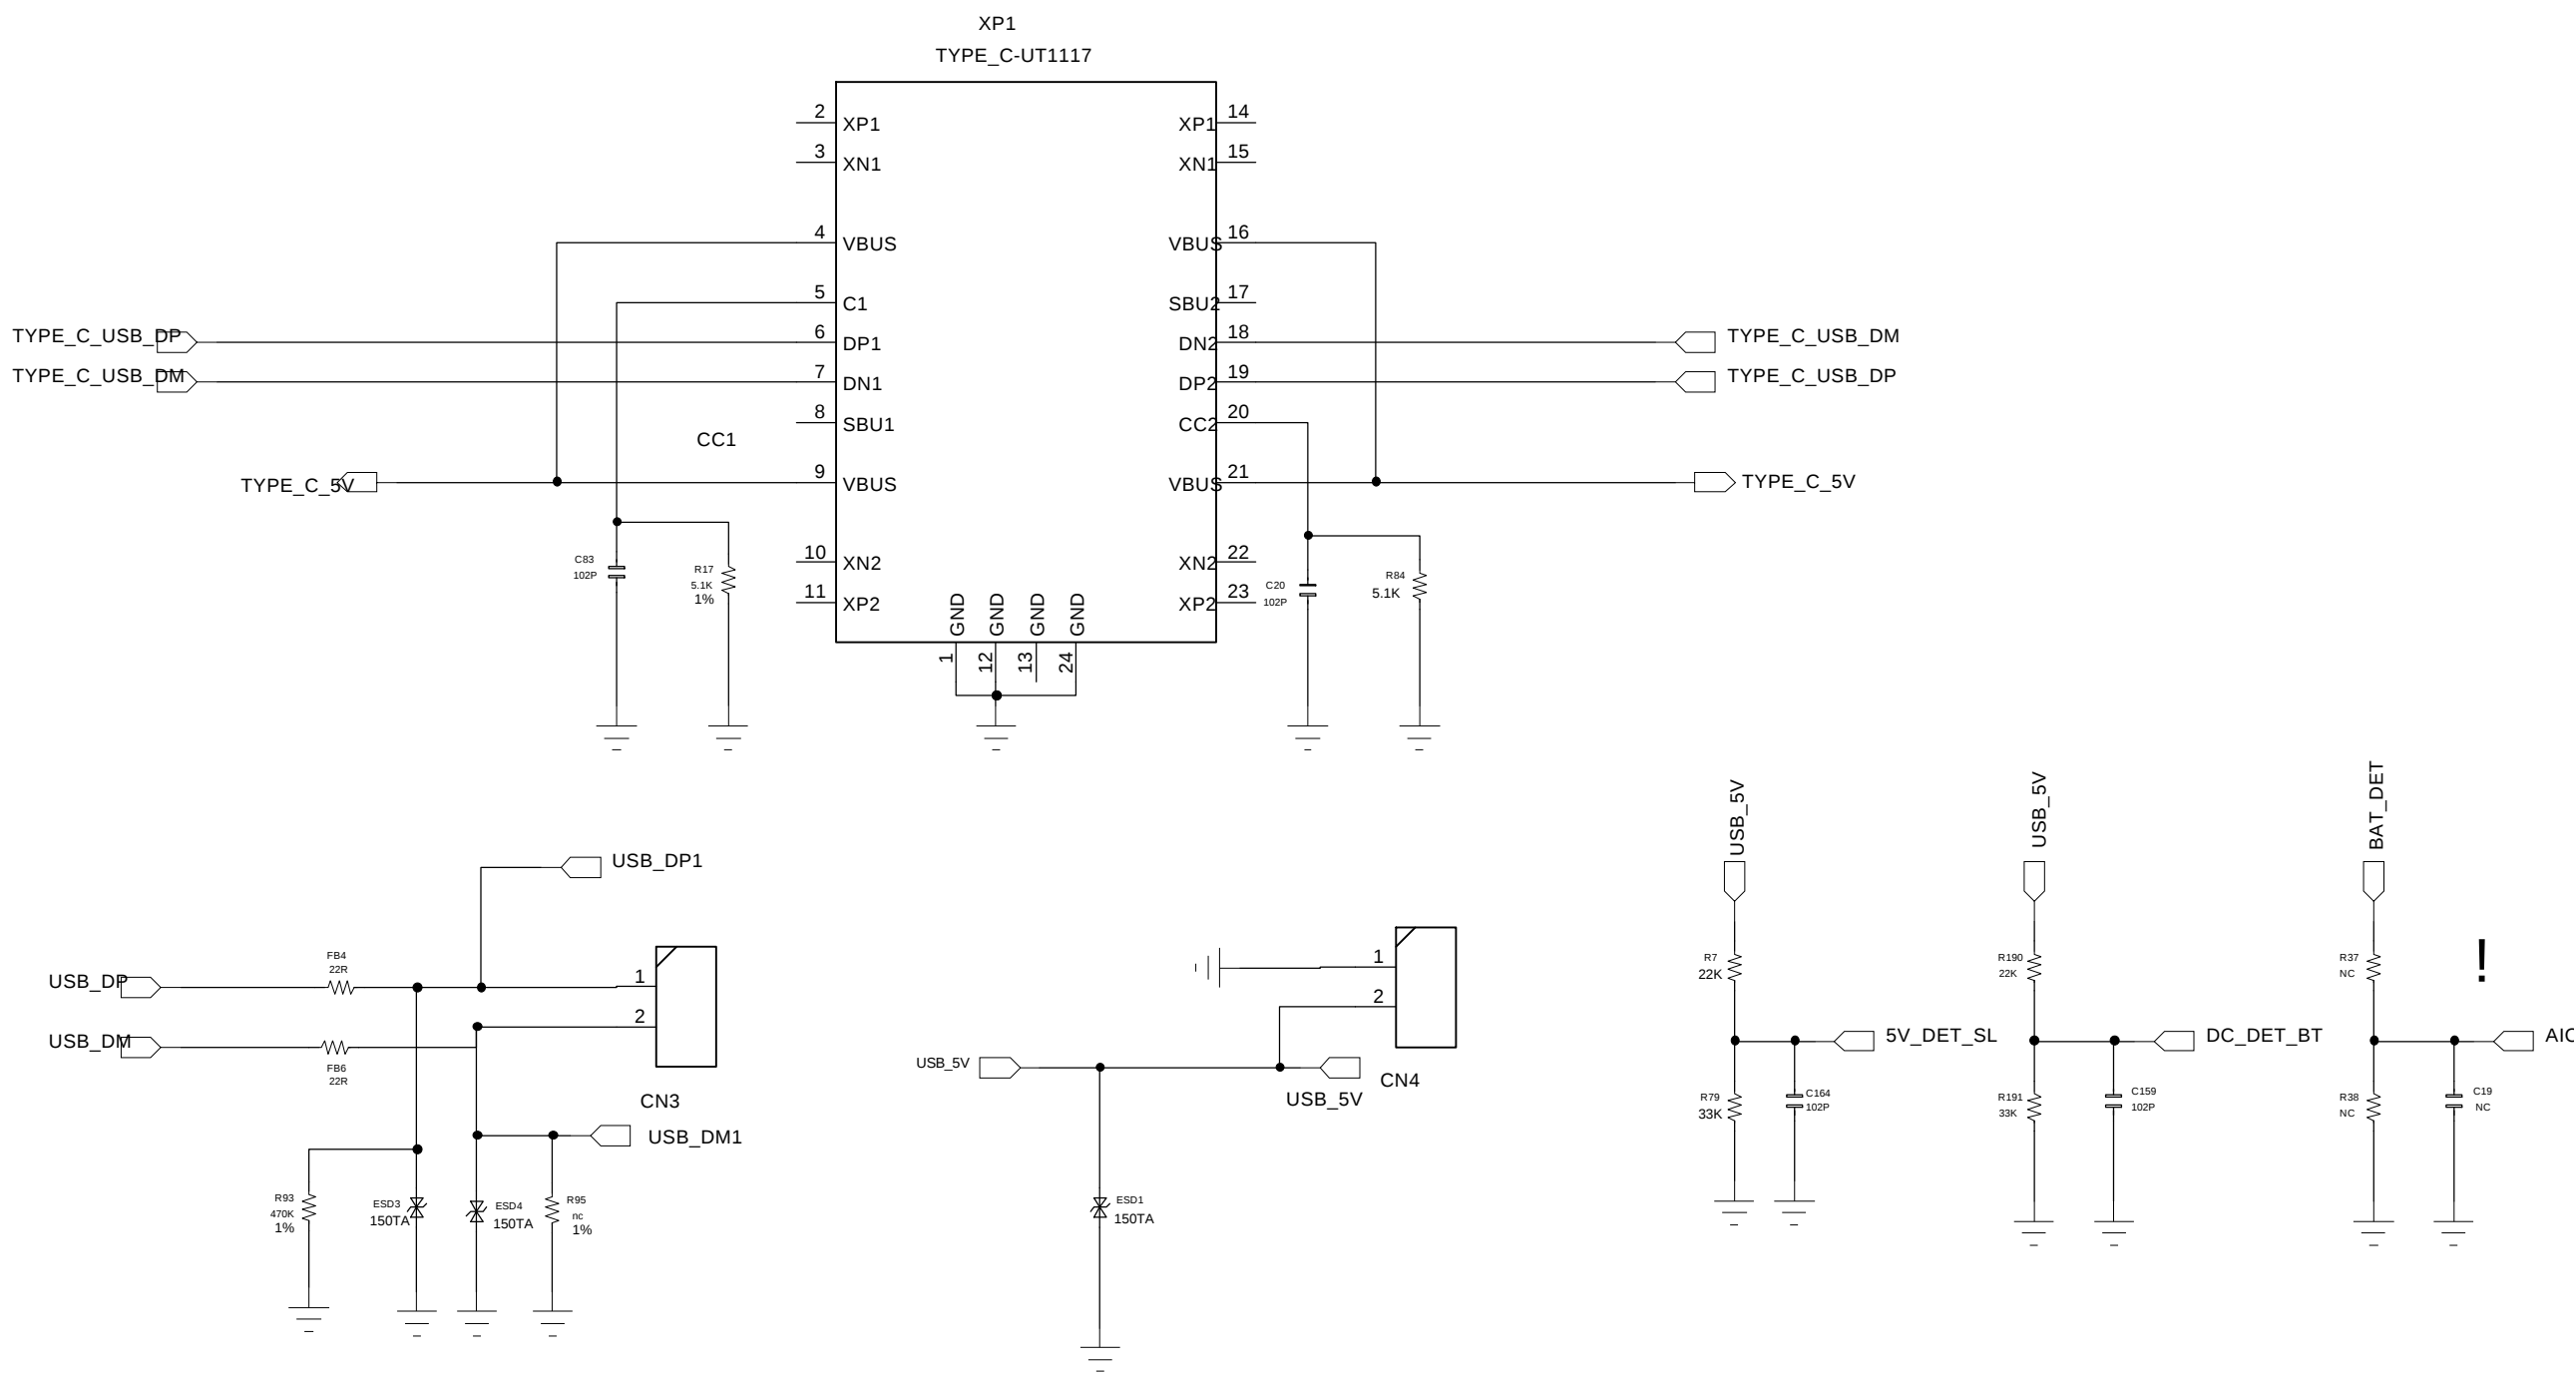


Main Board _ Dynamic

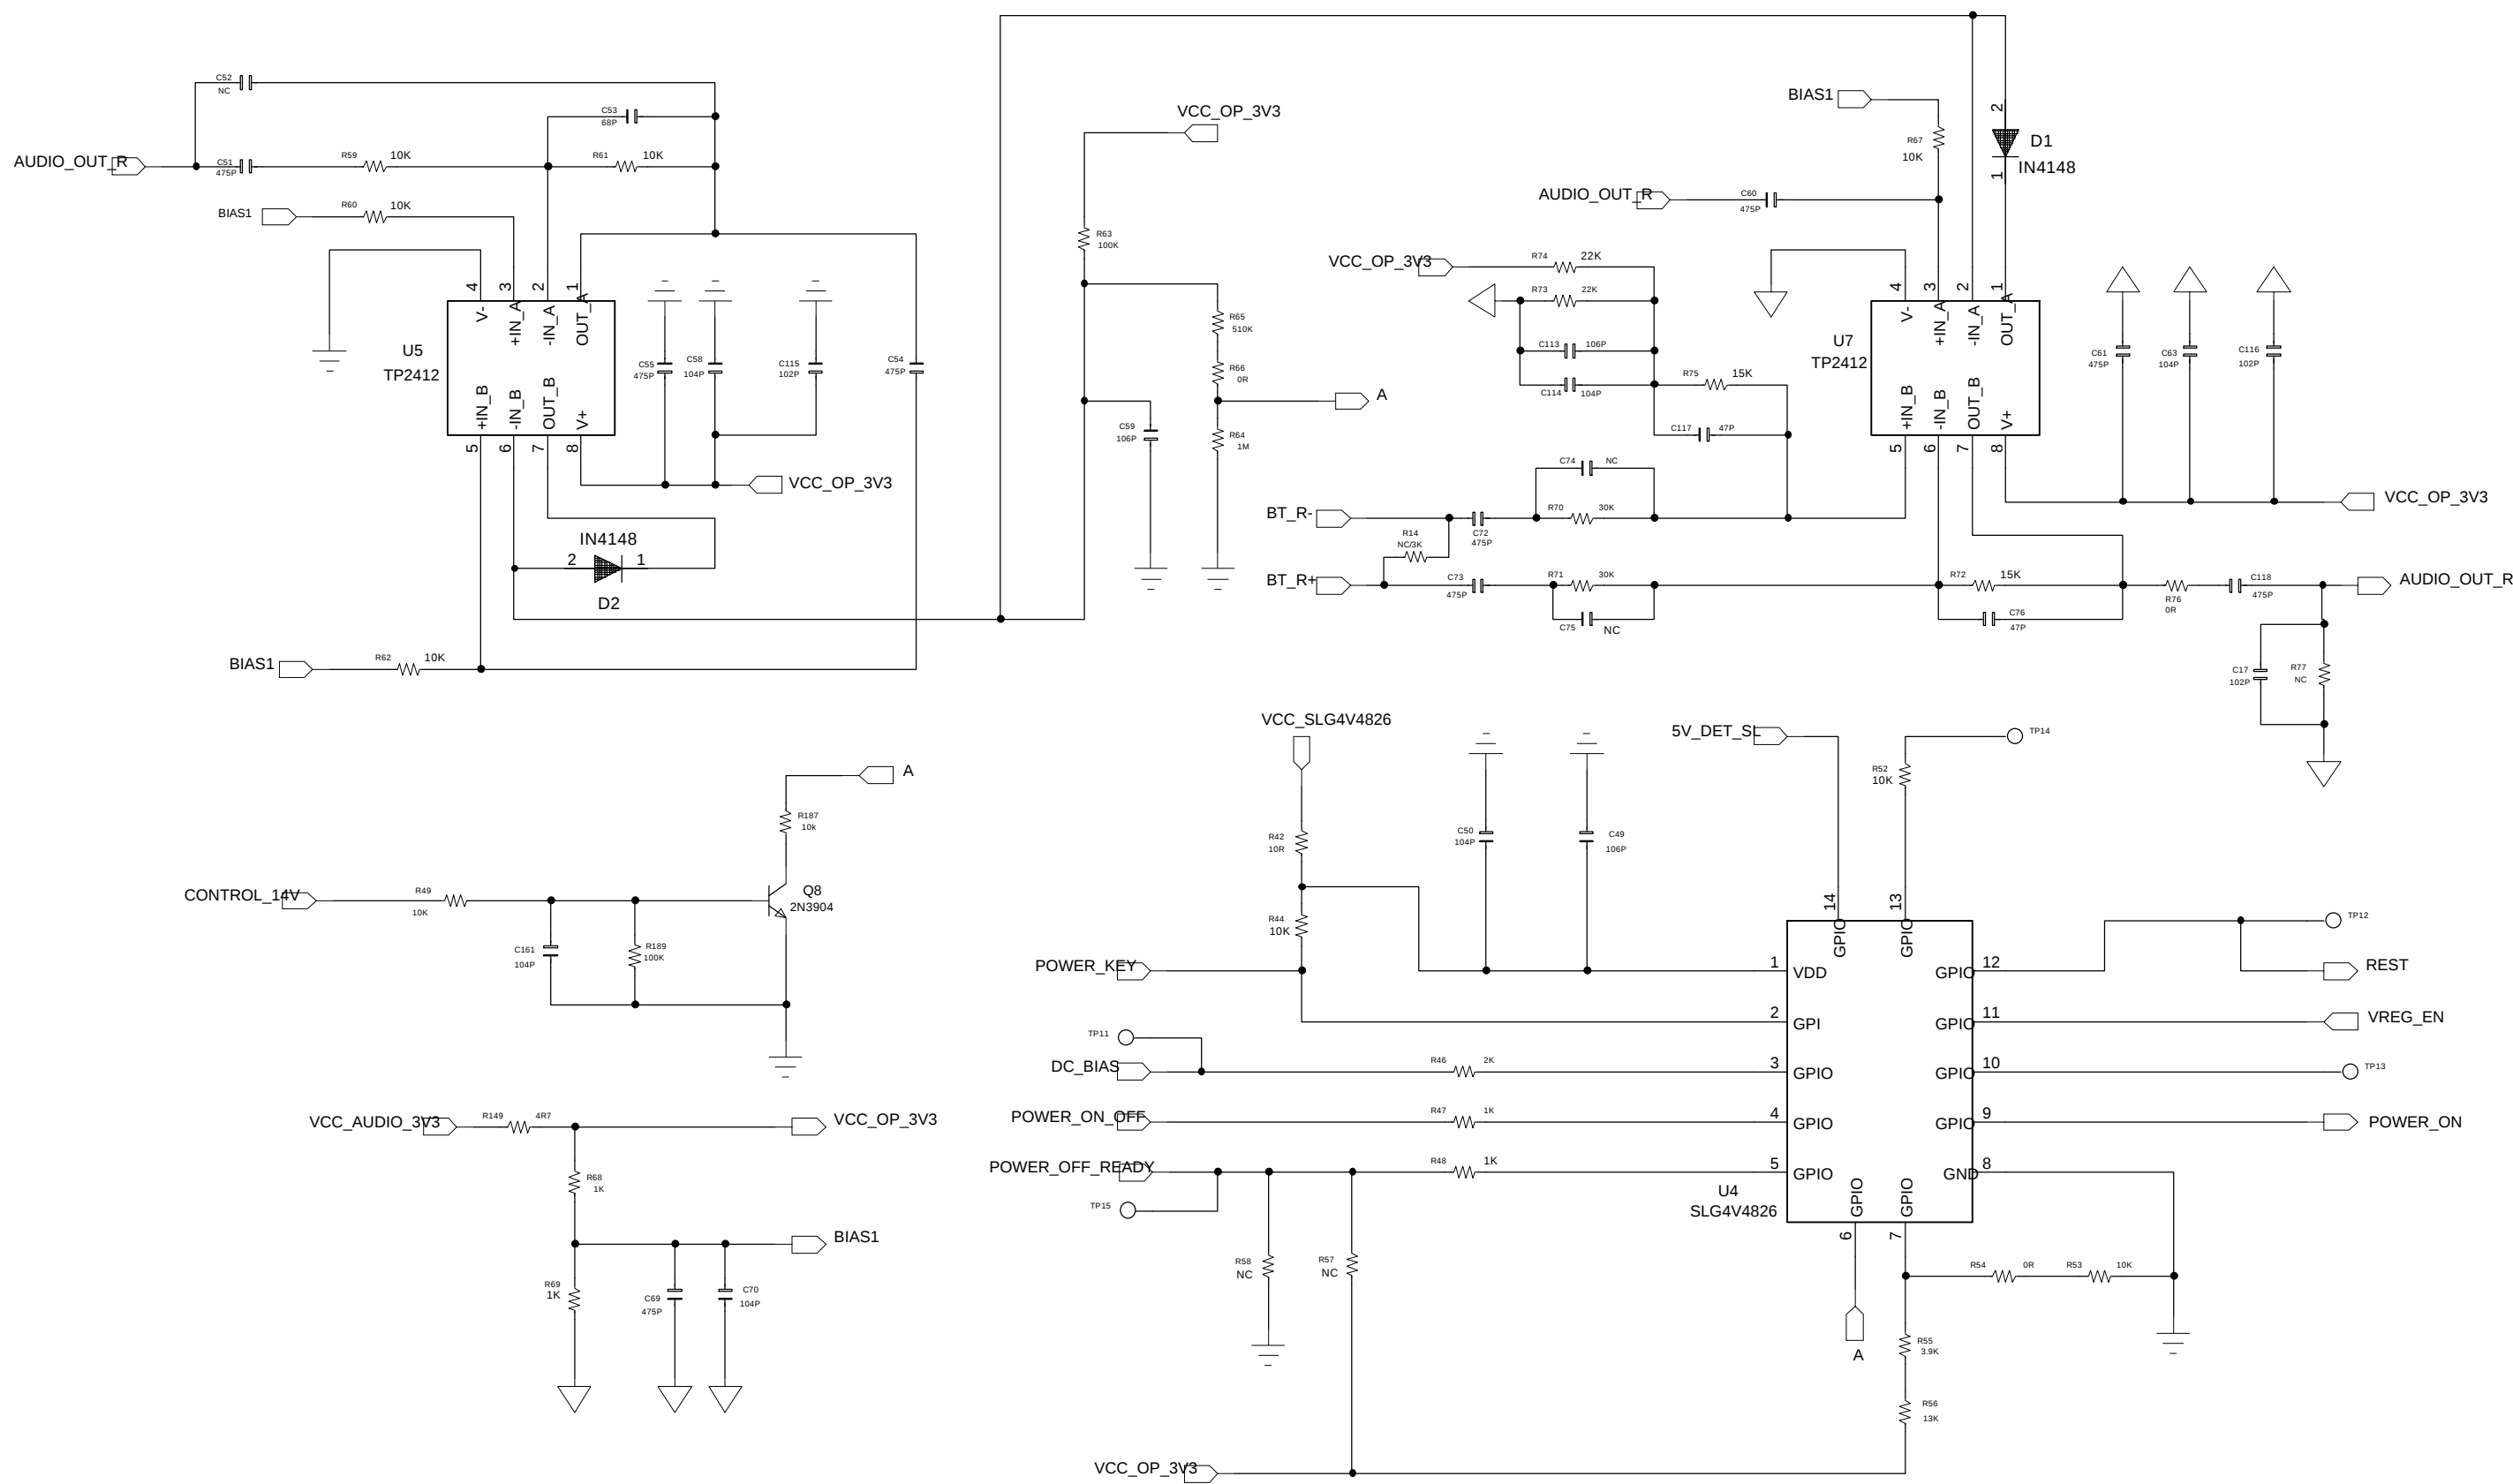


Main Board _ DC DC LDO

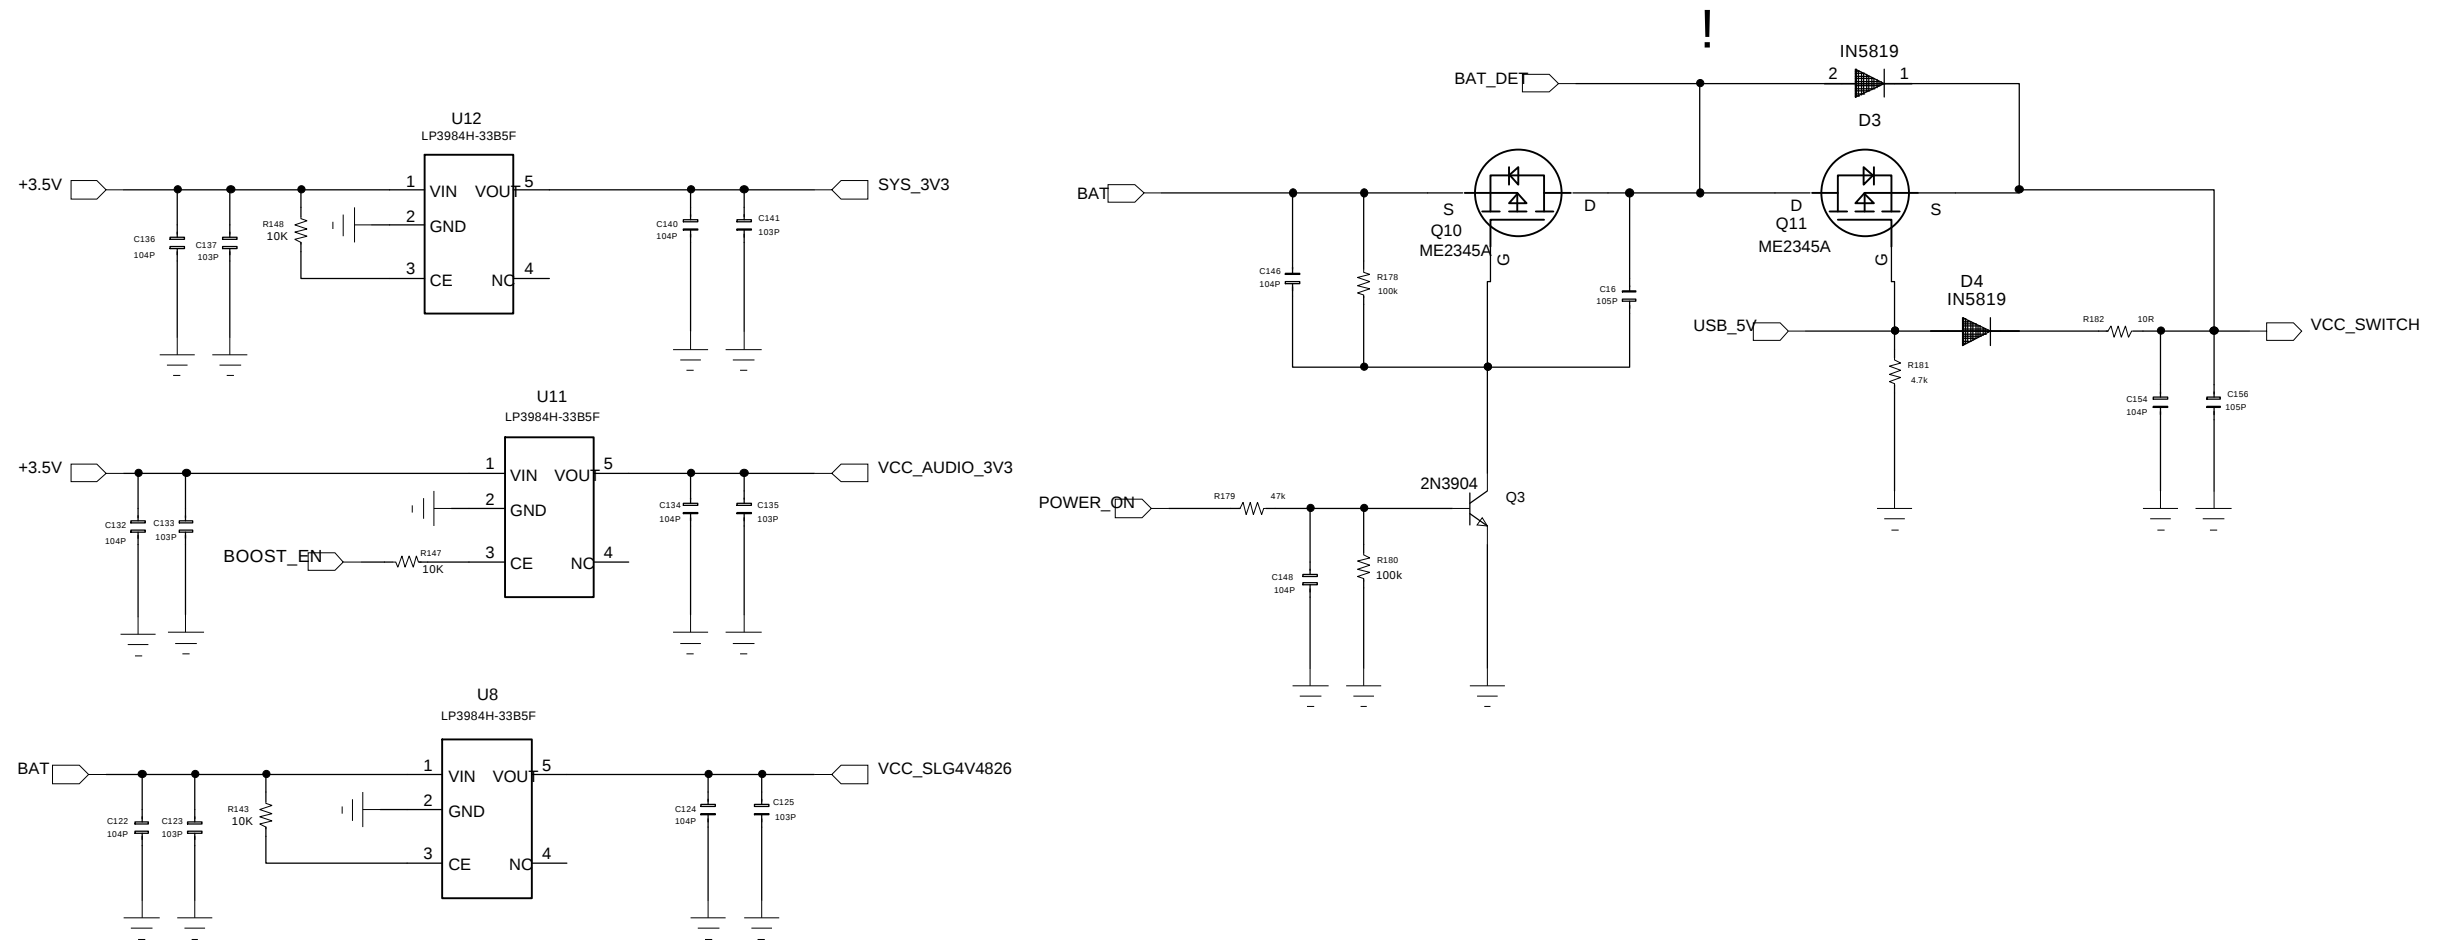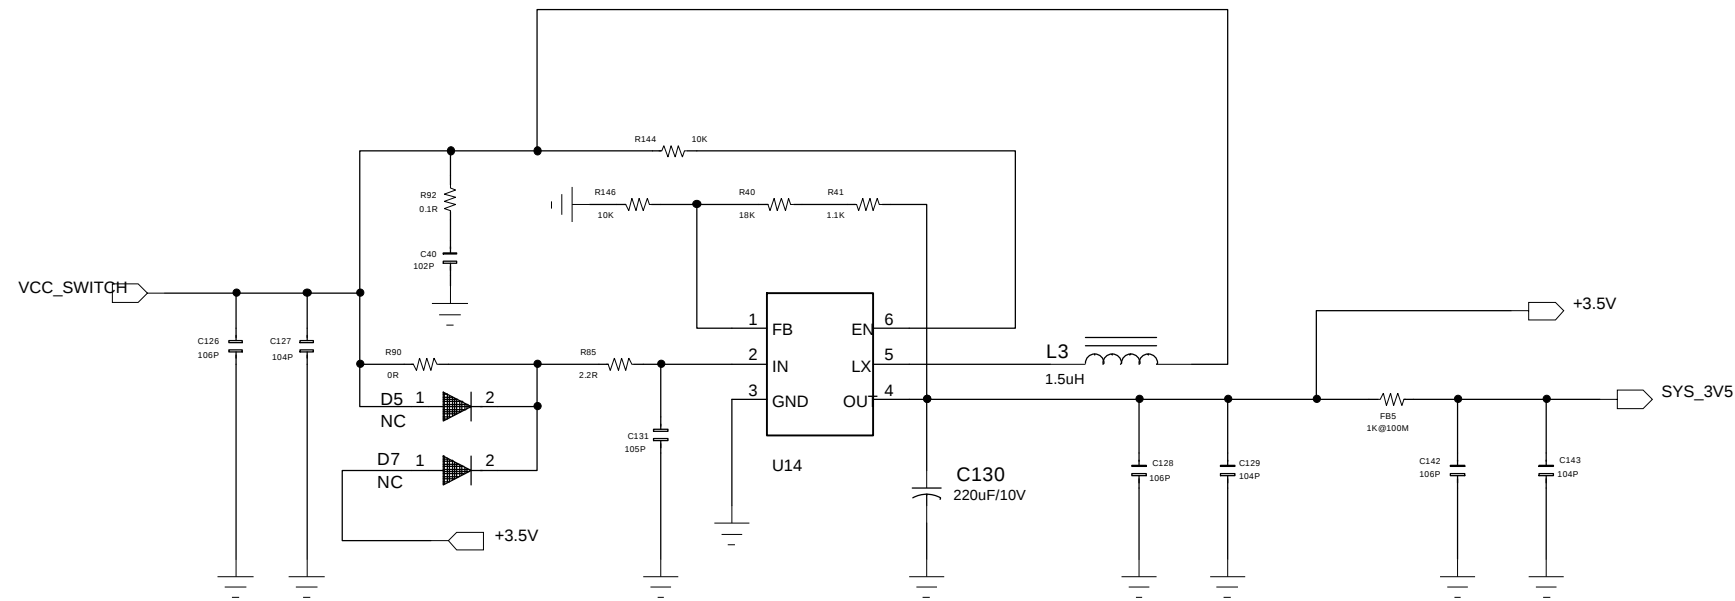

Main PCB_TOP LAYOUT

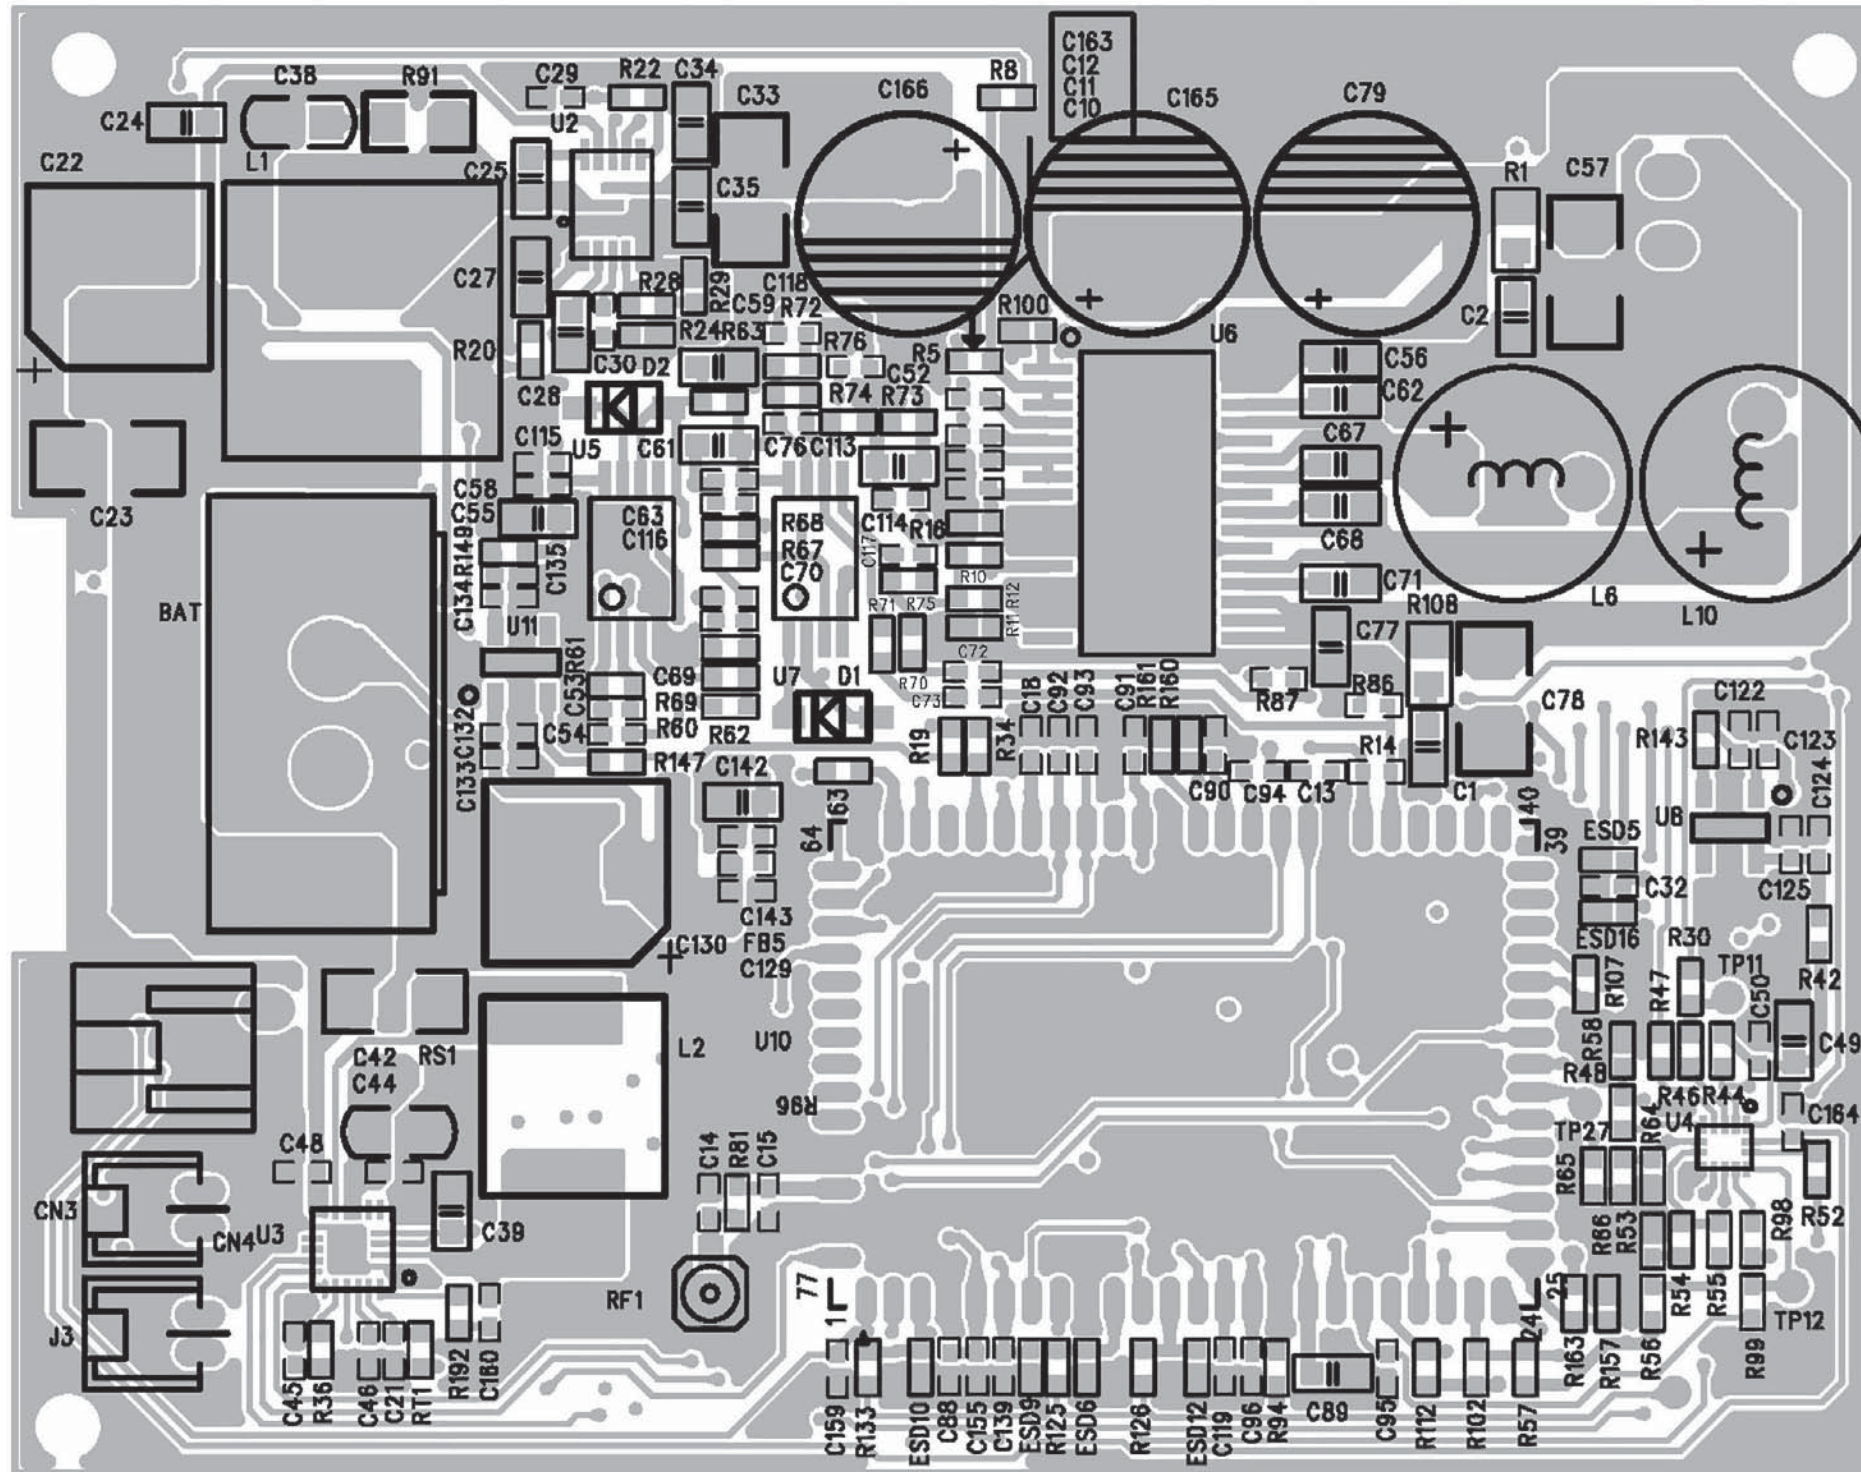


Main PCB_BOTTOM LAYOUT


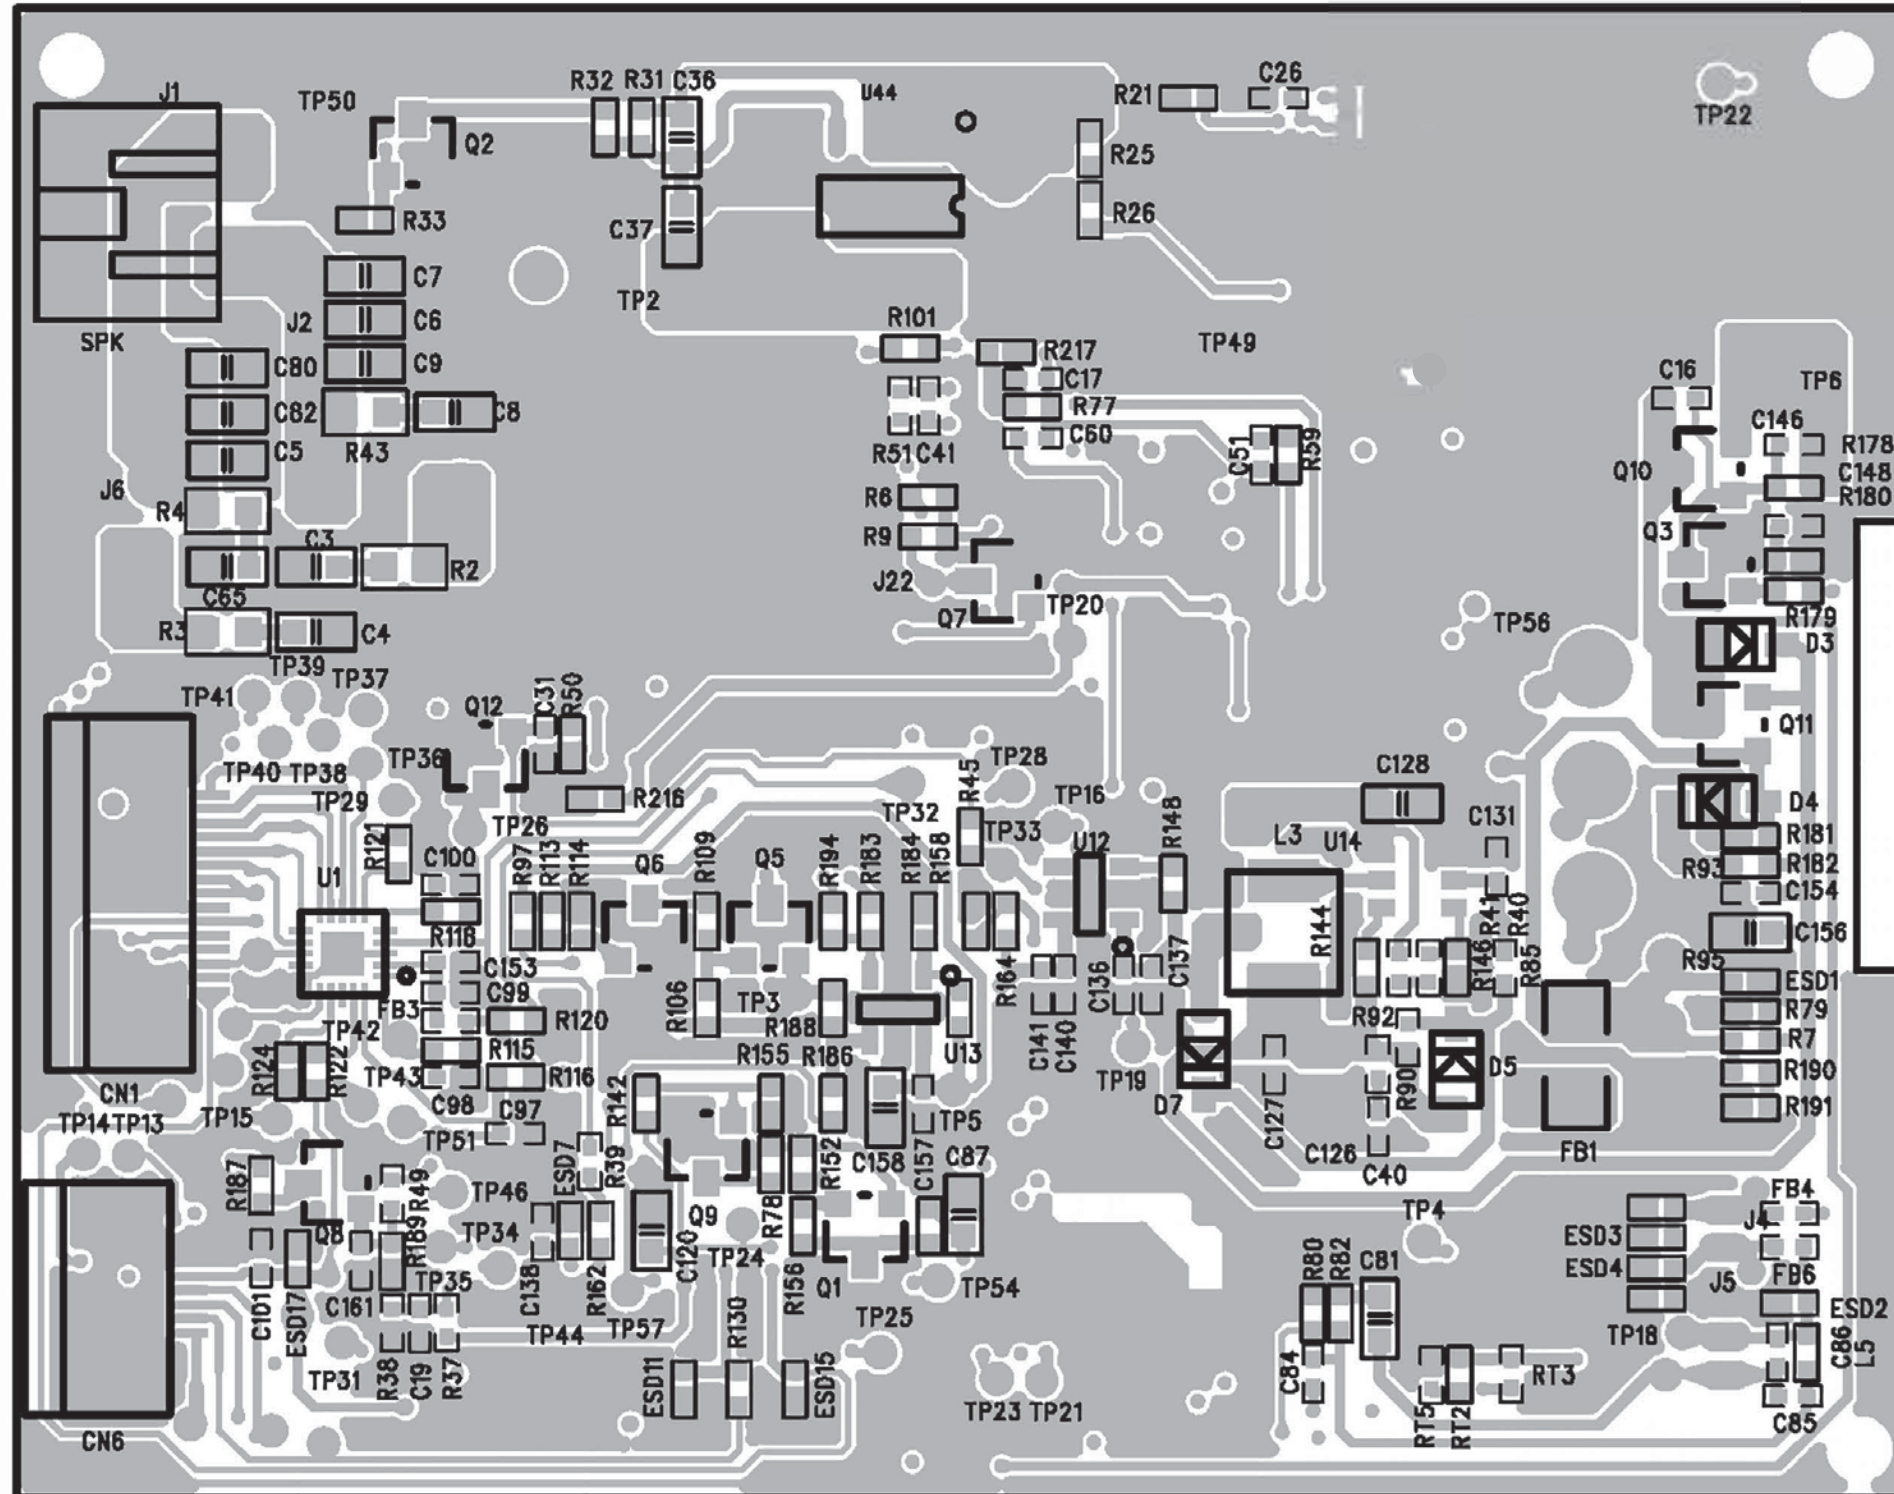


KEY PCB _ TOP LAYOUT




KEY PCB _ BOTTOM LAYOUT

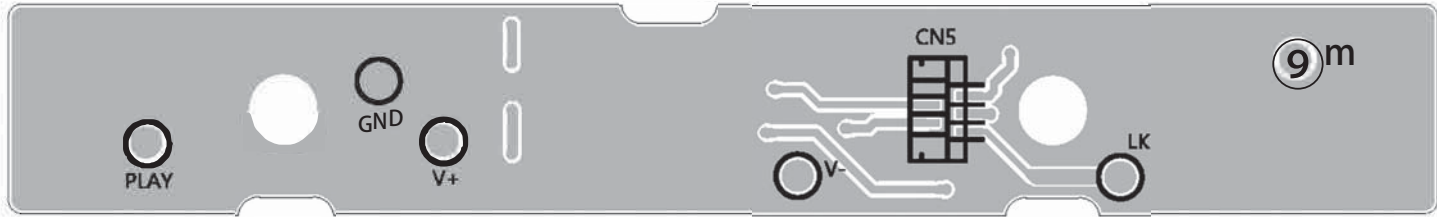


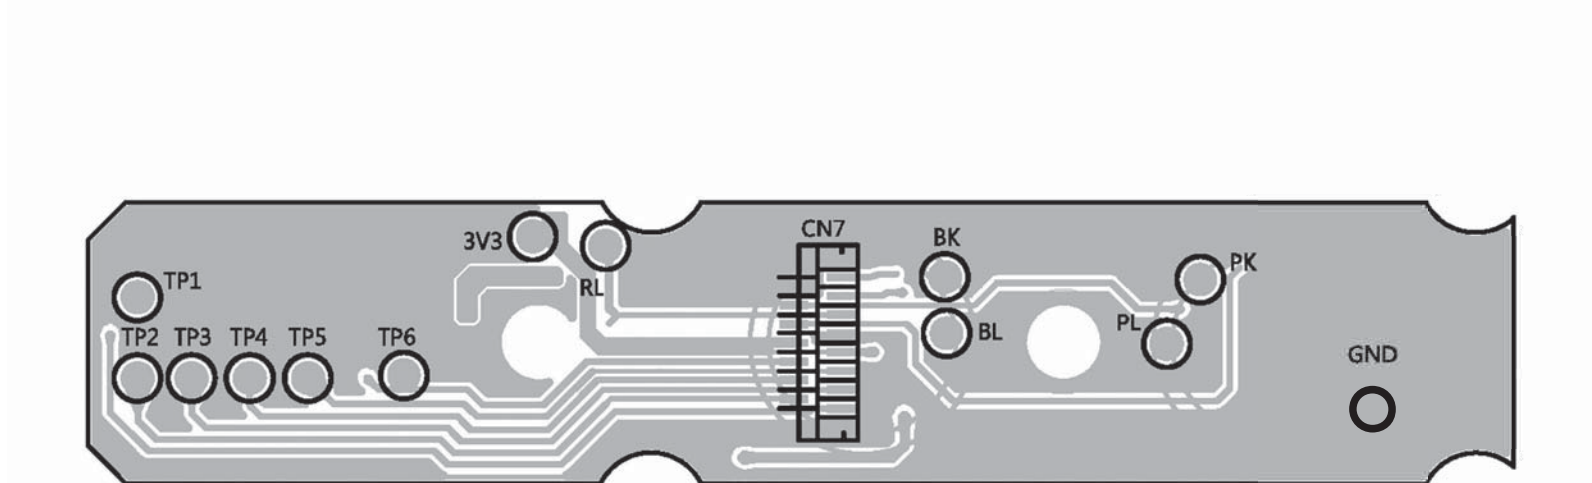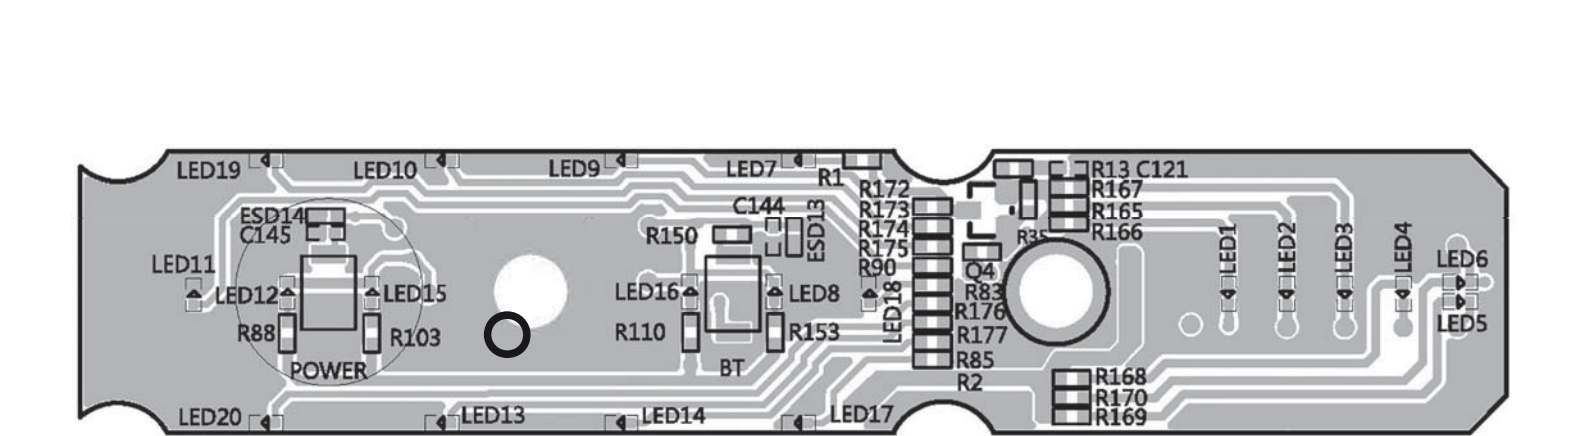


USB PCB _ TOP LAYOUT

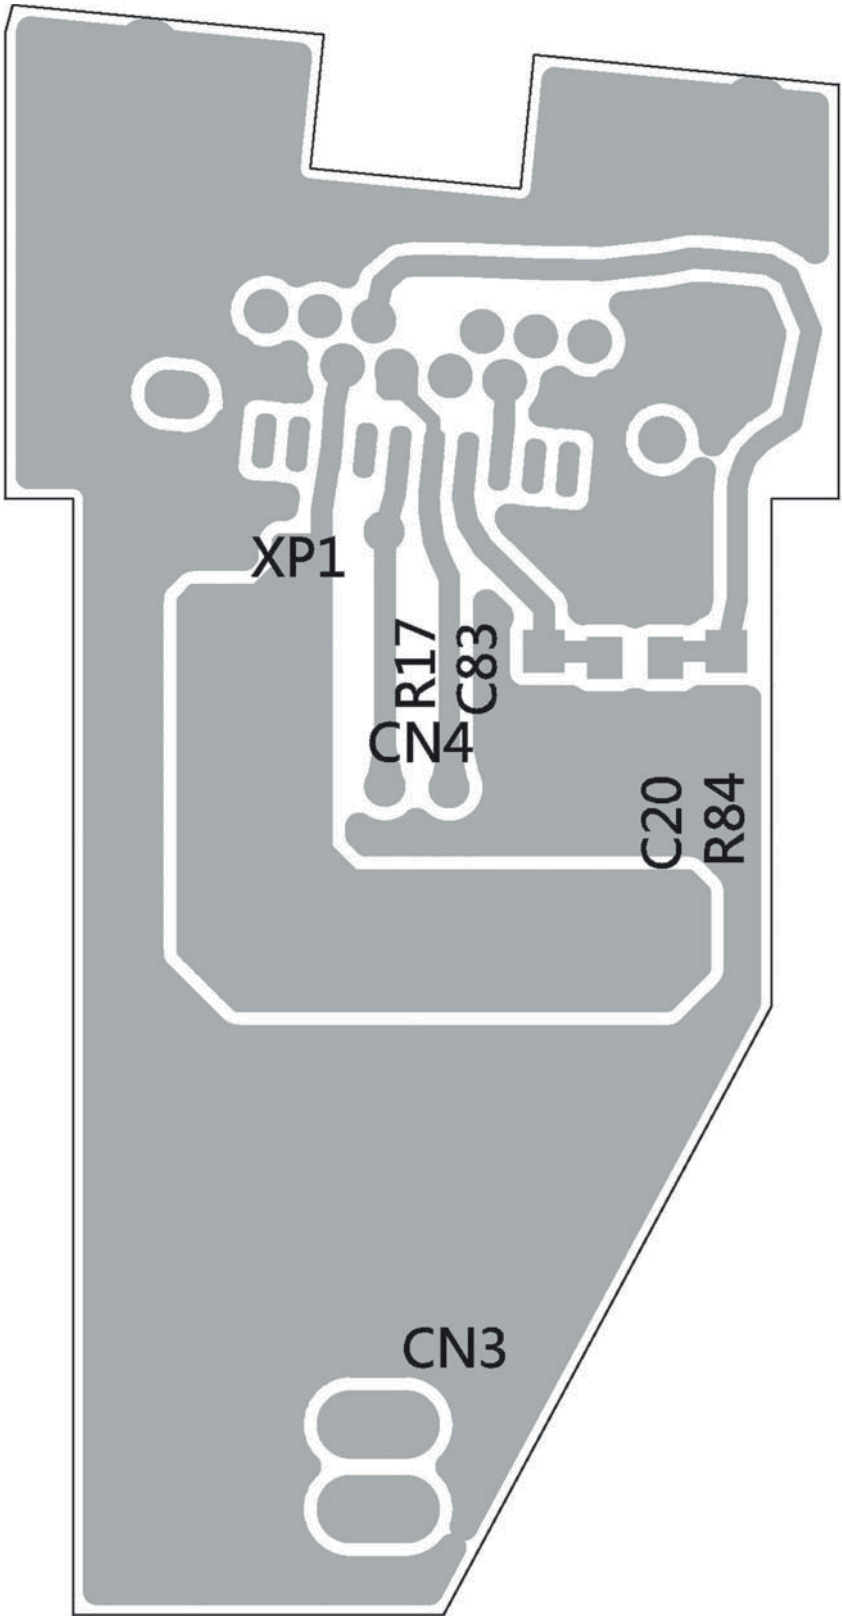

USB PCB _ BOTTOM LAYOUT

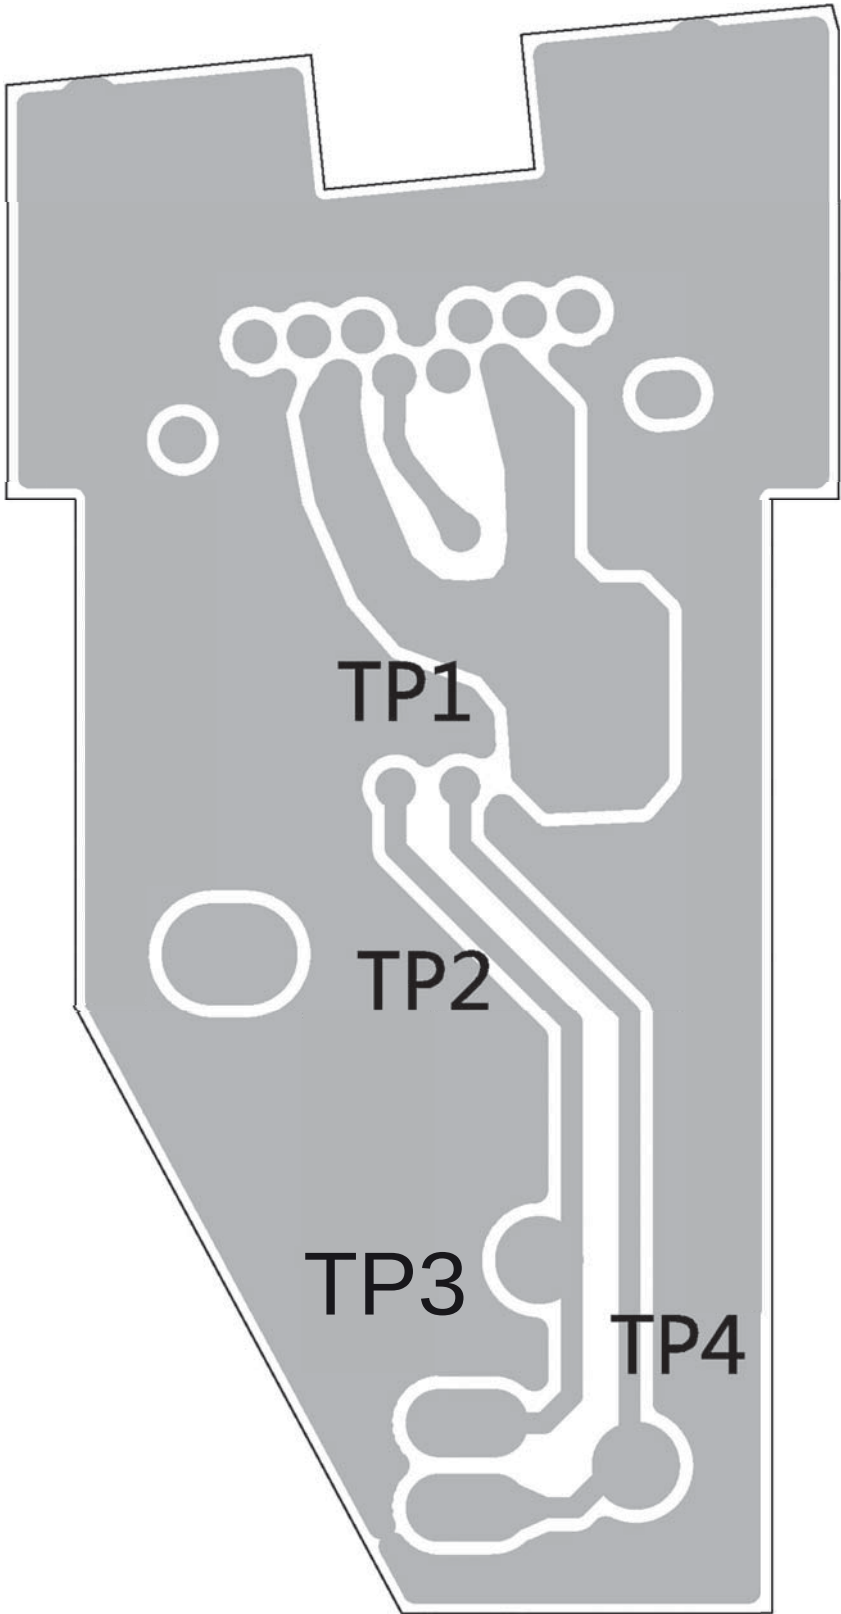

MECHANICAL EXPLODED VIEW

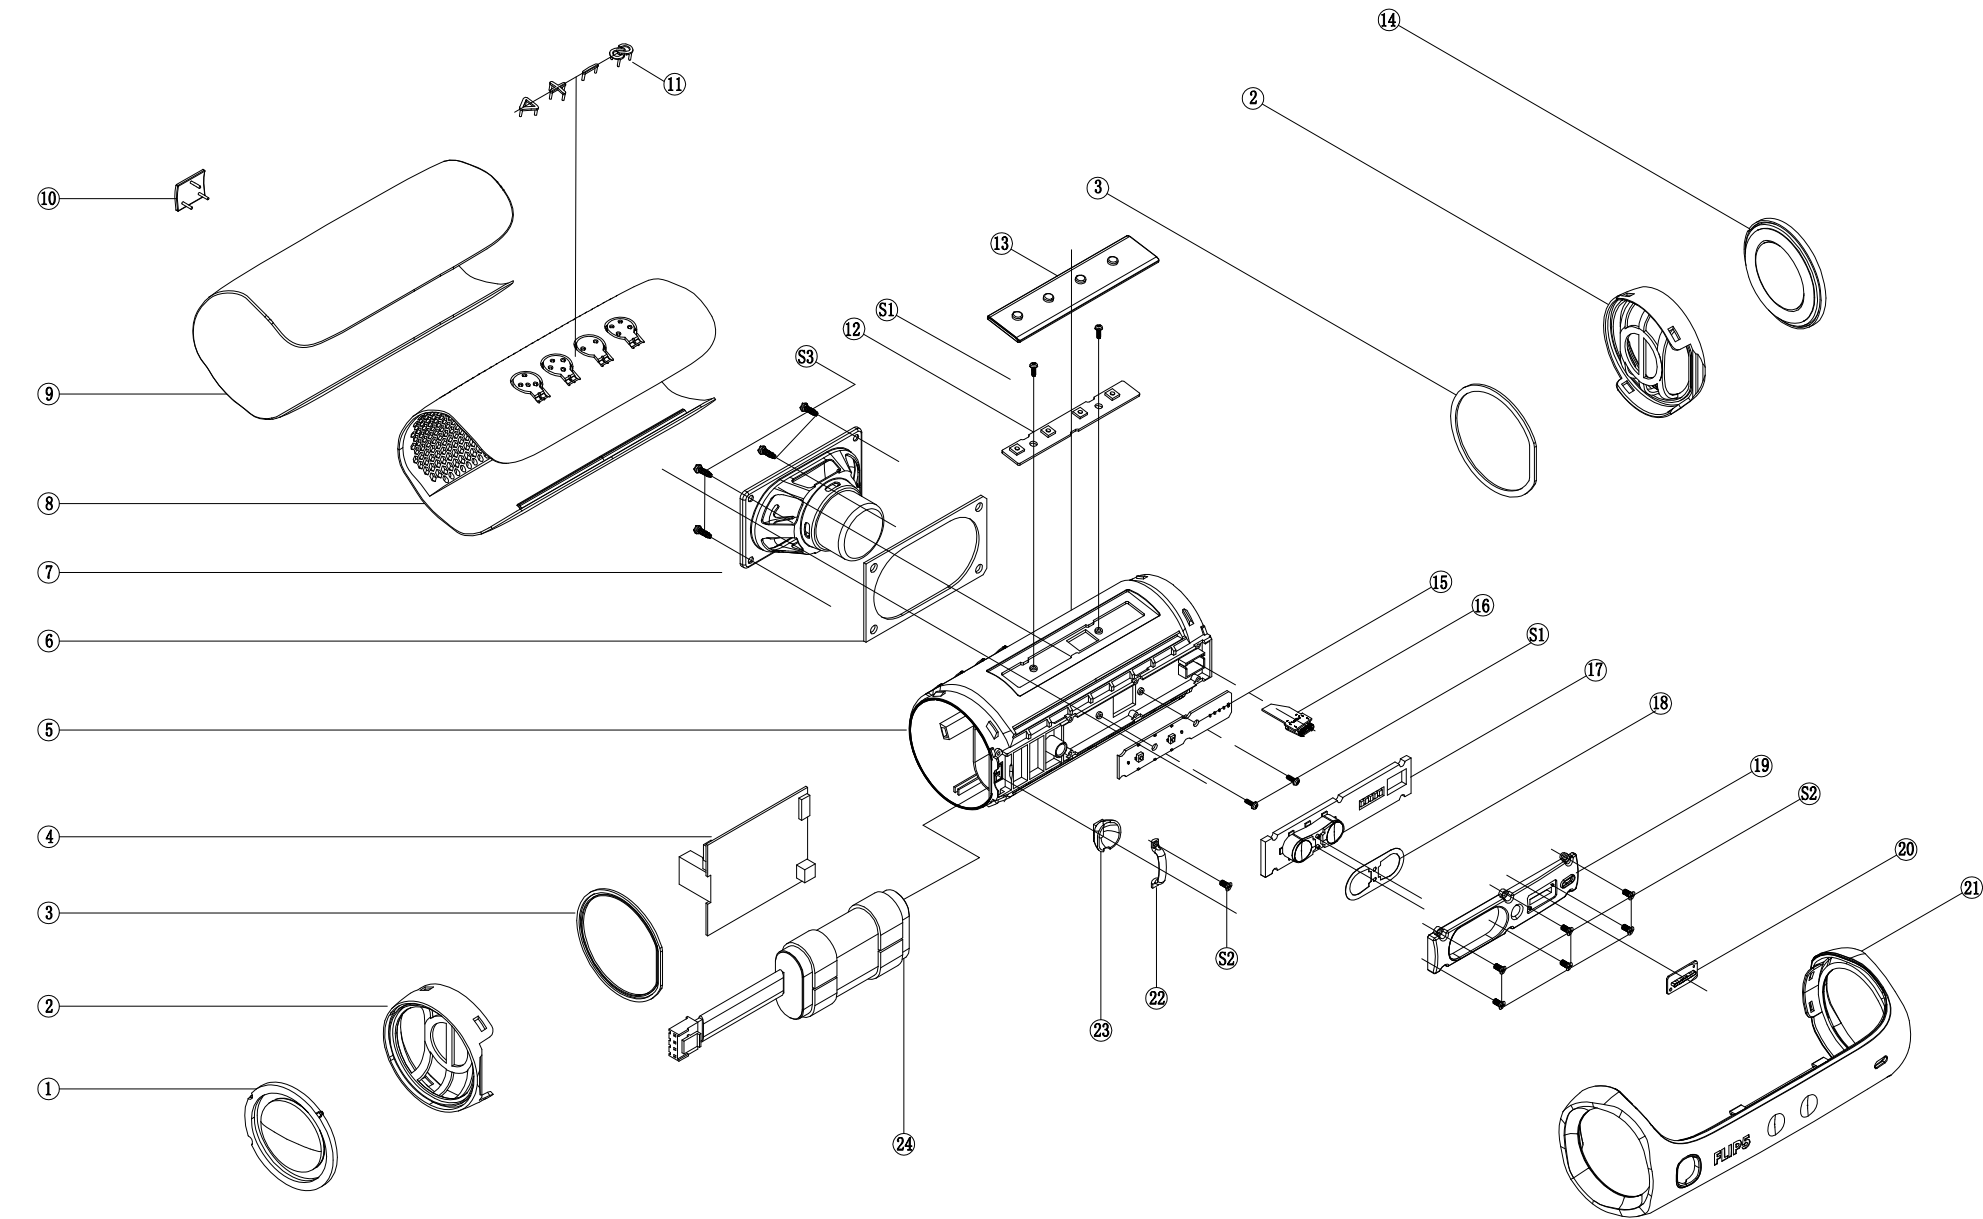

Pos. No.	Part Number	Description
1+2	1003047565B0020	PASSIVE RADIATOR R YEL FLIP5 CS
1+2	1003047565B0019	PASSIVE RADIATOR R PINK FLIP5 CS
1+2	1003047565B0018	PASSIVE RADIATOR R TEAL FLIP5 CS
1+2	1003047565B0017	PASSIVE RADIATOR R SAND FLIP5 CS
1+2	1003047565B0016	PASSIVE RADIATOR R WHT FLIP5 CS
1+2	1003047565B0015	PASSIVE RADIATOR R GREN FLIP5 CS
1+2	1003047565B0014	PASSIVE RADIATOR R GRY FLIP5 CS
1+2	1003047565B0013	PASSIVE RADIATOR R BLU FLIP5 CS
1+2	1003047565B0012	PASSIVE RADIATOR R RED FLIP5 CS
1+2	1003047565B0011	PASSIVE RADIATOR R BLK FLIP5 CS
3	300799000173	PR BRACKET SEALING RING CS
4	200606230003C00	MAIN PCBA FLIP5 CS
5	311400756502D00	MAIN HOUSING FLIP5 CS
6	300799000175	DRIVER SEALING RING CS
7	33072448003001C	SPEAKER DRIVER FLIP5 CS
8+9+10+11	1003047565B0001	FABRIC GRILLE ASSY BLK FLIP5 CS
8+9+10+11	1003047565B0002	FABRIC GRILLE ASSY RED FLIP5 CS
8+9+10+11	1003047565B0003	FABRIC GRILLE ASSY BLU FLIP5 CS
8+9+10+11	1003047565B0004	FABRIC GRILLE ASSY GRAY FLIP5 CS
8+9+10+11	1003047565B0005	FABRIC GRILLE ASSY GREN FLIP5 CS
8+9+10+11	1003047565B0006	FABRIC GRILLE ASSY WHT FLIP5 CS
8+9+10+11	1003047565B0007	FABRIC GRILLE ASSY SAND FLIP5 CS
8+9+10+11	1003047565B0008	FABRIC GRILLE ASSY TEAL FLIP5 CS
8+9+10+11	1003047565B0009	FABRIC GRILLE ASSY PINK FLIP5 CS
8+9+10+11	1003047565B0010	FABRIC GRILLE ASSY YEL FLIP5 CS
12	200607220012C00	KEY PCBA FLIP5 CS
13	300799000176E00	VOLUME BUTTON FLIP5 CS
14+2	1003047565B0021	PASSIVE RADIATOR L BLK FLIP5 CS
14+2	1003047565B0022	PASSIVE RADIATOR L RED FLIP5 CS
14+2	1003047565B0023	PASSIVE RADIATOR L BLU FLIP5 CS
14+2	1003047565B0024	PASSIVE RADIATOR L GRY FLIP5 CS
14+2	1003047565B0025	PASSIVE RADIATOR L GREN FLIP5 CS
14+2	1003047565B0026	PASSIVE RADIATOR L WHT FLIP5 CS
14+2	1003047565B0027	PASSIVE RADIATOR L SAND FLIP5 CS
14+2	1003047565B0028	PASSIVE RADIATOR L TEAL FLIP5 CS
14+2	1003047565B0029	PASSIVE RADIATOR L PINK FLIP5 CS
14+2	1003047565B0030	PASSIVE RADIATOR L YEL FLIP5 CS
15	200609220007C00	LED AND KEY PCBA FLIP5 CS
16	200608220013C00	USB PCBA FLIP5 CS
17	300799000174E01	RUBBER BUTTON FLIP5 CS
18	309999000022C00	ASTIGMATIC PAPAER FLIP5 CS
19	311600756502D00	USB BRACKET FLIP5 CS
20	311700756501D00	PIPE LINE FLIP5 CS
21	319905756501D00	WRAPPING HOUSING BLK FLIP5 CS
21	319905756502D00	WRAPPING HOUSING RED FLIP5 CS
21	319905756503D00	WRAPPING HOUSING BLU FLIP5 CS
21	319905756504D00	WRAPPING HOUSING GRY FLIP5 CS
21	319905756505D00	WRAPPING HOUSING GREN FLIP5 CS
21	319905756506D00	WRAPPING HOUSING WHT FLIP5 CS
21	319905756507D00	WRAPPING HOUSING SAND FLIP5 CS
21	319905756508D00	WRAPPING HOUSING TEAL FLIP5 CS
21	319905756509D00	WRAPPING HOUSING PINK FLIP5 CS
21	319905756510D00	WRAPPING HOUSING YEL FLIP5 CS
22	300399020079D00	STRAP HOOK BLK FLIP5 CS
22	300399020080D00	STRAP HOOK RED FLIP5 CS
22	300399020081D00	STRAP HOOK BLU FLIP5 CS
22	300399020083D00	STRAP HOOK GREN FLIP5 CS
22	300399020085D00	STRAP HOOK WHT FLIP5 CS
22	300399020086D00	STRAP HOOK SAND FLIP5 CS
22	300399020087D00	STRAP HOOK TEAL FLIP5 CS
22	300399020088D00	STRAP HOOK PINK FLIP5 CS
22	300399020089D00	STRAP HOOK YEL FLIP5 CS
23	311500756510D00	DECORATIVE COVER YEL FLIP5 CS
23	311500756509D00	DECORATIVE COVER PINK FLIP5 CS
23	311500756508D00	DECORATIVE COVER TEAL FLIP5 CS
23	311500756507D00	DECORATIVE COVER SAND FLIP5 CS
23	311500756506D00	DECORATIVE COVER WHT FLIP5 CS
23	311500756505D00	DECORATIVE COVER GREN FLIP5 CS
23	311500756504D00	DECORATIVE COVER GRY FLIP5 CS
23	311500756503D00	DECORATIVE COVER BLU FLIP5 CS
23	311500756502D00	DECORATIVE COVER RED FLIP5 CS
23	311500756501D00	DECORATIVE COVER BLK FLIP5 CS
24	300112024010C00	LI-ION BATTERY 4800MAH FLIP5 CS

JBL FLIP 5 CS SPARE PARTS LIST V1.0

Pos. No.	Part Number	Description
1+2	1003047565B0020	PASSIVE RADIATOR R YEL FLIP5 CS
1+2	1003047565B0019	PASSIVE RADIATOR R PINK FLIP5 CS
1+2	1003047565B0018	PASSIVE RADIATOR R TEAL FLIP5 CS
1+2	1003047565B0017	PASSIVE RADIATOR R SAND FLIP5 CS
1+2	1003047565B0016	PASSIVE RADIATOR R WHT FLIP5 CS
1+2	1003047565B0015	PASSIVE RADIATOR R GREN FLIP5 CS
1+2	1003047565B0014	PASSIVE RADIATOR R GRY FLIP5 CS
1+2	1003047565B0013	PASSIVE RADIATOR R BLU FLIP5 CS
1+2	1003047565B0012	PASSIVE RADIATOR R RED FLIP5 CS
1+2	1003047565B0011	PASSIVE RADIATOR R BLK FLIP5 CS
3	300799000173	PR BRACKET SEALING RING CS
4	200606230003C00	MAIN PCBA FLIP5 CS
5	311400756502D00	MAIN HOUSING FLIP5 CS
6	300799000175	DRIVER SEALING RING CS
7	33072448003001C	SPEAKER DRIVER FLIP5 CS
8+9+10+11	1003047565B0001	FABRIC GRILLE ASSY BLK FLIP5 CS
8+9+10+11	1003047565B0002	FABRIC GRILLE ASSY RED FLIP5 CS
8+9+10+11	1003047565B0003	FABRIC GRILLE ASSY BLU FLIP5 CS
8+9+10+11	1003047565B0004	FABRIC GRILLE ASSY GRAY FLIP5 CS
8+9+10+11	1003047565B0005	FABRIC GRILLE ASSY GREN FLIP5 CS
8+9+10+11	1003047565B0006	FABRIC GRILLE ASSY WHT FLIP5 CS
8+9+10+11	1003047565B0007	FABRIC GRILLE ASSY SAND FLIP5 CS
8+9+10+11	1003047565B0008	FABRIC GRILLE ASSY TEAL FLIP5 CS
8+9+10+11	1003047565B0009	FABRIC GRILLE ASSY PINK FLIP5 CS
8+9+10+11	1003047565B0010	FABRIC GRILLE ASSY YEL FLIP5 CS
12	200607220012C00	KEY PCBA FLIP5 CS
13	300799000176E00	VOLUME BUTTON FLIP5 CS
14+2	1003047565B0021	PASSIVE RADIATOR L BLK FLIP5 CS
14+2	1003047565B0022	PASSIVE RADIATOR L RED FLIP5 CS
14+2	1003047565B0023	PASSIVE RADIATOR L BLU FLIP5 CS
14+2	1003047565B0024	PASSIVE RADIATOR L GRY FLIP5 CS
14+2	1003047565B0025	PASSIVE RADIATOR L GREN FLIP5 CS
14+2	1003047565B0026	PASSIVE RADIATOR L WHT FLIP5 CS
14+2	1003047565B0027	PASSIVE RADIATOR L SAND FLIP5 CS
14+2	1003047565B0028	PASSIVE RADIATOR L TEAL FLIP5 CS
14+2	1003047565B0029	PASSIVE RADIATOR L PINK FLIP5 CS
14+2	1003047565B0030	PASSIVE RADIATOR L YEL FLIP5 CS
15	200609220007C00	LED AND KEY PCBA FLIP5 CS
16	200608220013C00	USB PCBA FLIP5 CS
17	300799000174E01	RUBBER BUTTON FLIP5 CS
18	309999000022C00	ASTIGMATIC PAPAER FLIP5 CS
19	311600756502D00	USB BRACKET FLIP5 CS
20	311700756501D00	PIPE LINE FLIP5 CS
21	319905756501D00	WRAPPING HOUSING BLK FLIP5 CS
21	319905756502D00	WRAPPING HOUSING RED FLIP5 CS
21	319905756503D00	WRAPPING HOUSING BLU FLIP5 CS
21	319905756504D00	WRAPPING HOUSING GRY FLIP5 CS
21	319905756505D00	WRAPPING HOUSING GREN FLIP5 CS
21	319905756506D00	WRAPPING HOUSING WHT FLIP5 CS
21	319905756507D00	WRAPPING HOUSING SAND FLIP5 CS
21	319905756508D00	WRAPPING HOUSING TEAL FLIP5 CS
21	319905756509D00	WRAPPING HOUSING PINK FLIP5 CS

21	319905756510D00	WRAPPING HOUSING YEL FLIP5 CS
22	300399020079D00	STRAP HOOK BLK FLIP5 CS
22	300399020080D00	STRAP HOOK RED FLIP5 CS
22	300399020081D00	STRAP HOOK BLU FLIP5 CS
22	300399020083D00	STRAP HOOK GREN FLIP5 CS
22	300399020085D00	STRAP HOOK WHT FLIP5 CS
22	300399020086D00	STRAP HOOK SAND FLIP5 CS
22	300399020087D00	STRAP HOOK TEAL FLIP5 CS
22	300399020088D00	STRAP HOOK PINK FLIP5 CS
22	300399020089D00	STRAP HOOK YEL FLIP5 CS
23	311500756510D00	DECORATIVE COVER YEL FLIP5 CS
23	311500756509D00	DECORATIVE COVER PINK FLIP5 CS
23	311500756508D00	DECORATIVE COVER TEAL FLIP5 CS
23	311500756507D00	DECORATIVE COVER SAND FLIP5 CS
23	311500756506D00	DECORATIVE COVER WHT FLIP5 CS
23	311500756505D00	DECORATIVE COVER GREN FLIP5 CS
23	311500756504D00	DECORATIVE COVER GRY FLIP5 CS
23	311500756503D00	DECORATIVE COVER BLU FLIP5 CS
23	311500756502D00	DECORATIVE COVER RED FLIP5 CS
23	311500756501D00	DECORATIVE COVER BLK FLIP5 CS
24	300112024010C00	LI-ION BATTERY 4800MAH FLIP5 CS
	30080535004002D00	USB TYPE-C CABLE FLIP5 CS
	309908000076D00	STRAP YEL FLIP5 CS
	309908000075D00	STRAP PINK FLIP5 CS
	309908000074D00	STRAP TEAL FLIP5 CS
	309908000073D00	STRAP SAND FLIP5 CS
	309908000072D00	STRAP WHT FLIP5 CS
	309908000071D00	STRAP GREN FLIP5 CS
	309908000070D00	STRAP GRY FLIP5 CS
	309908000069D00	STRAP BLU FLIP5 CS
	309908000068D00	STRAP RED FLIP5 CS
	309908000067D00	STRAP BLK FLIP5 CS
	300401990043D00	EPP CASE FLIP5 CS
	300403110282D00	GIFT BOX US BLK FLIP5 CS
	300403110283D00	GIFT BOX US RED FLIP5 CS
	300403110284D00	GIFT BOX US BLU FLIP5 CS
	300403110285D00	GIFT BOX US GRY FLIP5 CS
	300403110286D00	GIFT BOX US GREN FLIP5 CS
	300403110287D00	GIFT BOX US WHT FLIP5 CS
	300403110288D00	GIFT BOX US SAND FLIP5 CS
	300403110289D00	GIFT BOX US TEAL FLIP5 CS
	300403110290D00	GIFT BOX US PINK FLIP5 CS
	300403110291D00	GIFT BOX US YEL FLIP5 CS
	300403110263D00	GIFT BOX GLOBAL BLK FLIP5 CS
	300403110264D00	GIFT BOX GLOBAL RED FLIP5 CS
	300403110265D00	GIFT BOX GLOBAL BLU FLIP5 CS
	300403110266D00	GIFT BOX GLOBAL GRY FLIP5 CS
	300403110267D00	GIFT BOX GLOBAL GREN FLIP5 CS
	300403110268D00	GIFT BOX GLOBAL WHT FLIP5 CS
	300403110269D00	GIFT BOX GLOBAL SAND FLIP5 CS
	300403110270D00	GIFT BOX GLOBAL TEAL FLIP5 CS
	300403110271D00	GIFT BOX GLOBAL PINK FLIP5 CS
	300403110272D00	GIFT BOX GLOBAL YEL FLIP5 CS

Revision List

Version 1.0

* Initial release for JBL Flip 5. 2019-4