lenovo

Lenovo G400s/G405s/ G400s Touch/G500s/ G505s/G500s Touch

Hardware Maintenance Manual

Note:

Before using this information and the product it supports, be sure to read the general information under "Notices" on page 99.

First Edition (April 2013)

© Copyright Lenovo 2013. All rights reserved.

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2013 Lenovo

Contents

| About this manualiv |
|---|
| Safety information1 |
| General safety2 |
| Electrical safety |
| Safety inspection guide5 |
| Handling devices that are sensitive to |
| electrostatic discharge6 |
| Grounding requirements 6 |
| Safety notices: multilingual translations 7 |
| Laser compliance statement |
| Important service information16 |
| Strategy for replacing FRUs |
| Strategy for replacing a hard disk drive |
| Important notice for replacing a system |
| board17 |
| Important information about replacing RoHS |
| compliant FRUs |
| - |
| General checkout19 |
| What to do first |
| Power system checkout |
| Checking the AC adapter21 |
| Checking operational charging21 |
| Checking the battery pack |
| Related service information23 |
| Restoring the factory contents by using |
| Recovery Disc Set |
| Start Recovery Disc (one disc)23 |
| Operating System Recovery Disc (one or |
| more discs) |
| Applications and Drivers Recovery Disc |
| (one or more discs)23 |
| Supplemental Recovery Disc23 |
| Passwords24 |
| Power-on password24 |
| Hard-disk password24 |
| Supervisor password |
| Power management |
| Screen blank mode |
| Putting your computer to sleep25 |
| Shutting down the computer |
| Lenovo G400s/G405s/G400s Touch/G500s/ |
| G505s/G500s Touch27 |
| Specifications |
| Status indicators |
| Fn key combinations |

| FRU replacement notices | 33 |
|---|------|
| Screw notices | .33 |
| Removing and replacing an FRU | .34 |
| 1010 Battery pack | .35 |
| 1020 Dummy card | .36 |
| 1030 Hard disk drive(HDD)/Memory/ | |
| Mini PCI Express Card slot compartmen | t |
| cover | .37 |
| 1040 Hard disk drive | .38 |
| 1050 Optical drive | .41 |
| 1060 DÎMM | |
| 1070 PCI Express Mini Card for wireless | |
| LAN/WAN | |
| 1080 Fan assembly | .46 |
| 1090 Keyboard | . 47 |
| 1100 Keyboard bezel | . 52 |
| 1110 System board | |
| 1120 LCD unit | . 59 |
| 1130 Heat Sink assembly | |
| 1140 CPU | |
| 1150 Base cover, speakers, USB and pow | |
| assembly | |
| 1160 LCD front bezel | |
| 1170 LCD panel, LCD cable and hinges | .71 |
| 1180 Integrated camera | |
| 1190 Antenna assembly and LCD cover | .74 |
| Locations | |
| Front view | |
| Right-side view | |
| Bottom and Left-side view | |
| Parts list | .79 |
| Overall | .80 |
| LCD FRUs | |
| Keyboard | |
| Miscellaneous parts | . 93 |
| AC adapters | |
| Screws | |
| Power cords | |
| | |
| Notices | |
| Trademarks | 100 |
| | |

About this manual

This manual contains service and reference information for the following Lenovo product:

G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively. Before servicing a Lenovo product, make sure to read all the information under "Safety information" on page 1 and "Important service information" on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo computer:

- "General safety" on page 2
- "Electrical safety" on page 3
- "Safety inspection guide" on page 5
- "Handling devices that are sensitive to electrostatic discharge" on page 6
- "Grounding requirements" on page 6
- "Safety notices: multilingual translations" on page 7
- "Laser compliance statement" on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- · When lifting any heavy object:
 - 1. Make sure that you can stand safely without slipping.
 - 2. Distribute the weight of the object equally between your feet.
 - 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 - Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all
 personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip it over
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.

- Wear safety glasses when you are hammering, drilling, soldering, cutting
 wire, attaching springs, using solvents, or working in any other conditions
 that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires.
 Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you
 cannot unplug it, ask the customer to power-off the wall box that supplies
 power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.
 - **Attention:** An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.
- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generators

and similar units. (This practice ensures correct grounding of the units.)

- If an electrical accident occurs:
 - Use caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- · Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

- 1. Check exterior covers for damage (loose, broken, or sharp edges).
- 2. Turn off the computer. Disconnect the power cord.
- 3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
- Check for cracked or bulging batteries.
- Remove the cover.
- Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
- Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
- 8. Check for worn, frayed, or pinched cables.
- 9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

- 1. Use product-specific ESD procedures when they exceed the requirements noted here.
- Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Notes:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or greenwire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connectoroutside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile odersplitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת BRU יש לוודא שכל הברנים, הקפיצים, וחלקים קטונים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש לטלטל את המחשב ולהקשיב לגילוי קולות שקשוק, חלקי או שבבי מתכת עלולים לנודה לקצרים חשלליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altri parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。 これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

⚠ DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für sondermüll beachten. Beim Ersetzen der Bereitschafts-oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנת מסוימות מכילות במות קטנה של ניקל וקדמיום. אין לברק סוללת המתנת, של ניקל וקדמיום. אין לברק סוללת המתנת, לטעון אותה מחדש, להשליך אותה לאש או אותה מחדש, לאבר אותה. יש לסלק את הסוללה כלבדש על ידי התקומו החוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימות החלקים המומימים. אימוש בסוללה לא מתאימה עלול לגרום להצתת או אות המוצועו של לחיפולה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

⚠ DANGER

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארו הסוללה מכיל כמות קטנה של ניקל
קדמריום. אין לפרק את מארו הסוללה, להשליך
אותו לאש או למים או לקצר אותו. יש לסלק את
מארו הסוללה הסוללה כמדרש על ידי התפנות
והחוקים המקומיים. יש להשתמש רק בסוללה
המופעה ברשימות החלקים המתמאימה בזמן ההלפת
מארו הסוללה. שימוש בסוללה לא מתאימה עלול
בלורום להאנת או תחמצות של בסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

⚠ DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100° C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une temperature supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systembatterie ist eine Lithiumbatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות הליותים עלולה לגרום לשריפה, להתפוצצות או לכולות הליותים עשות. אל לפלק את המחבר לכוויות קשות. אין לפלק את המחבר המקוטב שלה, לפרק אותה או להמט אותה לטמפרטורה העולה על 200 מעלות צליוט. אין לטרוף את הסוללה ואין השולה האו למים. אין שלפלק את היוסללה מגדוש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המושיה ברשימות החלקים המתאימים. שימוש בסוללה המושיה ארת עלול לגרום לסכנת שריפה או התמוצמות.

La batteria di supporto e una batteria al litio e puo incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクターの取り外し、バッテリー本体の分解、100℃(212°F)以上への加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったボッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הגביש הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניכם או ידיכם, שטפו את האזורים הנגועים מיד במים במשך 15 דקות לפחות. פנו לקבלת עורה רפואית אם תסמינים הנובעים המבגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD の中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún

⚠ DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カ バーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

⚠ DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארקת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דלימים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

⚠ DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב, לנתק את כל כבלי החשמל משקעי החשמל, להוציא את מארז הסוללה, ואז לנתק כבלי חיבור אחרים אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRUを取り外す前に、 ThinkPad の電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

↑ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为, 都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

 $Werden \, Steuer-\, und \, Einstellelemente \, anders \, als \, hier \, festgesetzt \, verwendet, \, kann \, gefährliche \, Laserstrahlung \, auftreten.$

Az itt előírt eljárásoktól, beállításoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrôl, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open**.

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

⚠ DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时,请勿盯视激光光束,请勿直接查看 视觉仪器,并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhnite sa priamemu pohľadu a nehľadte priamo s optickými nástrojmi do ľúča a vyhnite sa priamemu vystaveniu ľúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- "Strategy for replacing FRUs" on page 16
 - "Strategy for replacing a hard disk drive" on page 17
 - "Important notice for replacing a system board" on page 17
- "Important information about replacing RoHS compliant FRUs" on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site: http://consumersupport.lenovo.com/.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

- 1. Go to http://consumersupport.lenovo.com/.
- Enter the serial number or select a product or use Lenovo smart downloading.
- 3. Select the BIOS/Driver/Applications and download.
- 4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may
 be the cause of the error. Before replacing the adapter or device, remove the
 FRUs one by one to see if the symptoms change. Replace only the FRU that
 changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- · Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

| Products marketed before June 2006 | | Products marketed after June 2006 | |
|------------------------------------|-----------------|-----------------------------------|-----------------|
| Current or original part | Replacement FRU | Current or original part | Replacement FRU |
| Non-RoHS | Can be Non-RoHS | | |
| Non-RoHS | Can be RoHS | Must be RoHS | Must be RoHS |
| Non-RoHS | Can sub to RoHS | Must be Koris | Must be Kons |
| RoHS | Must be RoHS | | |

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- "What to do first" on page 20
- "Power system checkout" on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- . Only certified trained personnel can service the computer.
- Before replacing any FRU, read the entire page on removing and replacing FRUs.
- . When you replace FRUs, use new nylon-coated screws.
- Be extremely careful during such write operations as copying, saving, or formatting. Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- Replace an FRU only with another FRU of the correct model. When
 you replace an FRU, make sure that the machine model and the FRU part
 number are correct by referring to the FRU parts list.
- An FRU should not be replaced just because of a single, unreproducible failure. Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- · Be careful not to replace a nondefective FRU.

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

- 1. Name and phone number of servicer
- 2. Date of service
- 3. Date on which the machine failed
- 4. Date of purchase
- 5. Procedure index and page number in which the failing FRU was detected
- 6. Failing FRU name and part number
- 7. Machine type, model number, and serial number
- 8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- · Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- · Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign
 material in the drive, or the insertion of a diskette with multiple labels
- · Damaged or bent diskette eject button
- · Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- · Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

- 1. Turn off the computer.
- 2. Remove the battery pack.
- 3. Connect the AC adapter.
- 4. Make sure that power is supplied when you turn on the computer.
- 5. Turn off the computer.
- 6. Disconnect the AC adapter and install the charged battery pack.
- Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- "Checking the AC adapter" on page 21
- · "Checking operational charging" on page 21
- "Checking the battery pack" on page 22


Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to "Checking operational charging".

To check the AC adapter, follow the steps below:

- 1. Unplug the AC adapter cable from the computer.
- Measure the output voltage at the plug of the AC adapter cable. See the following figure:

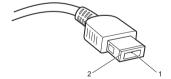

| Pin | Voltage (V DC) |
|-----|----------------|
| 1 | +20 |
| 2 | 0 |
| | |

 $\mbox{{\bf Note:}}$ Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

- 3. If the voltage is not correct, replace the AC adapter.
- 4. If the voltage is acceptable, do the following:
- · Replace the system board.
- If the problem persists, go to "Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch" on page 27.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack


Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows[®] taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

To check the battery pack, follow the steps below:

- 1. Turn off the computer.
- 2. Remove the battery pack and measure the voltage between battery terminals 1 (+) and 7 (-). See the following figure:

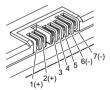

| Terminal | Voltage (V DC) |
|----------|----------------|
| 1 | +0 to +14 |
| 7 | Ground (-) |

If the voltage is less than +11.0 V DC, the battery pack has been discharged.
 Note: Recharging will be continued for at least 3 hours, even though the indicator does not light on.

If the voltage is still less than +11.0 V DC after recharging, replace the battery.

4. If the voltage is more than +11.0 V DC, measure the resistance between battery terminals 5 and 7. The resistance must be 4 to 30 K Ω . If the resistance is not correct, replace the battery pack. If the resistance is correct, replace the system board.

Related service information

This chapter presents the following information:

- "Restoring the factory contents by using Recovery Disc Set" on page 23
- "Passwords" on page 24
- "Power management" on page 25

Restoring the factory contents by using Recovery Disc Set

When the hard disk drive or solid state drive is replaced because of a failure, no product recovery program is on the new drive. In this case, you must use the *Recovery Disc Set* for the computer. Order the *Recovery Disc Set* and the drive at the same time so that you can recover the new drive with the pre-installed software when they arrive.

The *Recovery Disc Set* consists of the following set of DVDs to restore the computer to the original factory configuration.

Start Recovery Disc (one disc)

This disc is used to format the hard disk drive and initiate the recovery process.

Operating System Recovery Disc (one or more discs)

This disc restores the Microsoft Windows operating system.

Applications and Drivers Recovery Disc (one or more discs)

This disc restores the pre-installed applications and drivers on the computer.

Supplemental Recovery Disc

This disc contains additional content, such as software for specific models and updates to the software that was preloaded on the computer. Not all recovery disc sets come with a *Supplemental Recovery Disc*.

To restore the computer to the original factory configuration using the recovery disc set, do the following:

- 1. Insert the bootable Start Recovery Disc into the optical drive.
- Start the computer. When the Lenovo logo comes up, immediately press F12; on the boot sequence menu, select the optical drive as the first boot-up device. The computer will boot from the Start Recovery Disc. Follow the on-screen instructions to begin the recovery process.
- 3. Read the license. If you agree with the terms, select I accept these terms and conditions and then click Next.
- Insert the Operating System Recovery Disc when prompted and click Yes to begin the operating system recovery process.
- 5. Insert the *Applications and Drivers Recovery Disc* when prompted and then click **OK** to begin the applications and drivers recovery process.
- 6. If you have a *Supplemental Recovery Disc*, insert it when prompted and click **Yes**. If you do not have a *Supplemental Recovery Disc*, click **No**.

When all of the data has been copied from the last disc in the set, remove the disc and restart the computer.

Note: The remainder of the recovery process is fully automated and no action is required by you. The computer will restart into the Windows desktop several times and you might experience periods when no activity is apparent on the screen for several minutes at a time. This is normal.

8. When the recovery process is complete, the Welcome to the Microsoft Windows screen is displayed. Follow the instructions on the screen to complete the Windows setup.

Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the supervisor password (SVP).

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Exception: If only an SVP is installed, the password prompt does not appear when the operating system is booted.

Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

Hard-disk password

There are two hard-disk passwords (HDPs):

- + User HDP for the user
- + Master HDP for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

Supervisor password

A supervisor password (SVP) protects the system information stored in the BIOS Setup Utility. The user must enter the SVP in order to get access to the BIOS Setup Utility and change the system configuration.

Attention: If the SVP has been forgotten and cannot be made available to the servicer, there is no service procedure to reset the password. The system board must be replaced for a scheduled fee.

Power management

Note: Power management modes are not supported for APM operating system.

To reduce power consumption, the computer has three power management modes: screen blank, sleep (standby), and hibernation.

Screen blank mode

If the time set on the "Turn off monitor" timer in the operating system expires, the LCD backlight turns off. You can also turn off the LCD backlight by pressing Fn+F2.

To end screen blank mode and resume normal operation, press any key.

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep.

When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display panel.
- Press the power button.
- Open the charms, and then select **Settings** \longrightarrow **Power** \longrightarrow **Sleep**.

Note: Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:

· Press any key on the keyboard.

Note: If the computer does not awaken after pressing a key on the keyboard, this means that the computer has entered an enhanced power-saving mode.

• Press the power button.

Shutting down the computer

If you are not going to use your computer for a long time, shut it down. To shut down your computer:

1. Open the charms, select **Settings** 👸.



2. Select **Power** \bigcirc \rightarrow **Shut down**.



Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

This chapter presents the following product-specific service references and product-specific parts information:

- "Specifications" on page 27
- "Status indicators" on page 30
- "FRU tests" on page 31
- "Fn key combinations" on page 32
- "FRU replacement notices" on page 33
- "Removing and replacing an FRU" on page 34
- "Locations" on page 75
- "Parts list" on page 79

Specifications

The following table lists the specifications of the Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch:

Table 1. Specifications

| Feature | Description |
|------------------|--|
| | Description |
| Processor | See the system properties of your computer, you can do this as follows: |
| | Click Control Panel, then click Hardware and Sound, click Device Manager under Devices and Printers and double click Processors. |
| Core Chipset | • Intel HM76/HM70 |
| Bus architecture | 1600MHz DDR3 SDRAM |
| | PCI Express bus |
| | • SMBus |
| | • DMI |
| | • FDI |
| Graphic Chipset | • nvidia N14M-GE |
| Display | • 14.0" 16:9 Glare/White LED/3.6mm flat type/LVDS |
| | Glare/White LED/3.0mm ultra slim type/LVDS touch |
| | support (option) |
| | • 1366x768 pixels HD/200nit |
| | • 15.6" 16:9 Glare/White LED/3.8mm flat type/LVDS |
| | Glare/White LED/3.2mm flat type/LVDS for touch |
| | (option) |
| | • 1366x768 pixels HD/200nit |
| Standard | DDR3L-1600 (support DDR3) |
| memory | • SODIMM × 2 |
| CMOS RAM | • 256 bytes |

Table 1. Specifications (continued)

| Feature | Description |
|--------------------------------|---|
| Hard disk drive | • 320GB, 5400rpm |
| | • 500GB, 5400rpm |
| | • 750GB, 5400rpm |
| | • 1TB, 5400rpm |
| | • 500G+8G(Hybrid HDD) |
| | • 1T+8G(Hybrid HDD) |
| Solid-state drive | |
| Optical drive | • 9.5 mm |
| | RAMBO/Blueray RAMBO |
| I/O port | • HDMI × 1 |
| | Combo audio jack ×1 |
| | • RJ45 × 1 |
| | • USB 2.0 × 1, USB 3.0 × 2 |
| | • 2-in1 card reader (SD, MMC) |
| MODEM slot | • N/A |
| Audio | 1/8" Stereo Headphone and Microphone combo jack |
| | Input Jack Microphone |
| | Built-in stereo speakers |
| | Built-in microphone |
| Video | • CRT port × 1 |
| | • HDMI port × 1 |
| | • VGA × 1 |
| Ethernet (on the system board) | • 1G LAN |
| PCI Express Mini | Wimax/WIFI × 1 |
| Card slot | • SSD × 1 |
| WLAN | • Intel 11gn(1x1) |
| | Intel 11gn+BT combo card |
| WWAN | • N/A |
| Bluetooth wireless | combined in combo card |
| Touch pad | One-piece multi-touch touch pad |


Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Table 1. Specifications (continued)

| Feature | Description |
|--------------------------------|---|
| Finger Print Reader | • N/A |
| Integrated camera | • 640 × 480 pixels/1280 × 720 pixels |
| Battery | • 4 cells, 2800mAh Li-Cyllinder |
| AC adapter | • 65W, 90W |
| Pre-installed operating system | Linpus lite/DOSWin 8 |

Status indicators

The system status indicators below show the computer status:

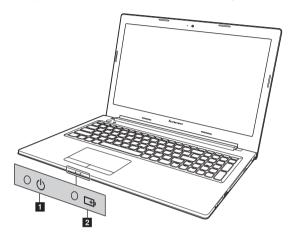

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Table 2. Status indicators

| Symbol | Indicator status | Meaning |
|--------|---------------------|---|
| (1) | On (solid white) | The computer is powered on. |
| | Blinking | The computer is in sleep mode. |
| | Off | The computer is powered off. |
| | On (solid white) | The battery has more than 20% charge. |
| | Solid amber | The battery has between 5% and 20% charge. |
| ⊕ | Fast blinking amber | There is a problem with the battery or the battery connection. |
| | Slow blinking amber | The battery is being charged. When battery charge reaches 20%, the blinking color changes to white. |
| | Slow blinking white | The battery has between 20% and 80% charge and is still charging. When the battery reaches 80% charge, the light will stop blinking, but charging will continue until the battery is fully charged. |

Fn key combinations

The following table shows the function of each combination of $\mbox{\sc Fn}$ with a function key.

Table 4. Fn key combinations

| Fn + Home: | Activate the pause function. |
|--|---------------------------------|
| Fn + End: | Activate the break function. |
| Fn + PgUp: | Enable/Disable the scroll lock. |
| Fn + PgDn (G400s/ G405s/G400s Touch): | Activate the insert function. |
| Fn + PgDn (G500s/ G505s/G500s Touch): | Activate the system request. |

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- · They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- · They are harder to tighten.
- Each one should be used only once.

Do the following when you service this machine:

- · Keep the screw kit in your tool bag.
- · Remove screws carefully for reuse.
- Use a torque screwdriver if you have one.

Tighten screws as follows:

· Plastic to plastic

Turn an additional 90° after the screw head touches the surface of the plastic part:



Logic card to plastic

Turn an additional 180° after the screw head touches the surface of the logic card:



· Torque driver

If you have a torque screwdriver, refer to the "Torque" column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. Never use a screw that you removed. Use a new one. Make sure that all screws are tightened firmly.
- Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

- 1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
- 2. Before replacing any FRU, review "FRU replacement notices" on page 33.
- Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
- Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
- When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
- When removing the FRU, move it in the direction as given by the arrow in the figure.
- 7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see "Locations" on page 75.
- 8. When replacing an FRU, use the correct screw as shown in the procedures.

⚠ DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

Note: The illustrations used in this section are of the Lenovo G500s, unless otherwise stated.


1010 Battery pack

⚠ DANGER

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Figure 1. Removal steps of battery pack

Unlock the manual latch 1. Slide the spring-loaded latch to the unlocked position 2 to eject the battery pack. Lift up the inner edge 3 of the battery pack, pivoting it on the outer edge. Slide the battery pack in the indicated direction 4 to remove it.

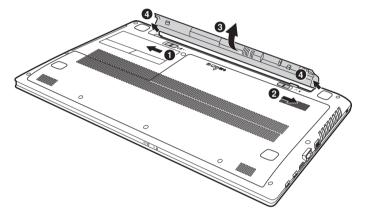

When installing: Install the battery pack along the slide rails of the slot. Then make sure that the battery release lever is in the locked position.


1020 Dummy card

For access, remove this FRU:

• "1010 Battery pack" on page 35

Figure 2. Removal steps of dummy cards

Remove the dummy card in the direction shown by arrows 1 2.

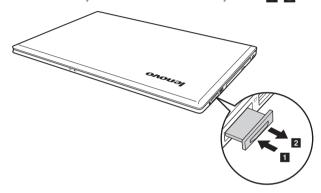


1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover

For access, remove this FRU:

• "1010 Battery pack" on page 35

 $Figure\ 3.\ Removal\ steps\ of\ HDD/Memory/Mini\ PCI\ Express\ Card\ slot\ compartment\ cover$

Loosen the screws 1 that secure the compartment cover. Remove the compartment cover in the direction shown by arrow 2.

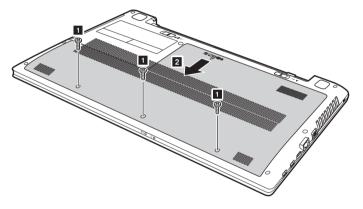

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-------------------|
| 1 | M2.5 \times 6 mm, flat-head, nylok-coated (3) (G500s) | Black | 2.38 ~ 2.48 kgfcm |
| | $M2.5 \times 8$ mm, flat-head, nylok-coated (2) (G400s) | Black | 2.38 ~ 2.45 kgfcm |

1040 Hard disk drive


For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37


Attention:


- Do not drop the hard disk drive or apply any physical shock to it. The hard disk drive is sensitive to physical shock. Improper handling can cause damages and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

Figure 4. Removal steps of hard disk drive Remove the frame fixing screws 1.

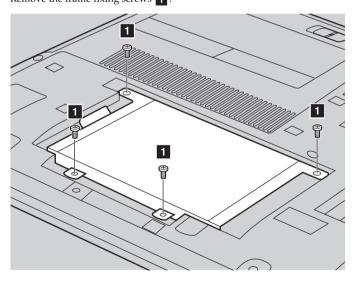

| Step | Screw (quantity) | Color | Torque |
|------|--|-------|-------------------|
| 1 | M2 × 5 mm, flat-head, nylok-coated (4) (G500s) | Black | 2.0 ~ 2.5 kgfcm |
| | M2 × 5 mm, flat-head, nylok-coated (4) (G400s) | Black | 1.89 ~ 1.89 kgfcm |

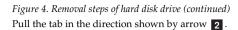

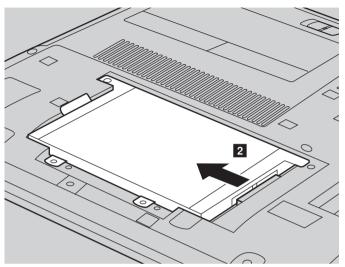

Take out the hard disk drive secured in a metal frame 3.


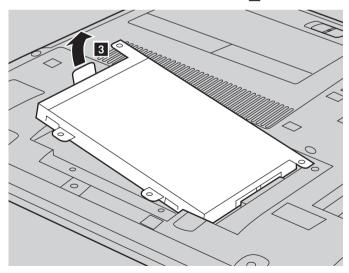


Figure 4. Removal steps of hard disk drive (continued)

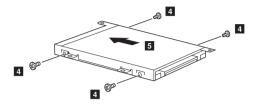

| Step | Screw (quantity) | Color | Torque |
|------|---------------------------------------|-------|-------------------|
| 4 | M3 × 3 mm, flat-head, nylok-coated(4) | White | 2.88 ~ 2.95 kgfcm |

When installing: Make sure that the HDD connector is attached firmly.


1050 Optical drive

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37

Figure 5. Removal steps of optical drive


Remove the screw 1, insert a screw driver into the screw hole and push the optical drive in the direction shown by arrow 2. Pull the optical drive out in the direction shown by arrow 3.

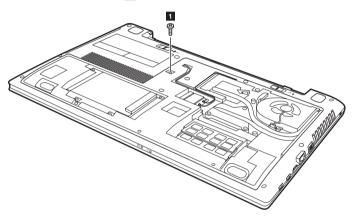

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-----------------|
| 1 | M2.5 \times 3 mm, flat-head, nylok-coated (1) (G500s) | Black | 1.5 ~ 2.0 kgfcm |
| | M 2 × 9 mm, flat-head, nylok-coated (1) (G400s) | Black | |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

Figure 5. Removal steps of optical drive (continued)

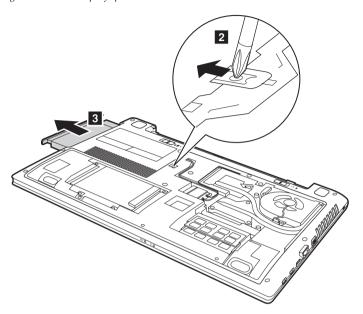


1060 **DIMM**

For access, remove these FRUs in order:


- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37

Figure 6. Removal steps of DIMM

Release the two latches on both edges of the socket at the same time in the direction shown by arrows 1, and then unplug the DIMM in the direction shown by arrow 2.

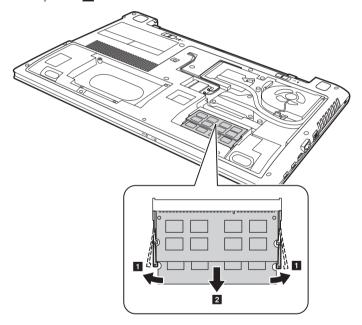

Note: If only one DIMM is used on the computer you are servicing, the card must be installed in SLOT-0 (\Box : lower slot), but not in SLOT-1 (\Box : upper slot).

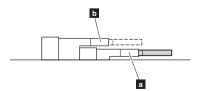

When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into the place. Make sure that it is firmly fixed in the slot and difficult to be moved.


1070 PCI Express Mini Card for wireless LAN/WAN

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37

Figure 7. Removal steps of PCI Express Mini Card for wireless LAN/WAN

Disconnect the two wireless LAN cables 11, and then remove the screw 2.

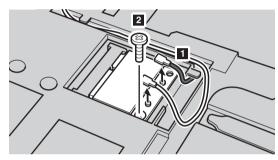


In step 1, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by arrows.

Notes: wireless LAN card has 2 cables in step **1**. Wireless LAN card in some models may have 3 cables in step **1**.

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-------------------|
| 2 | $M2 \times 3.5$ mm, flat-head, nylok-coated (1) (G500s) | Black | 1.0 ~ 1.5 kgfcm |
| | M2 × 5 mm, flat-head, nylok-coated (1) (G400s) | Black | 1.89 ~ 1.96 kgfcm |

Remove the card in the direction shown by arrow 3.

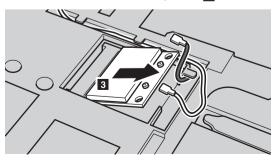

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Figure 7. Removal steps of PCI Express Mini Card for wireless LAN/WAN (continued) When installing:

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into jack labeled **3**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.


1080 Fan assembly

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37

Figure 8. Removal steps of fan assembly

Remove two screws 1, unplug the fan connector in the direction shown by arrow 2.

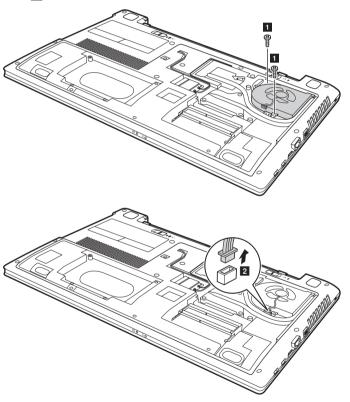

When installing: Make sure that the fan connector is attached firmly to the system board.

| Step | Screw (quantity) | Color | Torque |
|------|--|-------|--------|
| 1 | M2 × 3.5 mm, flat-head, nylok-coated (2) | Black | |


1090 Keyboard

For access, remove these FRUs in order:


- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1080 Fan assembly" on page 46


Figure 9. Removal steps of keyboard

G500s: Remove screws 1.

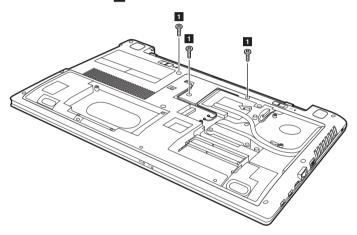

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-------------------|
| 1 | M2 × 5 mm, flat-head, nylok-coated (3) (G500s) | Black | 1.5 ~ 2.0 kgfcm |
| | $M2 \times 9$ mm, flat-head, nylok-coated (3) (G400s) | Black | 1.89 ~ 1.98 kgfcm |

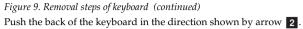

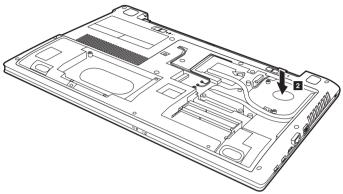

G500s: Loosen the keyboard with fingers in the direction shown by arrow 3. Lift the keyboard a little 4, and then detach the connector in the direction shown by arrows 5 6.

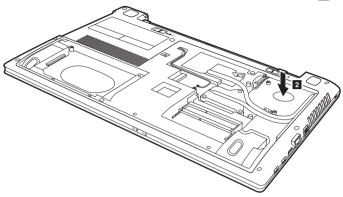


Figure 9. Removal steps of keyboard (continued) **G400s:** Remove the screws **1**. 1


| Step | Screw (quantity) | Color | Torque |
|------|--|-------|-------------------|
| 1 | M2 × 9 mm, flat-head, nylok-coated (2) | Black | 1.89 ~ 1.98 kgfcm |
| | (G400s) | | |

Figure 9. Removal steps of keyboard (continued)

G400s: Push the back of the keyboard in the direction shown by arrow **2**.




G400s: Loosen the keyboard with fingers in the direction shown by arrow **3**.

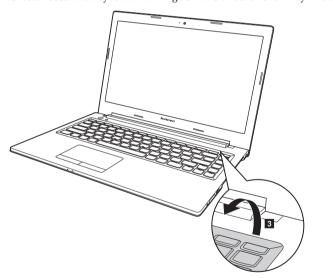

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Figure 9. Removal steps of keyboard (continued)

G400s: Lift the keyboard a little [4], and then detach the connector in the direction shown by arrows [5], [6].

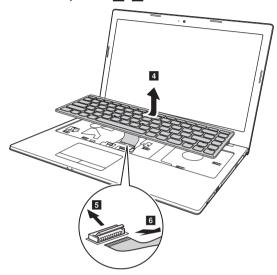


1100 Keyboard bezel

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47

Figure 10. Removal steps of keyboard bezel


G500s: Remove eight screws **1** and two screws **2** on the bottom.

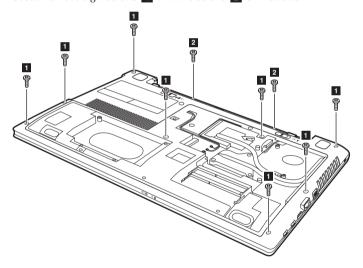

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-------------------|
| 1 | $M2.5 \times 6$ mm, flat-head, nylok-coated (8) | Black | 2.38 ~ 2.48 kgfcm |
| 1 | $M2.5 \times 3$ mm, flat-head, nylok-coated (2) | Black | 1.0 ~ 1.5 kgfcm |

Figure 10. Removal steps of keyboard (continued)

G400s: Remove six screws **1** and three screws **2** on the bottom.

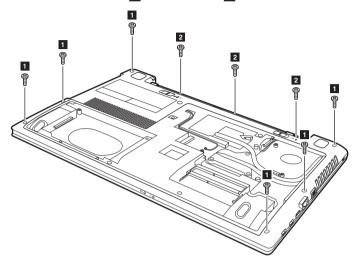


| Step | Screw (quantity) | Color | Torque |
|------|---|-------|------------------|
| 1 | $M2.5 \times 6$ mm, flat-head, nylok-coated (6) | Black | 2.38 ~ 2.5 kgfcm |
| 1 | M2 × 3 mm, flat-head, nylok-coated (3) | Black | 1.0 ~ 1.5 kgfcm |


G500s: Detach the power board connector, and touch pad cable in the direction shown by arrow **3** .



When installing: Make sure that the power board connector and touch pad cable are attached firmly.

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

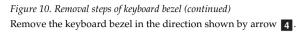

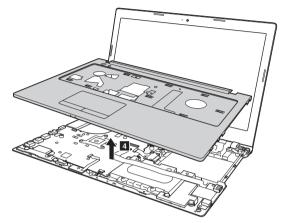

1110 System board

Important notices for handling the system board:

When handling the system board, bear the following in mind.

- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- · Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.


For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

Figure 11. Removal steps of system board


G500s: Loosen the screws **1** . Detach the LCD connector **2** , optical disk drive board connector, IO board and LED board connector in the direction shown by arrows **3 4** , unplug the speakers and DC-IN cable connector in the direction shown by arrows **5 6** .

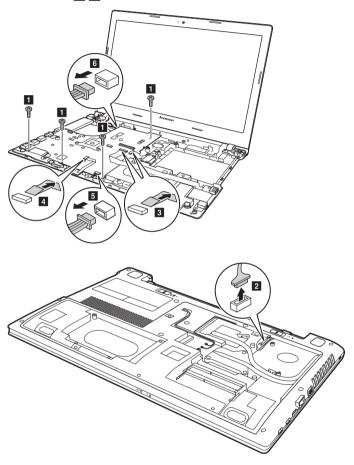

| Step | Screw (quantity) | Color | Torque |
|------|--|-------|-----------------|
| 1 | M2.5 × 3 mm, flat-head, nylok-coated (4) | Black | 1.5 ~ 2.0 kgfcm |

Figure 11. Removal steps of system board

G400s: Loosen two screws \blacksquare . Detach LCD connector in the direction shown by arrow \blacksquare , USB board connector in the direction shown by arrow \blacksquare . Unplug the DC-IN cable and speakers connectors in the direction shown by arrows \blacksquare \blacksquare \blacksquare

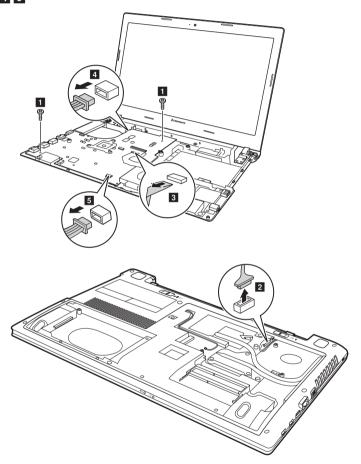


When installing: Make sure that all the connectors are attached firmly.

| Step | Screw (quantity) | Color | Torque |
|------|--|-------|------------------|
| 1 | M2.5 × 3 mm, flat-head, nylok-coated (2) | Black | 2.38 ~2.48 kgfcm |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

Figure 11. Removal steps of system board (continued)
Remove the system board in the direction shown by arrow 6.

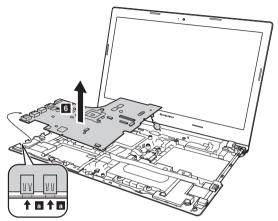

When installing: When attaching the system board to the base cover, adjust the placement of the ports as shown in **a**, and make sure that both of the USB ports are attached to the holes on the base cover as shown in **a**. Improper placement of the ports or those jacks might cause a damage.


1120 LCD unit

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1110 System board" on page 55

Figure 12. Removal steps of LCD unit


G500s: Release the antenna cables from the cable guides. Remove four screws

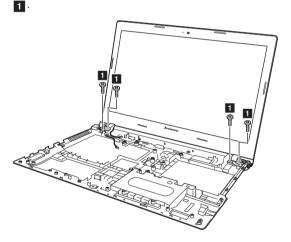

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-----------------|
| 1 | $M2.5 \times 5$ flat-head, nylok-coated (4) | White | 2.38 ~2.5 kgfcm |

Figure 12. Removal steps of LCD unit (continued)

G400s: Release the antenna cables from the cable guides. Remove four screws \blacksquare .

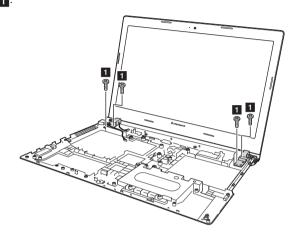

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|------------------|
| 1 | $M2.5 \times 4$ mm, flat-head, nylok-coated (4) | Black | 2.38 ~ 2.5 kgfcm |

When installing:

- Route the antenna cables along the cable guides. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.
- Make sure that the LCD connector is attached firmly and make sure that you
 do not pinch the antenna cables when you attach the LCD assembly. Route
 the LCD cable along the cable guides.

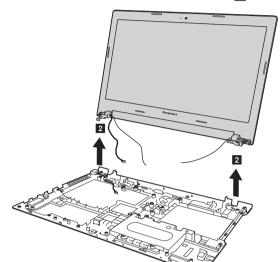


Figure 12. Removal steps of LCD unit (continued)
Remove the LCD unit in the direction shown by arrows 2.

1130 Heat Sink assembly


For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Figure 13. Removal steps of heat sink assembly

Loosen three screws 1 and two screws 2 to lift the heat sink assembly.

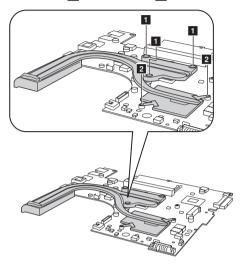

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|-----------------|
| 1 | $M2.0 \times 3.2$ mm, flat-head, nylok-coated (3) | Black | 1.0 ~ 1.5 kgfcm |
| | $M2.0 \times 3.5$ mm, flat-head, nylok-coated (2) | Black | 1.0 ~ 1.5 kgfcm |

1140 CPU


For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1120 LCD unit" on page 59

Attention: CPU is extremely sensitive. When you service the CPU, avoid any kind of rough handling.

Figure 14. Removal steps of CPU

Rotate the head of the screw in the direction shown by arrow 1 to release the lock, then remove the CPU in the direction shown by arrow 2.

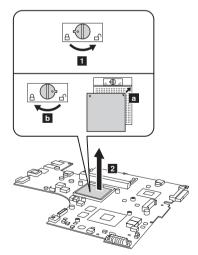

When installing: Place the CPU on the CPU socket in the direction shown by arrow **a**, and then rotate the head of the screw in the direction shown by arrow **b** to secure the CPU.

1150 Base cover, speakers, USB and power assembly

For access, remove these FRUs in order:


- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1110 System board" on page 55
- "1100 Keyboard bezel" on page 52

Figure 15. Removal steps of base cover, speakers, USB and power assembly

Loosen four screws 1. Remove the speakers in the direction shown by arrows


2 .

G500s:

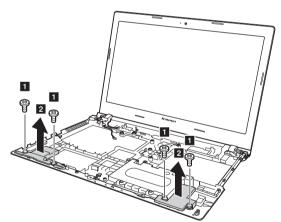


| Step | Screw (quantity) | Color | Torque |
|------|--|-------|--------|
| 1 | M 2.5×3 mm, flat-head, nylok-coated (4) | Black | |

Figure 15. Removal steps of base cover, speakers, USB and power assembly (continued) ${\bf G400s}$:

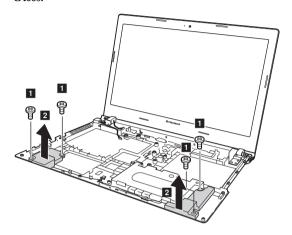

| Step | Screw (quantity) | Color | Torque |
|------|--|-------|-------------------|
| 1 | $M2.5 \times 2 \text{ mm}+5.7$, flat-head, nylok-coated (4) | Black | 2.38 ~ 2.48 kgfcm |

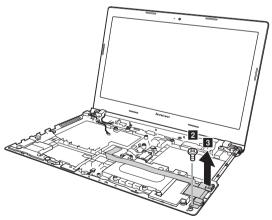



When installing: Make sure that the USB board connector is attached firmly.

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|------------------|
| 3 | M2.5 \times 3 mm, flat-head, nylok-coated (1) (G500s) | Black | |
| | M2.5 × 4 mm, flat-head, nylok-coated (1) (G400s) | Black | 2.38 ~ 2.5 kgfcm |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Figure 15. Removal steps of base cover, speakers, USB and power assembly (continued) **G500s:** Remove the power assembly in the direction shown by arrow 4.

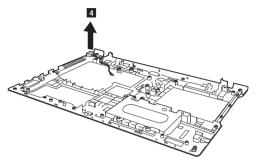


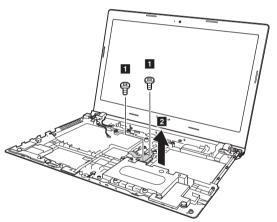

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|--------|
| 1 | $M2.5 \times 3$ mm, flat-head, nylok-coated (2) | Black | |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

Figure 15. Removal steps of base cover, speakers, USB and power assembly (continued)
Remove screw , then remove LED board in the direction shown by arrow 2.

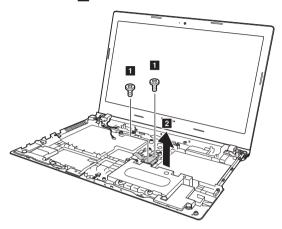

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|--------|
| 1 | $M2.5 \times 3$ mm, flat-head, nylok-coated (1) | Black | |

Note: Applying labels to the base cover


The new base cover FRU is shipped with a kit containing labels of several kinds. When you replace the base cover, you need to apply the following label:

The following labels need to be peeled off from the old base cover, and need to be put on the new base cover.

- a Palm-rest Label
- b Rating Label
- C Rating label (print)
- BT Label for US/CA/TW or Indonesia Label for BT or Israel Label for BT or Malaysia Label for BT
- e Malaysia WLAN Label
- Indonesia D-SIDE LABEL or WLAN Label for US/CA/TW or WLAN Label for ISRAEL
- 9 WLAN Label for Indonesia
- h GML Label

For some models, you also need to apply one or two FCC labels. Check the old base cover; if it has one or two FCC labels, find duplicates of them in the label kit and apply them to the new base cover.

For the location of each label, refer to the following figure:

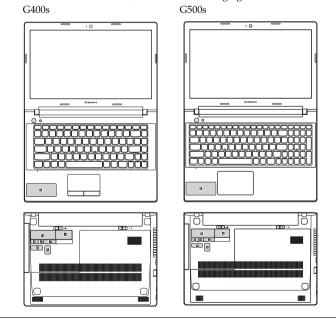


1160 LCD front bezel

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1110 System board" on page 55

Figure 16. Removal steps of LCD front bezel

Remove the LCD front bezel in the direction shown by arrows 11.

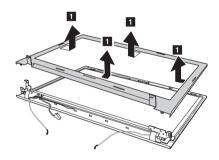


1170 LCD panel, LCD cable and hinges

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1110 System board" on page 55
- "1150 Base cover, speakers, USB and power assembly" on page 65

Figure 17. Removal steps of LCD panel, LCD cable and hinges


G500s: Remove four screws **1**. Lift the LCD panel in the direction shown by arrows **2**.

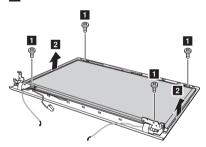

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|--------|
| 1 | $M2 \times 3.5$ mm, flat-head, nylok-coated (4) | Black | kgfcm |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch Hardware Maintenance Manual

Figure 17. Removal steps of LCD panel, LCD cable and hinges (continued) **G500s:** Remove four screws and the hinges in the direction shown by arrows

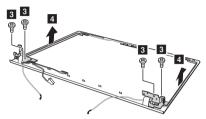

| Step | Screw (quantity) | Color | Torque |
|------|---|-------|--------|
| 2 | $M2.5 \times 3$ mm, flat-head, nylok-coated (4) | Black | kgfcm |

Note: The LCD cables are attached to the LCD panel by a metal connector.

Peel off the adhesive tape and detach the connector in the direction shown by arrow **5**.



When installing: Make sure that the metal connector is attached firmly.


1180 Integrated camera

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1110 System board" on page 55
- "1150 Base cover, speakers, USB and power assembly" on page 65
- "1160 LCD front bezel" on page 70

Figure 18. Removal steps of integrated camera

Note: The integrated camera is stuck on the top center of the LCD cover. Unplug the integrated camera connector in the direction shown by arrow **1**. Remove the integrated camera from the LCD cover **2**.

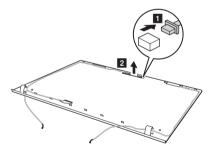

When installing: Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.


1190 Antenna assembly and LCD cover

For access, remove these FRUs in order:

- "1010 Battery pack" on page 35
- "1020 Dummy card" on page 36
- "1030 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 37
- "1040 Hard disk drive" on page 38
- "1050 Optical drive" on page 41
- "1060 DIMM" on page 43
- "1070 PCI Express Mini Card for wireless LAN/WAN" on page 44
- "1080 Fan assembly" on page 46
- "1090 Keyboard" on page 47
- "1100 Keyboard bezel" on page 52
- "1110 System board" on page 55
- "1150 Base cover, speakers, USB and power assembly" on page 65
- "1160 LCD front bezel" on page 70

Figure 19. Removal steps of antenna assembly and LCD cover

Peel off the adhesive tapes securing the antenna boards, release the cables from the cable guide, and then remove the antenna assembly in the direction shown by arrows

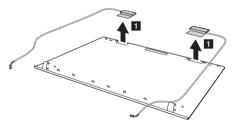

When installing: Route the antenna cables along the cable guides and secure the antenna boards with adhesive tapes. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.

Locations


Front view

- 1 Integrated camera
- 2 Wireless antennas
- 3 Computer display


Multi-touch display (on select models)


- 4 Power button
- 5 Novo button
- 6 System status indicators
- 7 Built-in microphone
- 8 Touch pad
- 9 Numeric keypad (G500s/G505s/G500s Touch)

G400s/G405s:

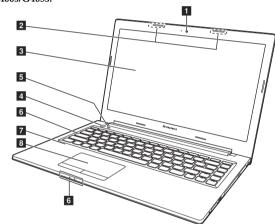


G400s Touch:

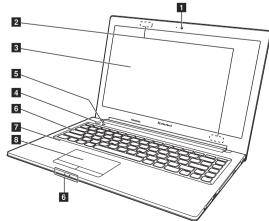


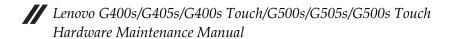

G500s/G505s:

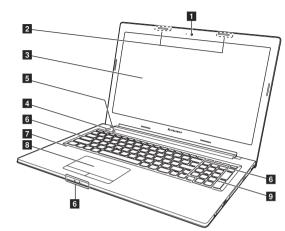

G500s Touch:

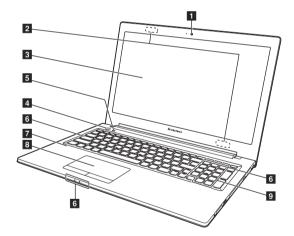


Right-side view

- 1 Kensington slot
- 2 Optical disc drive
- 3 USB port
- 4 Memory card slot
- 5 Combo audio jack



Bottom and Left-side view

- 1 AC power adapter jack
- 2 Ventilation slots
- 3 VGA port
- 4 RJ-45 port
- 5 HDMI port
- 6 USB ports
- 7 Battery latch manual
- 8 Battery pack
- 9 Battery latch spring loaded
- 10 Louvers
- Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment
- 12 Speakers

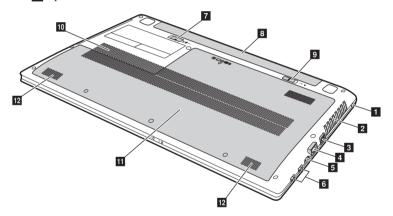

Parts list


This section presents the following service parts:

- "Overall" on page 80
- "LCD FRUs" on page 86
- "Keyboard" on page 89
- "Miscellaneous parts" on page 93
- "AC adapters" on page 94
- "Power cords" on page 95

Notes:

 Each FRU is available for all types or models, unless specific types or models are specified.

Overall

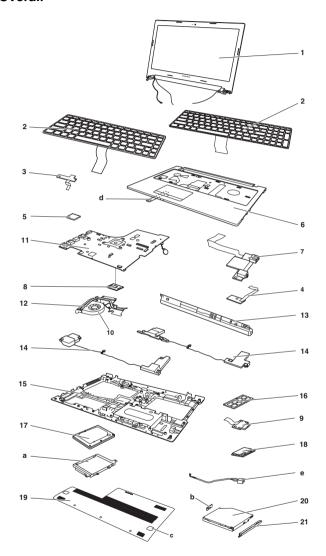

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Table 5. Parts list—Overall

| No. | FRU | FRU no. | CRU ID |
|-----|--|-----------|--------|
| 1 | LCD unit (see "LCD FRUs" on page 86.) | | |
| 2 | Keyboard (see "Keyboard" on page 89.) | | |
| 3 | VILG2 Power Board W/Cable (G400s/G400s Touch) | 90003134 | N |
| 3 | VILG1 Power Board W/Cable (G500s/G500s Touch) | 90003100 | N |
| 4 | VILG1 LED Board W/Cable (G500s/G500s Touch) | 90003072 | N |
| 5 | VILG2 ODD Dummy Black (G400s/G400s Touch) | 90202912 | N |
| 5 | VILG1 ODD Dummy Black (G500s/G500s Touch) | 90202888 | N |
| 6 | VILG2 Upper Case W/TP (G400s/G400s Touch) | 90202898 | N |
| 6 | VILG1 Upper Case W/TP (G500s/G500s Touch) | 90202873 | N |
| 7 | VILG2 USB Board W/Cable (G400s/G400s Touch) | 90003133 | N |
| 7 | VILG1 USB Board W/Cable (G500s/G500s Touch) | 90003070 | N |
| 8 | Ivy bridge core dual core 35W, Intel I5-3230M 2.6G 3M 2cPGA processor | 102500486 | N |
| 8 | Ivy bridge core dual core 35W, Intel I3-3130M 2.6G 3M 2cPGA processor | 102500487 | N |
| 8 | sandy bridge dual core, Intel 2030M 2.5G 2M 2cPGA processor | 102500482 | N |
| 8 | sandy bridge dual core, Intel 2020M 2.4G L1 2M 2cPGA processor | 102500433 | N |
| 8 | sandy bridge dual core, Intel 1000M 1.5G 2M 2cPGA processor | 102500483 | N |
| 8 | Ivy bridge core dual core 35W, Intel I3-3120M 2.5G L1 3M 2cPGA processor | 102500435 | N |
| 8 | sandy bridge dual core, Intel I3-2348M 2.3G J1 3M 2cPGA processor | 102500517 | N |
| 8 | sandy bridge dual core, Intel B980 2.4G Q0 2M 2cPGA QS processor | 102500362 | N |
| 8 | sandy bridge dual core, Intel B960 2.20G 2M 35W SNB PGA processor | 102500133 | N |
| 9 | VILG1 ODD Board W/Cable (G500s/G500s Touch) | 90003071 | N |

Table 5. Parts list—Overall (continued)

| No. | FRU | FRU no. | CRU ID |
|-----|---|----------|--------|
| | | | |
| 10 | VILG1 FAN (G400s/G500s/G400s Touch/G500s | 90202867 | N |
| | Touch) | | |
| 11 | VILG2 MB DIS HM76 GE 2G (G400s) | 90003103 | N |
| 11 | VILG2 MB DIS HM76 GE 1G (G400s) | 90003104 | N |
| 11 | VILG2 MB DIS HM70 GE 2G (G400s) | 90003105 | N |
| 11 | VILG2 MB DIS HM70 GE 1G (G400s) | 90003106 | N |
| 11 | VILG2 MB UMA HM70 (G400s) | 90003110 | N |
| 11 | VILG2 MB UMA HM76 (G400s) | 90003111 | N |
| 11 | VILG2 MB W8P DIS HM76 GE 2G (G400s) | 90003113 | N |
| 11 | VILG2 MB W8P DIS HM76 GE 1G (G400s) | 90003114 | N |
| 11 | VILG2 MB W8P DIS HM70 GE 2G (G400s) | 90003115 | N |
| 11 | VILG2 MB W8P DIS HM70 GE 1G (G400s) | 90003116 | N |
| 11 | VILG2 MB W8P UMA HM70 (G400s) | 90003120 | N |
| 11 | VILG2 MB W8P UMA HM76 (G400s) | 90003121 | N |
| 11 | VILG2 MB W8S DIS HM76 GE 2G (G400s) | 90003123 | N |
| 11 | VILG2 MB W8S DIS HM76 GE 1G (G400s) | 90003124 | N |
| 11 | VILG2 MB W8S DIS HM70 GE 2G (G400s) | 90003125 | N |
| 11 | VILG2 MB W8S DIS HM70 GE 1G (G400s) | 90003126 | N |
| 11 | VILG2 MB W8S UMA HM70 (G400s) | 90003130 | N |
| 11 | VILG2 MB W8S UMA HM76 (G400s) | 90003131 | N |
| 11 | VILG1 MB DIS HM76 GE 2G (G500s) | 90003073 | N |
| 11 | VILG1 MB DIS HM76 GE 1G (G500s) | 90003074 | N |
| 11 | VILG1 MB DIS HM70 GE 2G (G500s) | 90003075 | N |
| 11 | VILG1 MB DIS HM70 GE 1G (G500s) | 90003076 | N |
| 11 | VILG1 MB DIS HM76 GV2 2G (G500s) | 90003078 | N |
| 11 | VILG1 MB UMA HM70 (G500s) | 90003079 | N |
| 11 | VILG1 MB UMA HM76 (G500s) | 90003080 | N |
| 11 | VILG1 MB W8P DIS HM76 GE 2G (G500s) | 90003082 | N |
| 11 | VILG1 MB W8P DIS HM76 GE 1G (G500s) | 90003083 | N |
| 11 | VILG1 MB W8P DIS HM70 GE 2G (G500s) | 90003084 | N |
| 11 | VILG1 MB W8P DIS HM70 GE 1G (G500s) | 90003085 | N |
| 11 | VILG1 MB W8P DIS HM76 GV2 2G (G500s) | 90003087 | N |
| 11 | VILG1 MB W8P UMA HM70 (G500s) | 90003088 | N |
| 11 | VILG1 MB W8P UMA HM76 (G500s) | 90003089 | N |
| 11 | VILG1 MB W8S DIS HM76 GE 2G (G500s) | 90003091 | N |
| 11 | VILG1 MB W8S DIS HM76 GE 1G (G500s) | 90003091 | N |
| 11 | VILG1 MB W8S DIS HM70 GE 2G (G500s) | 90003092 | N |
| 11 | VILG1 MB W8S DIS HM70 GE 1G (G500s) | 90003094 | N |
| 11 | VILG1 MB W8S DIS HM76 GV2 2G (G500s) | 90003091 | N |
| 11 | VILG1 MB W8S UMA HM70 (G500s) | 90003097 | N |
| 11 | VILG1 MB W8S UMA HM76 (G500s) | 90003098 | N |
| 11 | VILG2 MB DIS HM76 GE 2G TS (G400s Touch) | 90003090 | N |
| 11 | VILG2 MB DIS HM76 GE 1G TS (G400s Touch) | 90003107 | N |
| 11 | VILG2 MB UMA HM70 TS (G400s Touch) | 90003109 | N |
| 11 | VILG2 MB UMA HM76 TS (G400s Touch) | 90003109 | N |
| 11 | VILG2 MB UMA HM76 IS (G4008 Touch) VILG2 MB W8P DIS HM76 GE 2G TS (G4008 Touch) | 90003112 | N |

Table 5. Parts list—Overall (continued)

| No. | FRU | FRU no. | CRU ID | | | |
|-----|--|-----------|--------|--|--|--|
| 11 | VILG2 MB W8P DIS HM76 GE 1G TS (G400s Touch) | 90003118 | N | | | |
| 11 | VILG2 MB W8P UMA HM70 TS (G400s Touch) | 90003119 | N | | | |
| 11 | VILG2 MB W8P UMA HM76 TS (G400s Touch) | 90003122 | N | | | |
| 11 | VILG2 MB W8S DIS HM76 GE 2G TS (G400s Touch) | 90003127 | N | | | |
| 11 | VILG2 MB W8S DIS HM76 GE 1G TS (G400s Touch) | 90003128 | N | | | |
| 11 | VILG2 MB W8S UMA HM70 TS (G400s Touch) | 90003129 | N | | | |
| 11 | VILG2 MB W8S UMA HM76 TS (G400s Touch) | 90003132 | N | | | |
| 11 | VILG1 MB DIS HM76 GE 2G TS (G500s Touch) | 90003077 | N | | | |
| 11 | VILG1 MB UMA HM76 TS (G500s Touch) | 90003081 | N | | | |
| 11 | VILG1 MB W8P DIS HM76 GE 2G TS (G500s Touch) | 90003086 | N | | | |
| 11 | VILG1 MB W8P UMA HM76 TS (G500s Touch) | 90003090 | N | | | |
| 11 | VILG1 MB W8S DIS HM76 GE 2G TS (G500s Touch) | 90003095 | N | | | |
| 11 | VILG1 MB W8S UMA HM76 TS (G500s Touch) | 90003099 | N | | | |
| 12 | VILG1 HeatSink DIS (G400s/G500s/G400s Touch/ G500s Touch) | 90202868 | N | | | |
| 12 | VILG1 HeatSink UMA (G400s/G500s/G400s Touch/ G500s Touch) | 90202869 | N | | | |
| 13 | Battery 4 cell 2800mAh, SY L12S4E01 14.4V41Wh 4cell bty | 121500171 | * | | | |
| 13 | Battery 4 cell 2800mAh, SP/L L12M4E01 14.88V41Wh 4cell bty | 121500172 | * | | | |
| 13 | Battery 4 cell 2800mAh, LG L12L4E01 14.8V41Wh 4cell bty | 121500173 | * | | | |
| 13 | Battery 4 cell 2200mAh, SY L12S4A02 14.4V32Wh 4cell bty | 121500174 | * | | | |
| 13 | Battery 4 cell 2200mAh, SP/L L12M4A02 14.4V32Wh 4cell bty | 121500175 | * | | | |
| 13 | Battery 4 cell 2200mAh, LG L12L4A02 14.4V32Wh 4cell bty | 121500176 | * | | | |
| 14 | VILG2 Speaker L+R (G400s/G400s Touch) | 90202894 | N | | | |
| 14 | VILG1 Speaker (G500s/G500s Touch) | 90202870 | N | | | |
| 15 | VILG2 Lower Case Black (G400s/G400s Touch) | 90202895 | N | | | |
| 15 | VILG1 Lower Case Black (G500s/G500s Touch) | 90202858 | N | | | |
| 16 | DDR3 1600 2GB, M471B5773DH0-YK0 2GB DDR3L 1600 | 11200502 | * | | | |
| 16 | DDR3 1600 8GB, SM322NW08IAF 8GB DDR3L 1600 | 11201514 | * | | | |
| 16 | DDR3 1600 8GB, MT16KTF1G64HZ-1G6E1 8GB DDR3L 1600 | 11201304 | * | | | |
| 16 | DDR3 1600 2GB HMT425S6AFR6A-PB 2GB DDR3L 1600 | 11201299 | * | | | |
| 16 | DDR3 1600 2GB RMT3170ED58F8W-1600 2GB DDR3L 1600 | 11201835 | * | | | |
| 16 | DDR3 1600 2GB MT8KTF25664HZ-1G6M1 2GB DDR3L 1600 | 11200346 | * | | | |
| 16 | DDR3 1600 4GB M471B5273DH0-YK0 4GB DDR3L | 11200503 | * | | | |
| 16 | DDR3 1600 4GB HMT451S6AFR8A-PB 4GB DDR3L 1600 | 11201300 | * | | | |

Table 5. Parts list—Overall (continued)

| No. | FRU | FRU no. | CRU ID |
|-----|---|----------|--------|
| 16 | DDR3 1600 4GB RMT3170EB68F9W-1600 4GB DDR3L 1600 | 11201512 | * |
| 16 | DDR3 1600 4GB SM321NQ08ICF 4GB DDR3L 1600 | 11201834 | * |
| 16 | DDR3 1600 4GB MT8KTF51264HZ-1G6J1 4GB DDR3L 1600 | 11201342 | * |
| 16 | DDR3 1600 8GB M471B1G73BH0-YK0 8GB DDR3L 1600 | 11200504 | * |
| 16 | DDR3 1600 8GB HMT41GS6AFR8A-PB 8GB DDR3L 1600 | 11201301 | * |
| 17 | HDD, 320G 5400rpm ST320LT012 7mm 5.4K 320G HDD | 16200212 | ** |
| 17 | HDD, 320G 5400rpm HTS545032A7E380 RV 7mm 5.4K 320G HDD | 16200296 | ** |
| 17 | HDD, 320G 5400rpm MQ01ABF032 7mm 5.4K 320G HDD | 16200274 | ** |
| 17 | HDD, 320G 5400rpm MQ01ABD032 9.5mm 5.4K 320G HDD | 16200222 | ** |
| 17 | HDD, 320G 5400rpm WD3200BPVT 9.5mm 5.4K 320G HDD | 16200022 | ** |
| 17 | HDD, 500G 5400rpm ST500LM012 9.5mm 5.4K 500G HDD | 16200323 | ** |
| 17 | HDD, 500G 5400rpm HTS545050A7E380 RV 7mm 5.4K 500G HDD | 16200297 | ** |
| 17 | HDD, 500G 5400rpm ST500LT012 7mm 5.4K 500G HDD | 16200211 | ** |
| 17 | HDD, 500G 5400rpm MQ01ABF050 7mm 5.4K 500G HDD | 16200273 | ** |
| 17 | HDD, 500G 5400rpm MQ01ABD050 9.5mm 5.4K 500G HDD | 16200221 | ** |
| 17 | HDD, 500G 5400rpm WD5000LPVT-08G33T1 7mm 5.4K 500G HDD | 16200264 | ** |
| 17 | HDD, 750G 5400rpm ST750LM022 9.5mm 5.4K 750G HDD | 16200322 | ** |
| 17 | HDD, 750G 5400rpm HTS541075A9E680 9.5mm 5.4K 750G HDD | 16200192 | ** |
| 17 | HDD, 750G 5400rpm MQ01ABD075 9.5mm 5.4K HDD | 16200220 | ** |
| 17 | HDD, 750G 5400rpm WD7500BPVT-24HXZ 9.5mm 5.4K 750G HDD | 16004848 | ** |
| 17 | HDD, 1TB 5400rpm ST1000LM024 9.5mm 5.4K 1T HDD | 16200321 | ** |
| 17 | HDD, 1TB 5400rpm HTS541010A9E680 9.5mm 5.4K 1T HDD | 16200193 | ** |
| 17 | HDD, 1TB 5400rpm MQ01ABD100 9.5mm 5.4K 1T hDD | 16200219 | ** |
| 17 | HDD, 1TB 5400rpm WD10JPVT-24A1YT0 9.5mm 5.4K 1T HDD | 16200071 | ** |
| 17 | HDD, 1T Hybrid ST1000LM014 6G 9.5mm 1T SSHD (G500s) | 16200389 | ** |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch


Table 5. Parts list—Overall (continued)

| No. | FRU | FRU no. | CRU ID |
|-----|---|----------|--------|
| 17 | HDD, 500G Hybrid ST500LM000 6G 7mm 500G SSHD (G500s) | 16200391 | ** |
| 18 | WLAN, WiFi 1x1 BGN Cbt BCM94313HMG 1x1BGN HMC WLAN | 20200102 | N |
| 18 | WLAN, WiFi 1x1 BGN Liteon HB125 1x1BGN HMC WLAN | 20200223 | N |
| 18 | WLAN, WiFi 1x1 BGN+BT4.0 Cbt BCM943142HM 1x1BGN+BT4.0 HMC WLAN | 20200222 | N |
| 18 | WLAN, WiFi 1x1 BGN+BT4.0 Liteon WB225 1x1BGN+BT4.0 HMC WLAN | 20200224 | N |
| 18 | WLAN, Intel 135 1x1BGN+BT Intel 135 1x1BGN+BT PCIE HMC WLAN | 20200486 | N |
| 19 | VILG2 Thermal Door Black (G400s/G400s Touch) | 90202889 | N |
| 19 | VILG1 Thermal Door Black (G500s/G500s Touch) | 90202862 | N |
| 20 | ODD, 9.5 Rambo Tray-in HLDS GU70N 9.5 Rambo ODD | 25205807 | N |
| 20 | ODD, 9.5 Rambo Tray-in PLDS DU-8A5SH 9.5 Rambo ODD | 25205806 | N |
| 20 | ODD, 9.5 Rambo Tray-in Panasonic UJ8C2 9.5 Rambo ODD | 25210793 | N |
| 20 | ODD, 9.5 Blueray Rambo HLDS BU10N 9.5 BD Rambo ODD | 25209260 | N |
| 20 | ODD, 9.5 Blueray Rambo Panasonic UJ262 9.5 BD Rambo ODD | 25209259 | N |
| 21 | VILG2 ODD Bezel Black Rambo (G400s/G400s Touch) | 90202892 | N |
| 21 | VILG2 ODD Bezel Black BD (G400s/G400s Touch) | 90202893 | N |
| 21 | VILG1 ODD Bezel Black Rambo (G500s/G500s Touch) | 90202863 | N |
| 21 | VILG1 ODD Bezel Black BD (G500s/G500s Touch) | 90202864 | N |

LCD FRUs

In Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch, there are following types of LCDs.

- "14.0-in. HD TFT" G400s/G405s/G400s Touch
- "15.6-in. HD TFT" G500s/G505s/G500s Touch

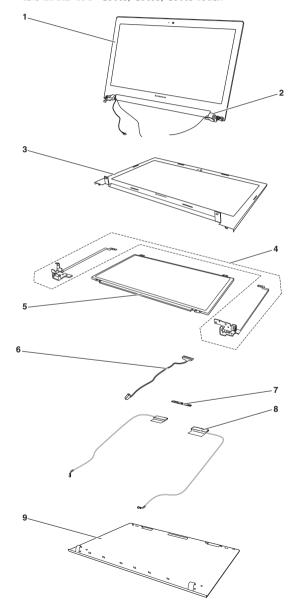

14.0-in. HD TFT (G400s/G405s/G400s Touch)

Table 6. Parts list—14.0-in. HD TFT

| 1 VILG2 LCD Module TS (G400s Touch) 90400135 N 2 VILG2 LCD Bezel Cap L+R TS (G400s Touch) 90202911 N 3 VILG2 LCD Bezel (G400s) 90202899 N 4 VILG2 LCD Bracket L+R (G400s) 90202900 N 4 VILG2 LCD Bracket L+R TS (G400s Touch) 90202901 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F AUO B140XTN03.0 9A HD G F LED1 NB LCD 18200625 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BDC LTN140AT28 L01 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BDC HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27- 401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1 AG S LED1 NB LCD 18200984 N 5 Panel, HD-S-AG LVDS 3.0t (| No. | FRU | FRU no. | CRU ID |
|--|-----|---|----------|--------|
| 3 VILG2 LCD Bezel (G400s) 90202899 N 4 VILG2 LCD Bracket L+R (G400s) 90202900 N 4 VILG2 LCD Bracket L+R TS (G400s Touch) 90202901 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F AUO B140XTN03.0 9A HD G F LED1 NB LCD 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27- 401 HD AG S LED1 NB LCD 18200984 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200984 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) GD LP140WHU-TLA1 HD G S LED1 NB LCD 182 | | | | |
| 4 VII.G2 LCD Bracket L+R (G400s) 90202900 N 4 VII.G2 LCD Bracket L+R TS (G400s Touch) 90202901 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200625 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200820 N 6 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200895 N 7 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200960 N 8 HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200960 N 9 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 10-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200761 N 10-F Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 10-F Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 10-F Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 10-F Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 10-F Panel, 14.0" Glare/White LED/3.6mm f | | | | |
| 4 VILG2 LCD Bracket L+R TS (G400s Touch) 90202901 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200625 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200895 N 6 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200996 N 7 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 8 HD-F CMI N140BGE-L43 HD G F LED1 NB LCD 18200761 N 9 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS 18200761 N 40 Panel, HD-S-AG LVDS 3.0t (For Touch) B LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27- 401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI 18200991 N 14000002.5 Panel, HD-S-AG LVDS 3.0t (For Touch) B LCD | 3 | VILG2 LCD Bezel (G400s) | 90202899 | N |
| 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F AUO B140XTN03.0 9A HD G F LED1 NB LCD 18200625 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F CMI N140BGE-L43 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, 4D-S-AG LVDS 3.0t (For Touch) AUO B140AT2-400 HD-S-AG LVDS 3.0t (For Touch) CMI N140BCE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BCE-LA3 HD AG S L | 4 | VILG2 LCD Bracket L+R (G400s) | 90202900 | N |
| HD-F AUO B140XTN03.0 9A HD G F LED1 NB LCD | 4 | VILG2 LCD Bracket L+R TS (G400s Touch) | 90202901 | N |
| 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD 18200820 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F CMI N140BGE-L43 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27-401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202905 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 7 VILG2 Camera 1M (G400s/ | 5 | Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS | 18200625 | N |
| HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD | | HD-F AUO B140XTN03.0 9A HD G F LED1 NB LCD | | |
| 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD 18200895 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F CMI N140BGE-L43 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27-401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003101 N 7 VILG2 Antenna (G400s) 90202907 N <td>5</td> <td>Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS</td> <td>18200820</td> <td>N</td> | 5 | Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS | 18200820 | N |
| HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD | | HD-F LGD LP140WH2 TLS1 HD G F LED1 NB LCD | | |
| 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F CMI N140BGE-L43 HD G F LED1 NB LCD 18200960 N 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27-401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202906 N 9 VI | 5 | Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS | 18200895 | N |
| HD-F CMI N140BGE-L43 HD G F LED1 NB LCD | | HD-F SDC LTN140AT28 L01 HD G F LED1 NB LCD | | |
| 5 Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS HD-F BOE HB140WX1-300 HD G F LED1 NB LCD 18200761 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27-401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 | 5 | Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS | 18200960 | N |
| HD-F BOE HB140WX1-300 HD G F LED1 NB LCD | | HD-F CMI N140BGE-L43 HD G F LED1 NB LCD | | |
| 5 Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27-401 HD AG S LED1 NB LCD 18200824 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 18200998 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202904 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202908 N | 5 | Panel, 14.0" Glare/White LED/3.6mm flat type/LVDS | 18200761 | N |
| 401 HD AG S LED1 NB LCD 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO B140XTN02.5 HW1A AG S LED1 NB LCD 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 6 VILG2 LCD Cable DIS (G400s) 6 VILG2 LCD Cable DIS (G400s) 6 VILG2 LCD Cable UMA (G400s) 7 VILG2 LCD Cable UMA TS (G400s Touch) 8 VILG2 Touch LCD Cable (G400s Touch) 90202905 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202906 N 9 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | | HD-F BOE HB140WX1-300 HD G F LED1 NB LCD | | |
| 5 Panel, HD-S-AG LVDS 3.0t (For Touch) AUO 18200998 N 5 B140XTN02.5 HW1A AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200984 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 5 | Panel, HD-S-AG LVDS 3.0t (For Touch) SDC 140AT27- | 18200824 | N |
| B140XTN02.5 HW1A AG S LED1 NB LCD 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | | 401 HD AG S LED1 NB LCD | | |
| 5 Panel, HD-S-AG LVDS 3.0t (For Touch) CMI N140BGE-LA3 HD AG S LED1 NB LCD 18200981 N 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable UMA (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 5 | , , , | 18200998 | N |
| N140BGE-LA3 HD AG S LED1 NB LCD 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD 18200984 N LP140WHU-TLA1 HD G S LED1 NB LCD 18200984 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | | | | |
| 5 Panel, HD-S-AG LVDS 3.0t (For Touch) LGD 18200984 N LP140WHU-TLA1 HD G S LED1 NB LCD P0202902 N 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 5 | | 18200981 | N |
| LP140WHU-TLA1 HD G S LED1 NB LCD 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | | | | |
| 6 VILG2 LCD Cable DIS (G400s) 90202902 N 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 5 | , | 18200984 | N |
| 6 VILG2 LCD Cable UMA (G400s) 90202903 N 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG2 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | | LP140WHU-TLA1 HD G S LED1 NB LCD | | |
| 6 VILG2 LCD Cable DIS TS (G400s Touch) 90202904 N 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 6 | VILG2 LCD Cable DIS (G400s) | 90202902 | N |
| 6 VILG2 LCD Cable UMA TS (G400s Touch) 90202905 N 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 6 | VILG2 LCD Cable UMA (G400s) | 90202903 | N |
| 6 VILG2 Touch LCD Cable (G400s Touch) 90202910 N 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 6 | VILG2 LCD Cable DIS TS (G400s Touch) | 90202904 | N |
| 7 VILG1 Camera 0.3M (G400s/G400s Touch) 90003101 N 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 6 | VILG2 LCD Cable UMA TS (G400s Touch) | 90202905 | N |
| 7 VILG1 Camera 1M (G400s/G400s Touch) 90003102 N 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 6 | VILG2 Touch LCD Cable (G400s Touch) | 90202910 | N |
| 8 VILG2 Antenna (G400s) 90202907 N 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 7 | VILG1 Camera 0.3M (G400s/G400s Touch) | 90003101 | N |
| 8 VILG2 Antenna TS (G400s Touch) 90202906 N 9 VILG2 LCD Cover Black (G400s) 90202908 N | 7 | VILG1 Camera 1M (G400s/G400s Touch) | 90003102 | N |
| 9 VILG2 LCD Cover Black (G400s) 90202908 N | 8 | VILG2 Antenna (G400s) | 90202907 | N |
| 7 | 8 | VILG2 Antenna TS (G400s Touch) | 90202906 | N |
| 9 VILG2 LCD Cover TS (G400s Touch) 90202909 N | 9 | VILG2 LCD Cover Black (G400s) | 90202908 | N |
| | 9 | VILG2 LCD Cover TS (G400s Touch) | 90202909 | N |

15.6-in. HD TFT (G500s/G505s/G500s Touch)

Table 7. Parts list—15.6-in. HD TFT

| No. | FRU | FRU no. | CRU ID |
|-----|--|----------|--------|
| 1 | VILG1 LCD Module TS (G500s Touch) | 90400134 | N |
| 2 | VILG1 Hinge Cover L+R TS (G500s Touch) | 90202887 | N |
| 3 | VILG1 LCD Bezel (G500s) | 90202875 | N |
| 4 | VILG1 LCD Bracket L+R TS (G500s Touch) | 90202877 | N |
| 4 | VILG1 LCD Bracket L+R (G500s) | 90202876 | N |
| 5 | Panel, 15.0" Glare/White LED/3.8mm flat type/LVDS, | 18200433 | N |
| | AUO B156XW04 V5 HD G F LED1 NB LCD | | |
| 5 | Panel, 15.0" Glare/White LED/3.8mm flat type/LVDS, | 18200896 | N |
| | SEC LTN156AT30-L01 HD G F LED1 NB LCD | | |
| 5 | Panel, 15.0" Glare/White LED/3.8mm flat type/LVDS, | 18200897 | N |
| | LGD LP156WH3-TLS1 HD G F LED1 NB LCD | | |
| 6 | VILG1 LCD Cable DIS TS (G500s Touch) | 90202880 | N |
| 6 | VILG1 LCD Cable UMA TS (G500s Touch) | 90202881 | N |
| 6 | VILG1 LCD Cable DIS (G500s) | 90202878 | N |
| 6 | VILG1 LCD Cable UMA (G500s) | 90202879 | N |
| 6 | VILG1 Touch LCD Cable (G500s Touch) | 90202886 | N |
| 7 | VILG1 Camera 0.3M (G500s/G500s Touch) | 90003101 | N |
| 7 | VILG1 Camera 1M (G500s/G500s Touch) | 90003102 | N |
| 8 | VILG1 Antenna (G500s) | 90202884 | N |
| 8 | VILG1 Antenna TS (G500s Touch) | 90202885 | N |
| 9 | VILG1 LCD Cover Black (G500s) | 90202882 | N |
| 9 | VILG1 LCD Cover TS (G500s Touch) | 90202883 | N |

Keyboard

Table 8. Parts list—Keyboard

| Language | | | P/N | CRU ID |
|----------|----------|-------------------------|----------|--------|
| | | English | 25211110 | N |
| | | U.K. English | 25211111 | N |
| | | Italian | 25211112 | N |
| | | Spanish | 25211113 | N |
| | | Turkish | 25211114 | N |
| | | Thai | 25211115 | N |
| | | Portuguese | 25211116 | N |
| | | Latin | 25211117 | N |
| | | Canadian English&French | 25211118 | N |
| | | Korean | 25211119 | N |
| | | Traditional Chinese | 25211120 | N |
| | | Russian | 25211121 | N |
| | | French | 25211122 | N |
| | | German | 25211123 | N |
| | Chicony | Arabic | 25211124 | N |
| | Citicony | Brazilian | 25211125 | N |
| | | Japanese | 25211126 | N |
| | | Dutch | 25211127 | N |
| | | Greek | 25211128 | N |
| | | Hebrew | 25211129 | N |
| | | Hungarian | 25211130 | N |
| | | Four Nordic countries | 25211131 | N |
| | | Belgian | 25211132 | N |
| G400s | | Icelandic | 25211133 | N |
| | | Slovenian | 25211134 | N |
| | | Swiss | 25211135 | N |
| | | International English | 25211136 | N |
| | | Czechoslovakian | 25211137 | N |
| | | Bulgarian | 25211138 | N |
| | | Indian | 25211139 | N |
| | | English | 25211140 | N |
| | | U.K. English | 25211141 | N |
| | | Italian | 25211142 | N |
| | | Spanish | 25211143 | N |
| | | Turkish | 25211144 | N |
| | | Thai | 25211145 | N |
| | | Portuguese | 25211146 | N |
| | | Latin | 25211147 | N |
| | Sunrex | Canadian English&French | 25211148 | N |
| | | Korean | 25211149 | N |
| | | Traditional Chinese | 25211150 | N |
| | | Russian | 25211151 | N |
| | | French | 25211152 | N |
| | | German | 25211153 | N |
| | | Arabic | 25211154 | N |
| | | Brazilian | 25211155 | N |
| | | Japanese | 25211156 | N |
| | | Dutch | 25211157 | N |

Table 8. Parts list—Keyboard

| Language | • | | P/N | CRU IE |
|----------|-------------|-------------------------|----------|--------|
| | | Greek | 25211158 | N |
| | | Hebrew | 25211159 | N |
| | | Hungarian | 25211160 | N |
| | | Four Nordic countries | 25211161 | N |
| | | Belgian | 25211162 | N |
| | Sunrex | Icelandic | 25211163 | N |
| | (continued) | Slovenian | 25211164 | N |
| | (| Swiss | 25211165 | N |
| | | International English | 25211166 | N |
| | | Czechoslovakian | 25211167 | N |
| | | Bulgarian | 25211168 | N |
| | | Indian | 25211169 | N |
| | | English | 25211170 | N |
| | | U.K. English | 25211171 | N |
| | | Italian | 25211172 | N |
| | | Spanish | 25211173 | N |
| | | Turkish | 25211174 | N |
| | | Thai | 25211175 | N |
| | | Portuguese | 25211176 | N |
| | | Latin | 25211177 | N |
| | | Canadian English&French | 25211178 | N |
| G400s | | Korean | 25211179 | N |
| | | Traditional Chinese | 25211180 | N |
| | | Russian | 25211181 | N |
| | | French | 25211182 | N |
| | | German | 25211183 | N |
| | | Arabic | 25211184 | N |
| | Darfon | Brazilian | 25211185 | N |
| | | Japanese | 25211186 | N |
| | | Dutch | 25211187 | N |
| | | Greek | 25211188 | N |
| | | Hebrew | 25211189 | N |
| | | Hungarian | 25211190 | N |
| | | Four Nordic countries | 25211191 | N |
| | | Belgian | 25211192 | N |
| | | Icelandic | 25211193 | N |
| | | Slovenian | 25211194 | N |
| | | Swiss | 25211195 | N |
| | | International English | 25211196 | N |
| | | Czechoslovakian | 25211197 | N |
| | | Bulgarian | 25211198 | N |
| | | Indian | 25211199 | N |

Table 8. Parts list—Keyboard

| Language | | | P/N | CRU ID |
|----------|----------|-------------------------|----------|--------|
| | | English | 25211020 | N |
| | | U.K. English | 25211021 | N |
| | | Italian | 25211022 | N |
| | | Spanish | 25211023 | N |
| | | Turkish | 25211024 | N |
| | | Thai | 25211025 | N |
| | | Portuguese | 25211026 | N |
| | | Latin | 25211027 | N |
| | | Canadian English&French | 25211028 | N |
| | | Korean | 25211029 | N |
| | | Traditional Chinese | 25211030 | N |
| | | Russian | 25211031 | N |
| | | French | 25211032 | N |
| | | German | 25211033 | N |
| | Chicony | Arabic | 25211034 | N |
| | Cilicony | Brazilian | 25211035 | N |
| | | Japanese | 25211036 | N |
| | | Dutch | 25211037 | N |
| | | Greek | 25211038 | N |
| | | Hebrew | 25211039 | N |
| | | Hungarian | 25211040 | N |
| | | Four Nordic countries | 25211041 | N |
| | | Belgian | 25211042 | N |
| G500s | | Icelandic | 25211043 | N |
| Goods | | Slovenian | 25211044 | N |
| | | Swiss | 25211045 | N |
| | | International English | 25211046 | N |
| | | Czechoslovakian | 25211047 | N |
| | | Bulgarian | 25211048 | N |
| | | Indian | 25211049 | N |
| | | English | 25211050 | N |
| | | U.K. English | 25211051 | N |
| | | Italian | 25211052 | N |
| | | Spanish | 25211053 | N |
| | | Turkish | 25211054 | N |
| | | Thai | 25211055 | N |
| | | Portuguese | 25211056 | N |
| | | Latin | 25211057 | N |
| | Sunrex | Canadian English&French | 25211058 | N |
| | | Korean | 25211059 | N |
| | | Traditional Chinese | 25211060 | N |
| | | Russian | 25211061 | N |
| | | French | 25211062 | N |
| | | German | 25211063 | N |
| | | Arabic | 25211064 | N |
| | | Brazilian | 25211065 | N |
| | | Japanese | 25211066 | N |
| | | Dutch | 25211067 | N |

Table 8. Parts list—Keyboard

| Language | • | | P/N | CRU II |
|----------|-------------|-------------------------|----------|--------|
| | | Greek | 25211068 | N |
| | | Hebrew | 25211069 | N |
| | | Hungarian | 25211070 | N |
| | | Four Nordic countries | 25211071 | N |
| | | Belgian | 25211072 | N |
| | Sunrex | Icelandic | 25211073 | N |
| | (continued) | Slovenian | 25211074 | N |
| | | Swiss | 25211075 | N |
| | | International English | 25211076 | N |
| | | Czechoslovakian | 25211077 | N |
| | | Bulgarian | 25211078 | N |
| | | Indian | 25211079 | N |
| | | English | 25211080 | N |
| | | U.K. English | 25211081 | N |
| | | Italian | 25211082 | N |
| | | Spanish | 25211083 | N |
| | | Turkish | 25211084 | N |
| | | Thai | 25211085 | N |
| | | Portuguese | 25211086 | N |
| | | Latin | 25211087 | N |
| 7500 | | Canadian English&French | 25211088 | N |
| G500s | | Korean | 25211089 | N |
| | | Traditional Chinese | 25211090 | N |
| | | Russian | 25211091 | N |
| | | French | 25211092 | N |
| | | German | 25211093 | N |
| | | Arabic | 25211094 | N |
| | Darfon | Brazilian | 25211095 | N |
| | | Japanese | 25211096 | N |
| | | Dutch | 25211097 | N |
| | | Greek | 25211098 | N |
| | | Hebrew | 25211099 | N |
| | | Hungarian | 25211100 | N |
| | | Four Nordic countries | 25211101 | N |
| | | Belgian | 25211102 | N |
| | | Icelandic | 25211103 | N |
| | | Slovenian | 25211104 | N |
| | | Swiss | 25211105 | N |
| | | International English | 25211106 | N |
| | | Czechoslovakian | 25211107 | N |
| | | Bulgarian | 25211108 | N |
| | | Indian | 25211109 | N |

Miscellaneous parts

Table 9. Parts list—Miscellaneous parts

| FRU | P/N | CRU ID |
|--|----------|--------|
| System miscellaneous parts: | | N |
| (a) VILG1 HDD Bracket (G400s/G500s/G400s Touch/ G500s Touch) | 90202866 | |
| • (b) VILG1 ODD Bracket (G500s/G500s Touch) | 90202865 | |
| • (c) VILG2 Rubber Foot Black (G400s/G400s Touch) | 90202890 | |
| • (c) VILG1 Rubber Foot Black (G500s/G500s Touch) | 90202860 | |
| Cable miscellaneous parts: | | N |
| • (d) VILG2 TP Cable (G400s/G400s Touch) | 90202897 | |
| • (d) VILG1 TP Cable (G500s/G500s Touch) | 90202874 | |
| (e) VILG1 DC-IN Cable DIS (G400s/G500s/G400s Touch/G500s Touch) | 90202871 | |
| (e) VII.G1 DC-IN Cable UMA (G400s/G500s/G400s Touch/G500s Touch) | 90202872 | |
| Note: Italicized letters in parentheses are references to the | | |
| exploded view in "Overall" on page 71. | | |

AC adapters

Table 10. Parts list—3-pin AC adapters

| FRU | P/N | CRU ID |
|---|----------|--------|
| 65W, Delta ADLX65NDC3A 20V3.25A adapter | 36200249 | * |
| 65W, Liteon ADLX65NLC3A 20V3.25A adapter | 36200251 | * |
| 65W, Chicony ADLX65NCC3A 20V3.25A adapter | 36200253 | * |
| 90W, Delta ADLX90NDC3A 20V4.5A adapter | 36200250 | * |
| 90W, Liteon ADLX90NLC3A 20V4.5A adapter | 36200252 | * |
| 90W, Chicony ADLX90NCC3A 20V4.5A adapter | 36200254 | * |

Screws

Table 11. Parts list --screws

| FRU | P/N | CRU ID |
|---|----------|--------|
| VILG1 SCREW JAT10 THML SPRING ASSY (G400s/ | 90202913 | N |
| G500s/G400s Touch/G500s Touch) | 70202718 | 1 |
| VILG1 SCREW 2.48D 6.0L K 5.5D 0.8T ZKNL+ (G400s/ | 90202914 | N |
| G500s/G400s Touch/G500s Touch) | 70202711 | 1, |
| VILG1 SCREW 2D 2L K 4.6D ZK NL + CR3+ (G400s/G500s/ | 90202915 | N |
| G400s Touch/G500s Touch) | 70202718 | 1 |
| VILG1 SCREW 2 2.0D 2L K 7D ZK NL + CR3+ (G400s/ | 90202916 | N |
| G500s/G400s Touch/G500s Touch) | | -, |
| VILG1 SCREW 2.0D 3.5L K 3.7D BNI NL+0.5T (G400s/ | 90202919 | N |
| G500s/G400s Touch/G500s Touch) | | -, |
| VILG1 SCREW 2.5D 3L K 4.5D 0.5T ZK NL + (G400s/G500s/ | 90202921 | N |
| G400s Touch/G500s Touch) | | |
| VILG1 SCREW 3.0D 3.0L K 4.9D NI + (G400s/G500s/G400s | 90202922 | N |
| Touch/G500s Touch) | | |
| VILG2 SCREW 2.5D 3.0L K 5.3D NI NL + (G400s/G400s | 90202924 | N |
| Touch) | | |
| VILG2 SCREW 1.98D 9.0L K 5.3D ZK NL+CR3+ (G400s/ | 90202925 | N |
| G400s Touch) | | |
| VILG2 SCREW 2.5D 4.0L K 4.6D NI NL + (G400s/G400s | 90202926 | N |
| Touch) | | |
| VILG2 SCREW 2D 5L K 4.6D NI NL + (G400s/G400s Touch) | 90202927 | N |
| VILG1 SCREW 2D 3L K 8D ZK NL + (G500s/G500s Touch) | 90202917 | N |
| VILG1 SCREW 2D 5L K 4.6D ZK NL + CR3+ (G500s/G500s | 90202918 | N |
| Touch) | | |
| VILG1 SCREW 2.5D 3.5L K 5.3D NI NL+0.5T (G500s/G500s | 90202920 | N |
| Touch) | | |
| VILG1 SCREW 2.5D 5.0L K 4.6D ZK NL+CR3+ (G400s/ | 90202923 | N |
| G500s/G500s Touch) | | |

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

Table 12. Parts list—3-pin power cords

| Region | P/N | CRU ID |
|---|-----------|--------|
| CCC | 145000600 | * |
| • LINETEK PC323+RVV300/300+LS15 1m | | |
| Argentina | 145000599 | * |
| • LINETEK LS15+H03VV-F+LP39 1m | | |
| Danmark • LINETEK LS15+H03VV-F+LP-38 1m | 145000598 | * |
| Switzerland | 145000597 | * |
| LINETEK LS15+H03VV-F+LP-37 1m | | |
| Brazil | 145000596 | * |
| LINETEK LS15 H03VV-F LP26A 1m | | |
| Israel | 145000595 | * |
| • LINETEK LS15+H03VV-F+LP-41 1m | | |
| UL | 145000594 | * |
| • LINETEK LP-30B + SPT-2 + LS15 1m | | |
| UK | 145000593 | * |
| • LINETEK LP-61L+ H03VV-F+ LS15 1m | | |
| Indian | 145000592 | * |
| • LINETEK PE-361+ H05VV-F+ LS15 1m | | |
| Italy | 145000591 | * |
| • LINETEK LS15+H03VV-F+PE-336 1m | | |
| Korea | 145000590 | * |
| • LINETEK LS15+H05VV-F+LP-E04A 1m | | |
| Australia | 145000589 | * |
| • LINETEK LS15+H03VV-F+LP-23A 1m | | |
| Taiwan | 145000588 | * |
| • LINETEK LS15+VCTF+LP-53 1m | | |
| Japan | 145000587 | * |
| • LINETEK LS15+VCTF+LP-54 1m | | |
| Africa | 145000586 | * |
| • LINETEK LS15+H03VV-F+PE-364 1m | | |
| CE | 145000585 | * |
| • LINETEK LP-34+H03VV-F + LS15 1m | | |
| CCC | 145000568 | * |
| • Longwell LSG-31+RVV300/300+LS-18 1m | | |
| Argentina | 145000567 | * |
| Longwell LP-24+H03VV-F+LS-18 1m | | |
| Danmark | 145000566 | * |
| Longwell LP-40+H03VV-F+LS-18 1m | | |
| Switzerland | 145000565 | * |
| Longwell LP-37+H03VV-F+LS-18 1m | | |

Table 12. Parts list—3-pin power cords (continued)

| Region | P/N | CRU ID |
|---|------------|--------|
| Brazil | 145000564 | * |
| • Longwell LP-46+H03VV-F+LS-18 1m | 143000364 | |
| Israel | 145000563 | * |
| Longwell LP-41+H03VV-F+LS-18 1m | 11000000 | |
| UL | 145000562 | * |
| Longwell LP-30B+SPT-2 18AWG+LS-18 1m | | |
| UK | 145000561 | * |
| Longwell LP-61L+H03VV-F+LS-18 1m | | |
| Indian | 145000560 | * |
| Longwell LP-67+BIS+LS-18 1m | | |
| Italy | 145000559 | * |
| • Longwell LP-22+H03VV-F+LS-18 1m | 1.45000550 | * |
| Korea | 145000558 | * |
| Longwell LP-486+KTLH03VV-F+LS-5 1m Australia | 145000557 | * |
| Longwell LP-23A+LFC-3R+LS-18 1m | 143000337 | |
| Taiwan | 145000556 | * |
| Longwell LP-71+VCTF+LS-33 1m | 11000000 | |
| Japan | 145000555 | * |
| Longwell LP-54+VCTF+LS-18 1m | | |
| Africa | 145000554 | * |
| Longwell LP-39+H03VV-F+LS-18 1m | | |
| CE | 145000553 | * |
| Longwell LP-34A+H03VV-F+LS-18 1m | | |
| CCC | 145000538 | * |
| VOLEX GB10S3+RVV 300/500+VAC5S 1m | | |
| Argentina | 145000528 | * |
| VOLEX VA2073+H03VV-F+VAC5S 1m | 145000524 | * |
| Denmark • VOLEX MP233D+H03VV-F+VAC5S 1m | 145000534 | , |
| Switzerland | 145000524 | * |
| VOLEX MP232+H03VV-F+VAC5S 1m | 143000324 | |
| Brazil | 145000527 | * |
| VOLEX CH10S3+H03VV-F+VAC5S 1m | | |
| Israel | 145000526 | * |
| VOLEX SI16S3+H03VV-F+VAC5S 1m | | |
| UL | 145000537 | * |
| Volex US15S3+SPT-2 +VAC5S 1m | | |
| UK | 145000605 | * |
| VOLEX MP5004+H03VV-F+VAC5S 1m | | |
| Indian | 145000536 | * |
| VOLEX IA6A3+IS694+VAC5S 1m | | |
| Italy | 145000535 | * |
| VOLEX IT10S3+HO3VV-F+VAC5S 1m | | |

Lenovo G400s/G405s/G400s Touch/G500s/G505s/G500s Touch

Table 12. Parts list—3-pin power cords (continued)

| Region | P/N | CRU ID |
|-------------------------------|-----------|--------|
| Korea | 145000533 | * |
| VOLEX M2511+KETI IEC+VAC5S 1m | | |
| Australia | 145000532 | * |
| VOLEX AU10S3+H03VV-F+VAC5S 1m | | |
| Taiwan | 145000531 | * |
| VOLEX TW15CS3+VCTF+VAC5S 1m | | |
| Japan | 145000530 | * |
| VOLEX VAC5S+VCTF+M755 1m | | |
| CE | 145000525 | * |
| VOLEX M2511+HO3VV-F+VAC5S 1m | | |

Table 13. Parts list—power cords

| Region | P/N | CRU ID |
|--|-----------|--------|
| UK | 145500000 | * |
| • lux 0031+H03VV-F 0.75/3C+0011 1m | | |
| Europe | 145500001 | * |
| • lux 0033+H03VV-F 0.75/3C+0011 1m | | |
| US | 145500002 | * |
| • lux 0014+SPT-2 60°C 18/3C+0016 1m | | |
| China | 145500003 | * |
| • lux 0036+RVV 300/300 0.75/3C+0002 1m | | |
| Indian | 145500004 | * |
| • lux 0046+IS694 0.75/3C+0011 1m | | |
| Japan | 145500005 | * |
| • lux 0018(E)+VCTF 0.75/3C+0021 1m | | |
| Australia | 145500006 | * |
| • lux 0038+H03VV-F 0.75/3C+0011 1m | | |
| Taiwan | 145500007 | * |
| • lux 0019+VCTF 0.75/3C+0021 1m | | |
| Korea | 145500008 | * |
| • lux 0033+H03VV-F 0.75/3C+0011 1m | | |
| Italy | 145500009 | * |
| • lux 0029+H03VV-F 0.75/3C+0011 1m | | |
| South Africa | 145500010 | * |
| • lux 0044+H03VV-F 0.75/3C+0011 1m | | |
| Brazil | 145500011 | * |
| • lux 0034+H03VV-F 0.75/3C+0011 1m | | |
| Israel | 145500012 | * |
| • lux 0041+H03VV-F 0.75/3C+0011 1m | | |
| Switzerland | 145500013 | * |
| • lux 0027+H03VV-F 0.75/3C+0011 1m | | |
| Denmark | 145500014 | * |
| • lux 0048+H03VV-F 0.75/3C+0011 1m | | |
| Argentina | 145500015 | * |
| • lux 0040+H03VV-F 0.75/3C+0011 1m | | |

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo OneKey

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, products, or service names may be trademarks or service marks of others.