 
 






## THE PATTERN SELECTOR

 

 



The desired pattern can be selected by turning the pattern selector dial. The marks on the dial correspond to the patterns shown on the panel respectively, as follows;

- A (  ) straight stitch, middle needle position
- B (  ) straight stitch, left needle position
- C (  ) zigzag stitch with variable width
- D (  ) tricot stitch
- E (  ) stretch blind stitch
- 1F → 2F<sup>4</sup> → F<sub>3</sub> → 2F<sup>4</sup> automatic buttonhole sewing
- G (  ) reverse blind stitch

 
### Selecting Stretch Stitch:



When sewing stretch stitch, set the stitch length dial at "S.S."

When you release the "S.S." engagement on the dial, the stretch stitch mechanism will be off automatically.

- A (  ) triple straight stretch stitch, middle needle position.
- B (  ) triple straight stretch stitch, left needle position
- C (  ) triple zigzag stretch stitch or ric-rac stitch
- D (  ) feather stitch
- E (  ) fancy stretch stitch or blanket stitch
- G (  ) overlock stitch

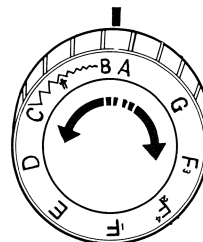Note: \*Raise the needle to its highest position before turning the pattern selector.



If you use a twin needle, zigzag stitch width should be in the range “” (zigzag width less than “” mark).

