



## REMOVING THE BOBBIN CASE AND BOBBIN

- ① Raise the presser foot and turn the balance wheel towards you until the thread take-up lever is at its highest position.

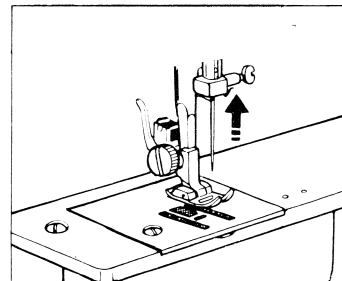

- ② Open the shuttle cover.

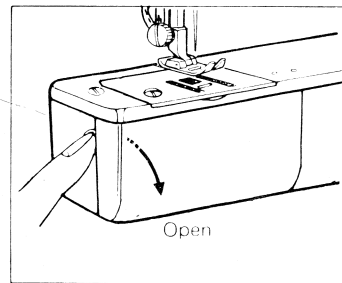

- ③ Open hinged latch of bobbin case and pull bobbin case out of machine.  
Release the latch and the bobbin will fall out. As long as you hold the bobbin case latch open, the bobbin cannot drop out.

