

Figure 1. Model RF302 - Isometric View

ELECTROSURGERY UNIT (ESU) PERFORMANCE RECORD			
Model Tested By	Serial No. Date		
Load	Output In Watts		
ESU Setting	Cut	Coag	
			
Isolation Test: O.K. Not Satisfactory Heavy Load Test Output: Low Frequency Output: Negligible Not Satisfactory Tag RF3R THOUSEL, VI GET: 1111			

Figure 2. RF3R Tag

SPECIFICATIONS

Selectable Loads and Ranges (Monopolar and Bipolar)

Load (Ohms)	Range (Watts)	
50	50	
100	100	
100	300	
200	300	
300	300	
400	500	
500	500	

Isolation Test Range: 0 - 50 Watts with 200-Ohm

Load from Patient Plate, Active Electrode, and Chassis

Current Range: 0 - 500 mA

Return Fault: 150 picofarads

Frequency Response: 0 - 5 MHz

Frequency Response: (Filter Pushed) 0 - 50 kHz

Load Accuracy: $\pm 2\%$ at 50 ohms

± 1.5% at 100 ohms + 1% 200 to 500 ohms

Meter Accuracy: $\pm 2\%$

Power Output Accuracy: $\pm 5\%$ (Calibrated in Watts)

REM Test: Normal 24.6 Ohm Resistance,

137.0 Ohms with REM Switch

Activated

Oscilloscope: Isolated (Uncalibrated)

Power Requirements: None

Measuring Technique: RF Thermocouples

Weight: 5.4 kg (12 lbs)

Dimensions: 28 cm X 23 cm X 18 cm

- (11" X 9.1" X 7")

ACCESSORIES

Description	Quantity Supplied	Bio-Tek <u>Part Number</u>
Complete Set of Leads	-	3020600
Red Lead	1	
Black Lead	2	
White Lead	1	
Green Lead	1	And the second s
Large Clamp	1	7770014
Alligator	3	48009
RF3R Tags	100	93008
User's Guide	1	3021005
Ground Adapter	1	48005
Fuse	5	46012
Warranty Card	1	-

NOTE: Figure 3 on the following page shows the various accessories provided with the Model RF302.

INSTALLATION

<u>Operating Precautions</u> - Refer to the manual's inside front cover for precautions that must be followed to ensure the safety of the RF302 operator.

<u>Unpacking Instructions</u> - Inspect the RF302 for cracks or scratches on either the panel or the case. Check the meter needle to ensure that it is intact. Carefully inspect the handle to assure that it is firmly attached to the case. If any damage is found, call BIO-TEK Instruments immediately at: 1 (800) 451-5172.

<u>Preparations for use</u> - Find a relatively level surface on which to place the RF302. Unlatch the locks on the unit and place it facing the operator so that the meter scale can be easily read.