

HOW TO CONNECT THE MACHINE TO THE POWER SUPPLY

1. Fit the machine plug into the machine.
2. Plug the machine to the power supply.

Note: *Before plugging in the machine, ensure that the voltage and number of cycles indicated, is conformed to your electrical power supply.

HOW TO USE THE SPEED CONTROLLER

Sewing speed can be varied by the speed controller. The harder you press on the controller, the faster the machine runs.

Note: *By releasing the controller, the machine stops running automatically.

*Before using the machine, practice controlling the speed without threading.

SEWING LAMP

The sewing lamp is located behind the face plate.

Bulb type (A) : ● To remove ... Unscrew
● To replace ... Screw

Bulb type (B) : ● To remove ... Push and twist counter-clockwise
● To replace ... Push and twist clockwise

Note: *Before replacing a bulb, disconnect the machine from the power supply.

*Bulbs are available from sewing machine retailers. (Use a 15-Watt bulb)

Caution!

Before leaving the machine, changing parts or doing any other work on it, always disconnect the plug from the wall socket.

Never place anything on the speed controller, otherwise the machine will start inadvertently or the controller or motor may burn out.

