

## THREADING THE NEEDLE THREAD

Move the thread take-up lever to its highest position by turning the balance wheel towards you.

Lift the presser foot by raising the presser foot lifter, and thread the machine as follows:

- ① Pass the thread through the guide at the right side.
- ② Pass the thread through the thread guide behind the face plate.  
Hold the spool of thread with your right hand and draw the thread along the groove between top cover and face plate.
- ③ Lead the thread down around the check spring holder.
- ④ Turn up check spring holder.
- ⑤ Draw the thread from left to right over the thread take-up lever.
- ⑥ Then down through the lower thread guide.
- ⑦ Slide the thread through the guide at the bottom end of the needle bar (needle bar thread guide).
- ⑧ Thread needle eye from the front and pull about 15 cm (6 inches).

