



# *Lenovo Y400/Y500*

## *Hardware Maintenance Manual*



**Note:**

Before using this information and the product it supports, be sure to read the general information under “Notices” on page 97.

**First Edition (September 2012)**

**© Copyright Lenovo 2012. All rights reserved.**

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2012 Lenovo

# Contents

## About this manual.....iv

## Safety information.....1

|                                                                     |    |
|---------------------------------------------------------------------|----|
| General safety .....                                                | 2  |
| Electrical safety .....                                             | 3  |
| Safety inspection guide .....                                       | 5  |
| Handling devices that are sensitive to electrostatic discharge..... | 6  |
| Grounding requirements .....                                        | 6  |
| Safety notices: multilingual translations .....                     | 7  |
| Laser compliance statement.....                                     | 14 |

## Important service information .....16

|                                                                 |    |
|-----------------------------------------------------------------|----|
| Strategy for replacing FRUs.....                                | 16 |
| Strategy for replacing a hard disk drive .....                  | 17 |
| Important notice for replacing a system board .....             | 17 |
| Important information about replacing RoHS compliant FRUs ..... | 18 |

## General checkout.....19

|                                     |    |
|-------------------------------------|----|
| What to do first .....              | 20 |
| Power system checkout .....         | 21 |
| Checking the AC adapter .....       | 21 |
| Checking operational charging ..... | 21 |
| Checking the battery pack .....     | 22 |

## Related service information.....23

|                                                                 |    |
|-----------------------------------------------------------------|----|
| Restoring the factory contents by using Recovery Disc Set ..... | 23 |
| Start Recovery Disc (one disc).....                             | 23 |
| Operating System Recovery Disc (one or more discs) .....        | 23 |
| Applications and Drivers Recovery Disc (one or more discs)..... | 23 |
| Supplemental Recovery Disc .....                                | 23 |
| Passwords .....                                                 | 24 |
| Power-on password .....                                         | 24 |
| Hard-disk password .....                                        | 24 |
| Supervisor password .....                                       | 24 |
| Power management .....                                          | 25 |
| Screen blank mode .....                                         | 25 |
| Putting your computer to sleep.....                             | 25 |
| Shutting down the computer.....                                 | 26 |

## Lenovo Y400/Y500 .....27

|                              |    |
|------------------------------|----|
| Specifications .....         | 27 |
| Status indicators .....      | 30 |
| Fn key combinations.....     | 32 |
| FRU replacement notices..... | 33 |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| Screw notices .....                                                                 | 33 |
| Removing and replacing an FRU .....                                                 | 34 |
| 1010 Battery pack .....                                                             | 35 |
| 1020 Dummy card.....                                                                | 36 |
| 1030 Optical drive.....                                                             | 37 |
| 1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover ..... | 38 |
| 1050 Hard disk drive .....                                                          | 39 |
| 1060 DIMM .....                                                                     | 41 |
| 1070 PCI Express Mini Card for wireless LAN/WAN .....                               | 42 |
| 1080 Keyboard.....                                                                  | 44 |
| 1090 Keyboard bezel .....                                                           | 47 |
| 1100 System board .....                                                             | 51 |
| 1110 LCD unit.....                                                                  | 55 |
| 1120 Fan assembly and Heat Sink assembly.....                                       | 58 |
| 1130 CPU .....                                                                      | 60 |
| 1140 Base cover, speakers and power assembly.....                                   | 61 |
| 1150 LCD front bezel.....                                                           | 66 |
| 1160 LCD panel, LCD cable and hinges .....                                          | 68 |
| 1170 Integrated camera .....                                                        | 72 |
| Locations .....                                                                     | 73 |
| Front view .....                                                                    | 73 |
| Right-side view .....                                                               | 74 |
| Bottom and Left-side view .....                                                     | 75 |
| Parts list .....                                                                    | 76 |
| Overall.....                                                                        | 77 |
| LCD FRUs .....                                                                      | 83 |
| Keyboard.....                                                                       | 86 |
| Miscellaneous parts.....                                                            | 92 |
| AC adapters.....                                                                    | 93 |
| Screw .....                                                                         | 93 |
| Power cords .....                                                                   | 94 |

## Notices .....97

|                  |    |
|------------------|----|
| Trademarks ..... | 98 |
|------------------|----|

---

## About this manual

---

This manual contains service and reference information for the following Lenovo product:

**IdeaPad Y400/Y500**

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

**Important:**

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.



---

## **Safety information**

---

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo computer:

- see “General safety” on page 2
- see “Electrical safety” on page 3
- see “Safety inspection guide” on page 5
- see “Handling devices that are sensitive to electrostatic discharge” on page 6
- see “Grounding requirements” on page 6
- see “Safety notices: multilingual translations” on page 7
- see “Laser compliance statement” on page 14

## General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
  1. Make sure that you can stand safely without slipping.
  2. Distribute the weight of the object equally between your feet.
  3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
  4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip it over.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

**Attention:** Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

## Electrical safety

Observe the following rules when working on electrical equipments.

**Important:**

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
  - Performing a mechanical inspection
  - Working near power supplies
  - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
  - Ensure that another person, familiar with the power-off controls, is near you.

**Attention:** Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

**Attention:** An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
  - Power supply units
  - Pumps
  - Blowers and fans
  - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
  - Use caution: do not become a victim yourself.
  - Switch off the power.
  - Send the victim to get medical aid.

## **Safety inspection guide**

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
  - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
  - b. The power cord should be the type specified in the parts list.
  - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

### Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

**Notes:**

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

**Notes:**

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

### Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

## Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

### Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש ללטלט את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altre parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

## Safety notice 2

### **⚠ DANGER**

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין למפרק סוללות המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לשלוק את הסוללה בנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.



### Safety notice 3

#### DANGER

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארז הסוללה מכיל כמויות קטנות של ניקל  
וקדמונים. אין לפרק את מארז הסוללה, להשליך  
אותו לאש או למים או לקצר אותו. יש לשלוק את  
מארז הסוללה הסוללה כנדרש על ידי התקנות  
והחוקים המקומיים. יש להשתמש רק בסוללה  
המופיעה ברשימת החלקים המתאימה בזמן החלפת  
מארז הסוללה. שימוש בסוללה לא מתאימה עלול  
לגרום להצתה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

#### Safety notice 4

##### **DANGER**

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לשלק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לשלק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לסכנת שריפה או התפוצצות.

La batteria di supporto e una batteria al litio e può incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100℃(212°F)以上の加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

**Safety notice 5**

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניכם או ידיכם, שטפו את האזורים הנוגעים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún

#### **Safety notice 6**

##### **⚠ DANGER**

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

#### **Safety notice 7**

##### **⚠ DANGER**

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארזת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

#### Safety notice 8

##### **DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב,  
לנתק את כל כבלי החשמל מהשקע, להסיר את  
אט המארז הסוללה, ואז לנתק כבלי חיבור אחרים  
אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRUを取り外す前に、ThinkPadの電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

## Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállításoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

 **DANGER**

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿直视激光束，请勿直接查看视觉仪器，并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhnite sa priamemu pohľadu a neľadte priamo s optickými nástrojmi do lúča a vyhnite sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

---

## Important service information

---

This chapter presents the following important service information:

- see “Strategy for replacing FRUs” on page 16
  - see “Strategy for replacing a hard disk drive” on page 17
  - see “Important notice for replacing a system board” on page 17
- see “Important information about replacing RoHS compliant FRUs” on page 18

### **Important:**

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:  
<http://consumersupport.lenovo.com/>.

---

## Strategy for replacing FRUs

### **Before replacing parts:**

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://consumersupport.lenovo.com/>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.



Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

**Attention:** The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

### **Strategy for replacing a hard disk drive**

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

**Attention:** The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

### **Important notice for replacing a system board**

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

**Attention:** When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

**Important information about replacing RoHS compliant FRUs**

**RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.**

**Note:** RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo’s requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

| Products marketed before June 2006 |                 | Products marketed after June 2006 |                 |
|------------------------------------|-----------------|-----------------------------------|-----------------|
| Current or original part           | Replacement FRU | Current or original part          | Replacement FRU |
| Non-RoHS                           | Can be Non-RoHS | Must be RoHS                      | Must be RoHS    |
| Non-RoHS                           | Can be RoHS     |                                   |                 |
| Non-RoHS                           | Can sub to RoHS |                                   |                 |
| RoHS                               | Must be RoHS    |                                   |                 |

**Note:** A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

---

## General checkout

---

This chapter presents the following information:

- see “What to do first” on page 20
- see “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

**Important notes:**

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **When you replace FRUs, use new nylon-coated screws.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

## What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

**Note for warranty:** During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

### **The following are not covered under warranty:**

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

### **The following symptoms might indicate damage caused by nonwarranted activities:**

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

## Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- see “Checking the AC adapter” on page 21
- see “Checking operational charging” on page 21
- see “Checking the battery pack” on page 22


### Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:

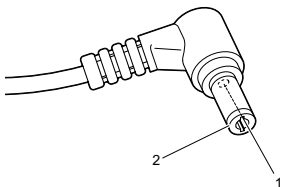

| Pin | Voltage (V DC) |
|-----|----------------|
| 1   | +20            |
| 2   | 0              |

**Note:** Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
  - Replace the system board.
  - If the problem persists, go to see “Lenovo Y400/Y500” on page 27.

**Note:** Noise from the AC adapter does not always indicate a defect.

### Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

**Checking the battery pack**


Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

**Note:** If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

To check the battery pack, follow the steps below:

- 1. Turn off the computer.
- 2. Remove the battery pack and measure the voltage between battery terminals 1 (+) and 7 (-). See the following figure:

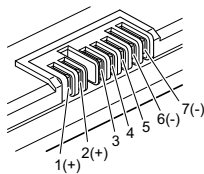

| Terminal | Voltage (V DC) |
|----------|----------------|
| 1        | +0 to +14      |
| 7        | Ground (-)     |

- 3. If the voltage is less than +11.0 V DC, the battery pack has been discharged.  
**Note:** Recharging will be continued for at least 3 hours, even though the indicator does not light on.  
If the voltage is still less than +11.0 V DC after recharging, replace the battery.
- 4. If the voltage is more than +11.0 V DC, measure the resistance between battery terminals 5 and 7. The resistance must be 4 to 30 KΩ.  
If the resistance is not correct, replace the battery pack. If the resistance is correct, replace the system board.

---

## Related service information

---

This chapter presents the following information:

- see “Restoring the factory contents by using Recovery Disc Set” on page 23
- see “Passwords” on page 24
- see “Power management” on page 25

### Restoring the factory contents by using Recovery Disc Set

When the hard disk drive or solid state drive is replaced because of a failure, no product recovery program is on the new drive. In this case, you must use the *Recovery Disc Set* for the computer. Order the *Recovery Disc Set* and the drive at the same time so that you can recover the new drive with the pre-installed software when they arrive.

The *Recovery Disc Set* consists of the following set of DVDs to restore the computer to the original factory configuration.

#### Start Recovery Disc (one disc)

This disc is used to format the hard disk drive and initiate the recovery process.

#### Operating System Recovery Disc (one or more discs)

This disc restores the Microsoft Windows operating system.

#### Applications and Drivers Recovery Disc (one or more discs)

This disc restores the pre-installed applications and drivers on the computer.

#### Supplemental Recovery Disc

This disc contains additional content, such as software for specific models and updates to the software that was preloaded on the computer. Not all recovery disc sets come with a *Supplemental Recovery Disc*.

To restore the computer to the original factory configuration using the recovery disc set, do the following:

1. Insert the bootable *Start Recovery Disc* into the optical drive.
2. Start the computer. When the Lenovo logo comes up, immediately press F12; on the boot sequence menu, select the optical drive as the first boot-up device. The computer will boot from the *Start Recovery Disc*. Follow the on-screen instructions to begin the recovery process.
3. Read the license. If you agree with the terms, select **I accept these terms and conditions** and then click **Next**.
4. Insert the **Operating System Recovery Disc** when prompted and click **Yes** to begin the operating system recovery process.
5. Insert the *Applications and Drivers Recovery Disc* when prompted and then click **OK** to begin the applications and drivers recovery process.
6. If you have a *Supplemental Recovery Disc*, insert it when prompted and click **Yes**. If you do not have a *Supplemental Recovery Disc*, click **No**.

7. When all of the data has been copied from the last disc in the set, remove the disc and restart the computer.

**Note:** The remainder of the recovery process is fully automated and no action is required by you. The computer will restart into the Windows desktop several times and you might experience periods when no activity is apparent on the screen for several minutes at a time. This is normal.

8. When the recovery process is complete, the Welcome to the Microsoft Windows screen is displayed. Follow the instructions on the screen to complete the Windows setup.

## Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the supervisor password (SVP).

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

**Exception:** If only an SVP is installed, the password prompt does not appear when the operating system is booted.

### Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

### Hard-disk password

There are two hard-disk passwords (HDPs):

- + User HDP - for the user

- + Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

### Supervisor password

A supervisor password (SVP) protects the system information stored in the BIOS Setup Utility. The user must enter the SVP in order to get access to the BIOS Setup Utility and change the system configuration.

**Attention:** If the SVP has been forgotten and cannot be made available to the servicer, there is no service procedure to reset the password. The system board must be replaced for a scheduled fee.



## Power management

**Note:** Power management modes are not supported for APM operating system.

To reduce power consumption, the computer has three power management modes: screen blank, sleep (standby), and hibernation.

### Screen blank mode

If the time set on the “Turn off monitor” timer in the operating system expires, the LCD backlight turns off. You can also turn off the LCD backlight by pressing Fn+F2.

To end screen blank mode and resume normal operation, press any key.

### Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep.

When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display panel.
- Press the power button.
- Open the charms and then select **Settings**  → **Power**  → **Sleep**.

**Note:** Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:


- Press the power button.
- Press any key on the keyboard.

## Shutting down the computer


If you are not going to use your computer for a long time, shut it down.

To shut down your computer:

1. Open the charms, select **Settings** .

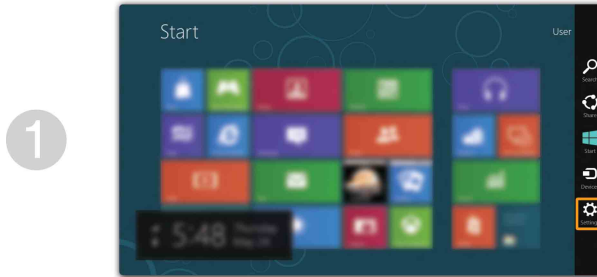

2. Select **Power**  → **Shut down**.

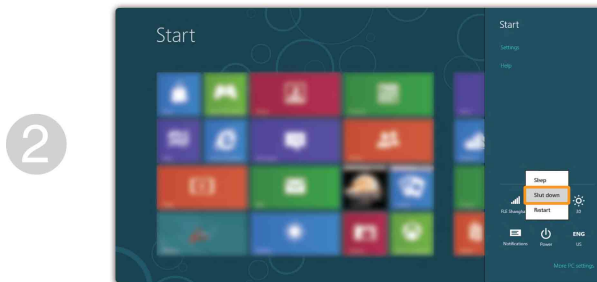

# Lenovo Y400/Y500

- This chapter presents the following product-specific service references and product-specific parts information:
- see “Specifications” on page 27
  - see “Status indicators” on page 30
  - “FRU tests” on page 31
  - see “Fn key combinations” on page 32
  - see “FRU replacement notices” on page 33
  - see “Removing and replacing an FRU” on page 34
  - see “Locations” on page 73
  - see “Parts list” on page 76

## Specifications

The following table lists the specifications of the Lenovo Y400/Y500:

*Table 1. Specifications*

| Feature          | Description                                                                                                                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Processor        | <ul style="list-style-type: none"><li>• See the system properties of your computer, you can do this as follows:<br/>Click <b>Control Panel</b>, then click <b>Hardware and Sound</b>, click <b>Device Manager</b> under <b>Devices and Printers</b> and double click <b>Processors</b>.</li></ul> |
| Core Chipset     | <ul style="list-style-type: none"><li>• Intel HM76</li></ul>                                                                                                                                                                                                                                      |
| Bus architecture | <ul style="list-style-type: none"><li>• PEG</li><li>• FDI</li><li>• DMI</li><li>• SATA Gen1</li><li>• SATA Gen3</li><li>• PCIE Gne1</li><li>• SPI</li><li>• HDMI 1.4b</li><li>• LPC</li><li>• HD Audio</li><li>• USB 2.0</li><li>• USB 3.0</li></ul>                                              |
| Graphic Chipset  | <ul style="list-style-type: none"><li>• NV N13P-GT1 35W (Y400)</li><li>• NV N13P-GT1 (Y500)</li></ul>                                                                                                                                                                                             |
| Display          | <ul style="list-style-type: none"><li>• 14.0" 16:9 HD, flat type</li><li>• 1366 × 768 pixels (220 nit) (Y400)</li><li>• 15.6" 16:9 HD wedge type LED panel</li><li>• 1366 × 768 pixels (220 nit)</li><li>• 15.6" 16:9 FHD wedge type LED panel</li><li>• 1920 × 1080 pixels (Y500)</li></ul>      |

Table 1. Specifications (continued)

| Feature                        | Description                                                                                                                                                                                                                                                                 |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Standard memory                | <ul style="list-style-type: none"> <li>• DDR3 1600 (Support Dual Channel)*</li> <li>• SODIMM × 2</li> </ul>                                                                                                                                                                 |
| CMOS RAM                       | <ul style="list-style-type: none"> <li>• 256 bytes</li> </ul>                                                                                                                                                                                                               |
| Hard disk drive                | <ul style="list-style-type: none"> <li>• 500GB, 5400rpm (7mm)*</li> <li>• 500GB, 5400rpm*</li> <li>• 500GB, 7200rpm *</li> <li>• 750GB, 5400rpm*</li> <li>• 750GB, 7200rpm**</li> <li>• 1TB, 5400rpm**</li> </ul>                                                           |
| Solid-state drive              | <ul style="list-style-type: none"> <li>• 16G SSD used as system cache</li> </ul>                                                                                                                                                                                            |
| Optical drive                  | <ul style="list-style-type: none"> <li>• 9.5 mm, 2.5-inch</li> <li>• RAMBO*</li> <li>• Blu-ray Combo** (Y500)</li> <li>• Blu-ray Rambo---base on GEO forecast (Y500)</li> </ul>                                                                                             |
| I/O port                       | <ul style="list-style-type: none"> <li>• External monitor connector</li> <li>• Headphone jack × 1, Mic-in jack × 1</li> <li>• RJ45 × 1</li> <li>• USB 2.0 × 2, USB 3.0 × 1 or USB 2.0 × 1, USB 3.0 × 2</li> <li>• 6-in1 card reader (SD/SD-pro/MMC/MS/MS-pro/XD)</li> </ul> |
| MODEM slot                     | <ul style="list-style-type: none"> <li>• N/A</li> </ul>                                                                                                                                                                                                                     |
| Audio                          | <ul style="list-style-type: none"> <li>• 1/8" Stereo Headphone Output Jack/ SPDIF, 1/8" Input Jack Microphone</li> <li>• Built-in stereo speakers</li> <li>• Built-in microphone</li> </ul>                                                                                 |
| Video                          | <ul style="list-style-type: none"> <li>• HDMI port × 1</li> <li>• VGA × 1</li> </ul>                                                                                                                                                                                        |
| Ethernet (on the system board) | <ul style="list-style-type: none"> <li>• 1G LAN</li> </ul>                                                                                                                                                                                                                  |
| PCI Express Mini Card slot     | <ul style="list-style-type: none"> <li>• Wimax/WIFI × 1</li> <li>• SSD × 1</li> </ul>                                                                                                                                                                                       |
| WLAN                           | <ul style="list-style-type: none"> <li>• Intel 802.16e Wimax</li> <li>• Intel 802.11 a/b/g/n WIFI</li> </ul>                                                                                                                                                                |
| WWAN                           | <ul style="list-style-type: none"> <li>• N/A</li> </ul>                                                                                                                                                                                                                     |
| Bluetooth wireless             | <ul style="list-style-type: none"> <li>• Built-in antenna with min-USB interface, select Models</li> </ul>                                                                                                                                                                  |
| Keyboard                       | <ul style="list-style-type: none"> <li>• 6 Row, ISO Full Size Keyboard,backlit (optional) (Y400)</li> <li>• 6 Row, ISO Full Size Keyboard,backlit (Y500)</li> </ul>                                                                                                         |
| Touch pad                      | <ul style="list-style-type: none"> <li>• One-piece Touch pad</li> </ul>                                                                                                                                                                                                     |

Table 1. Specifications (continued)

| Feature                        | Description                                                          |
|--------------------------------|----------------------------------------------------------------------|
| Finger Print Reader            | <ul style="list-style-type: none"><li>• N/A</li></ul>                |
| Integrated camera              | <ul style="list-style-type: none"><li>• HD Camera</li></ul>          |
| Battery                        | <ul style="list-style-type: none"><li>• 6 cells, 72WH/62WH</li></ul> |
| AC adapter                     | <ul style="list-style-type: none"><li>• 120W /170W</li></ul>         |
| Pre-installed operating system | <ul style="list-style-type: none"><li>• Win8/Linpus</li></ul>        |

## Status indicators

The system status indicators below show the computer status:

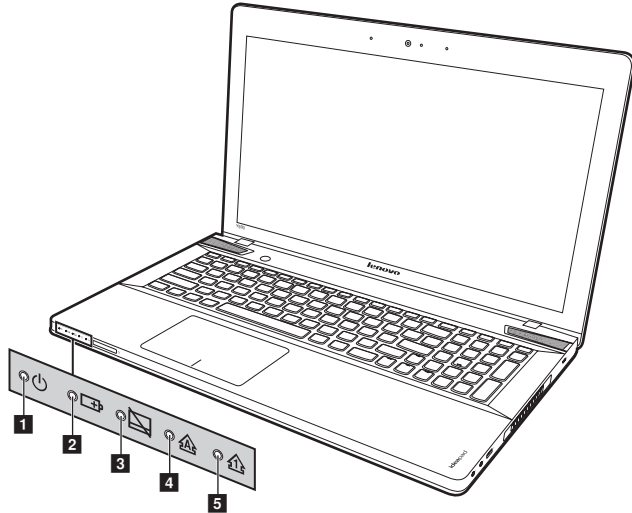


Table 2. Status indicators

| Indicator                                                                                                    | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Power on<br>       | <b>White:</b> System is enabled.<br><b>Blinking white:</b><br>System is in sleep mode.<br><b>off:</b> System is in hibernate mode or shut down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>2</b> Battery status<br> | <b>Blinking amber:</b> (500ms off/1s on)<br>The remaining power of the battery is less than 5% of its capacity.<br><b>Blinking amber:</b> (100ms off/3.2s on)<br>The battery is being charged with the remaining power between 5% and 20% of its capacity.<br><b>Amber:</b> The computer is operating on battery power with the remaining power between 5% and 20% of its capacity.<br><b>Blinking white:</b><br>The battery is being charged with the remaining power between 20% and 80% of its capacity.<br><b>White:</b> The remaining power of the battery is more than 80% of its capacity, or the computer is operating on battery power with the remaining power between 20% and 80% of its capacity. |
| <b>3</b> Touchpad<br>       | <b>White:</b> The touchpad is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>4</b> Caps lock<br>      | <b>White:</b> Caps Lock mode is enabled. You can enter all alphabetic characters (A-Z) in uppercase without pressing the Shift key. To enable or disable Caps Lock mode, press the CapsLk key.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>5</b> Num lock<br>       | <b>White:</b> The separate numeric keypad on the keyboard is enabled. To enable or disable the numeric keypad, press the Num Lock key.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## Fn key combinations

The following table shows the function of each combination of Fn with a function key.

*Table 4. Fn key combinations*

|                                          |                                                   |
|------------------------------------------|---------------------------------------------------|
| Fn + Esc:                                | Cancel hotkey.                                    |
| Fn + F1:                                 | Enter sleep mode.                                 |
| Fn + F2:                                 | Turn on/off the backlight of the LCD screen.      |
| Fn + F3:                                 | Open the interface for selecting display options. |
| Fn + F5:                                 | Toggle airplane mode on/off.                      |
| Fn + F6:                                 | Enable/Disable the touchpad.                      |
| Fn + F9:                                 | Open Settings charm.                              |
| Fn + F10:                                | Open Search charm.                                |
| Fn + F11:                                | View current Apps.                                |
| Fn + F12:                                | View all Apps.                                    |
| Fn + PrtSc:                              | Activate the system request.                      |
| Fn + Insert (Y500):<br>Fn + PgUp (Y400): | Enable/Disable the scroll lock.                   |
| Fn + Home:                               | Activate the pause function.                      |
| Fn + End:                                | Activate the break function.                      |
| Fn + PgDn (Y400):                        | Activate the insert function.                     |
| Fn + ↑ / ↓:                              | Increase/Decrease display brightness.             |
| Fn + → / ←:                              | Increase/Decrease sound volume.                   |
| Fn + Space (on select models):           | Turn on/off the keyboard backlight.               |



## FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

### Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.
- Each one should be used only once.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Always use new screws.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

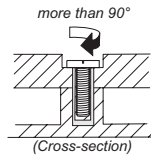

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

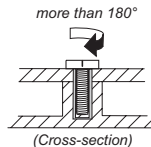

- **Torque driver**

If you have a torque screwdriver, refer to the “Torque” column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Never use a screw that you removed. Use a new one. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

### Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review see “FRU replacement notices” on page 33.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see “Locations” on page 73.
8. When replacing an FRU, use the correct screw as shown in the procedures.

#### **DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

**Attention:** After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

**Attention:** The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

**Note:** The illustrations used in this section are of the Lenovo Y500, unless otherwise stated.


## 1010 Battery pack

### **⚠ DANGER**

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

*Figure 1. Removal steps of battery pack*

Unlock the manual battery latch **1**. Holding the spring-loaded battery latch in the unlocked position **2**, remove the battery pack in the direction shown by the arrow **3**.

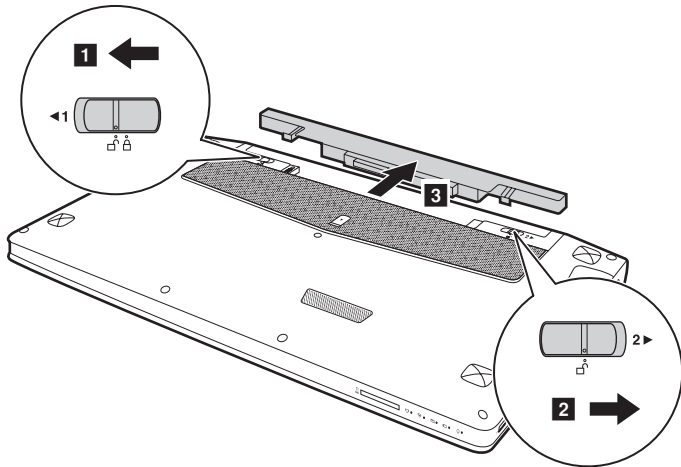

**When installing:** Install the battery pack along the slide rails of the slot. Then make sure that the battery release lever is in the locked position.


## **1020 Dummy card**

For access, remove this FRU:

- see “1010 Battery pack” on page 35

*Figure 2. Removal steps of dummy cards*

Remove the dummy card in the direction shown by arrows **1** **2**.

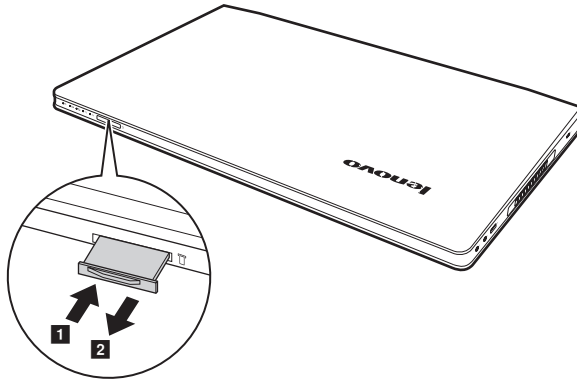


## 1030 Optical drive

For access, remove this FRU:

- see “1010 Battery pack” on page 35

*Figure 3. Removal steps of optical drive*

Push the latch in the direction shown by arrow **1**. Hold the spring-loaded latch in the unlocked position **2**. Gently pull out the optional module in the direction shown by arrow **3**.

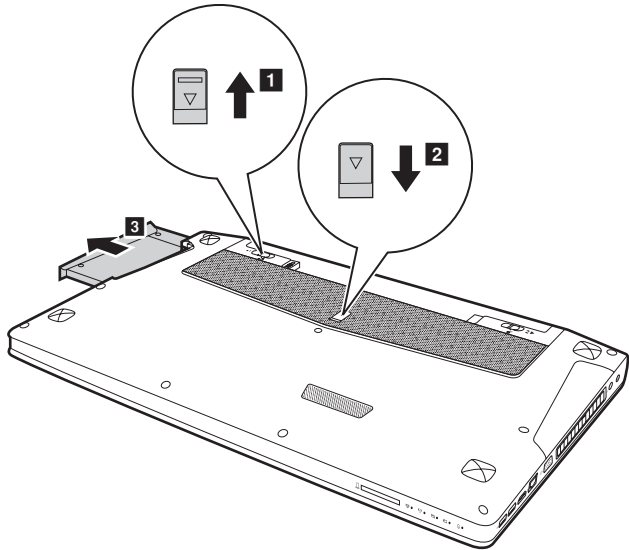


**1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover**

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1030 Optical drive” on page 37

*Figure 4. Removal steps of HDD/Memory/Mini PCI Express Card slot compartment cover*

Remove the screws **1** that secure the compartment cover. Remove the compartment cover.

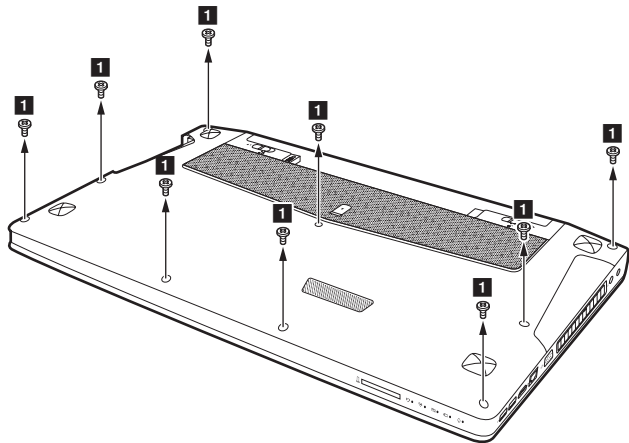

| Step | Screw (quantity)                                 | Color | Torque          |
|------|--------------------------------------------------|-------|-----------------|
| 1    | M2.5 X8 mm,flat-head, nylok-coated (8) (Y400)    | Black | 2.0 ~ 2.5 kgfcm |
|      | M2.5 × 10 mm, flat-head, nylok-coated (9) (Y500) | Black |                 |

1050 Hard disk drive

For access, remove these FRUs in order:


- see “1010 Battery pack” on page 35
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38

Attention:

- **Do not drop the hard disk drive or apply any physical shock to it.**  
The hard disk drive is sensitive to physical shock. Improper handling can cause damages and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

Figure 5. Removal steps of hard disk drive


Remove the frame fixing screws **1**.

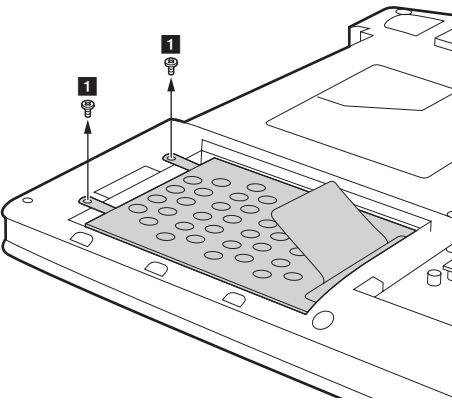


| Step | Screw (quantity)                                   | Color | Torque          |
|------|----------------------------------------------------|-------|-----------------|
| 1    | M2.5 × 4 mm, flat-head, nylok-coated<br>(2) (Y400) | Black | 1.5 ~ 2.0 kgfcm |
|      | M2.5 × 4 mm, flat-head, nylok-coated<br>(2) (Y500) | Black | 2.0 ~ 2.5 kgfcm |

*Figure 5. Removal steps of hard disk drive (continued)*

Pull the tab in the direction shown by arrow **2**.

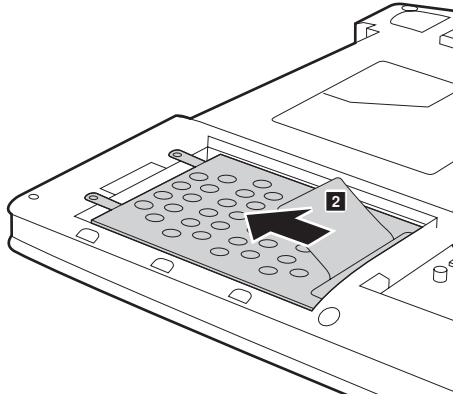

Take out the hard disk drive secured in a metal frame **3**.

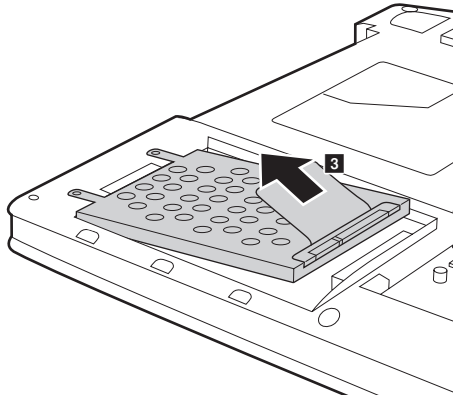

**When installing:** Make sure that the HDD connector is attached firmly.




## 1060 DIMM

For access, remove these FRUs in order:


- see “1010 Battery pack” on page 35
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38

*Figure 6. Removal steps of DIMM*

Release the two latches on both edges of the socket at the same time in the direction shown by arrows **1**, and then unplug the DIMM in the direction shown by arrow **2**.

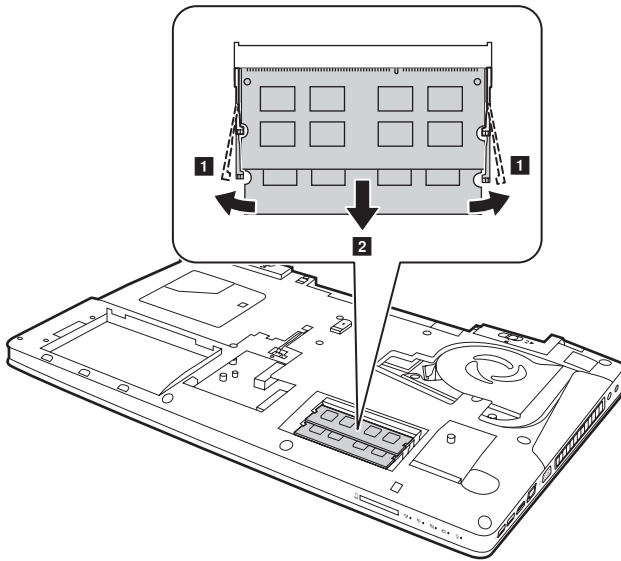

**Note:** If only one DIMM is used on the computer you are servicing, the card must be installed in SLOT-0 (**a** : lower slot), but not in SLOT-1 (**b** : upper slot).

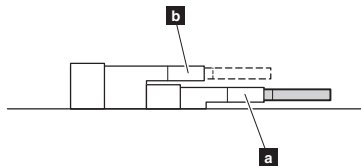

**When installing:** Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into the place. Make sure that it is firmly fixed in the slot and difficult to be moved.


## 1070 PCI Express Mini Card for wireless LAN/WAN

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38

*Figure 7. Removal steps of PCI Express Mini Card for wireless LAN/WAN*

Disconnect the two wireless LAN cables **1**, and then remove the screw **2**.

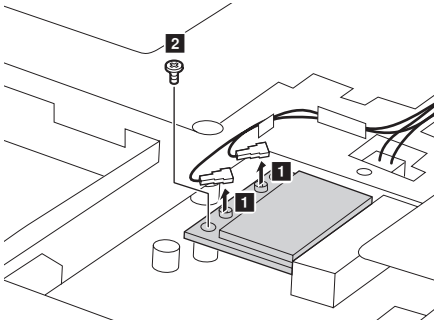


In step **1**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by arrows.

**Notes:** wireless LAN card has 2 cables in step **1**.

Wireless LAN card in some models may have 3 cables in step **1**.

| Step     | Screw (quantity)                       | Color | Torque          |
|----------|----------------------------------------|-------|-----------------|
| <b>2</b> | M2 × 3 mm, flat-head, nylok-coated (1) | Black | 1.5 ~ 2.0 kgfcm |

Remove the card in the direction shown by arrow **3**.

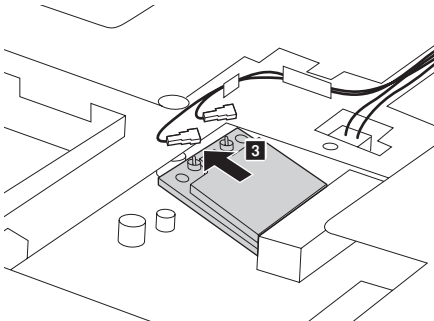

*Figure 7. Removal steps of PCI Express Mini Card for wireless LAN/WAN (continued)*

**When installing:**

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into jack labeled **3**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.


**1080 Keyboard**

For access, remove these FRUs in order:


- see “1010 Battery pack” on page 35
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42

Figure 8. Removal steps of keyboard

**Y400:** Remove two screws **1**.

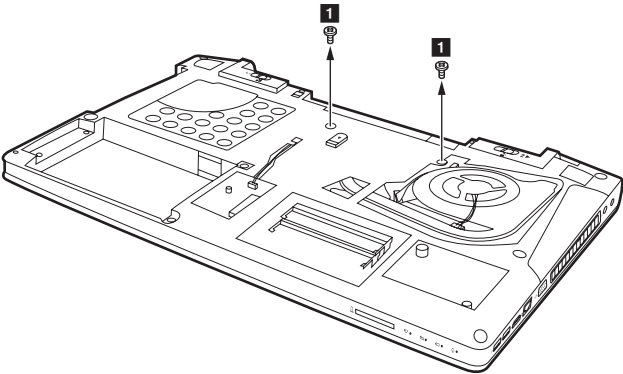


**Y500:** Remove three screws **1**.

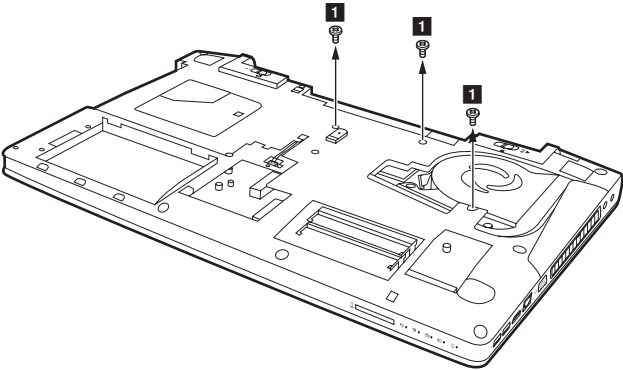


| Step     | Screw (quantity)                                    | Color | Torque          |
|----------|-----------------------------------------------------|-------|-----------------|
| <b>1</b> | M2.5 × 4 mm, flat-head, nylok-coated (2)<br>(Y400)  | Black | 1.5 ~ 2.0 kgfcm |
|          | M2.5 × 10 mm, flat-head, nylok-coated<br>(3) (Y500) | Black |                 |

Figure 8. Removal steps of keyboard (continued)

Push the back of the keyboard in the direction shown by arrow **1**. Loosen the keyboard with fingers in the direction shown by arrow **2**. Lift the keyboard a little **3**, and then detach the connectors in the direction shown by arrows **4** **5**.

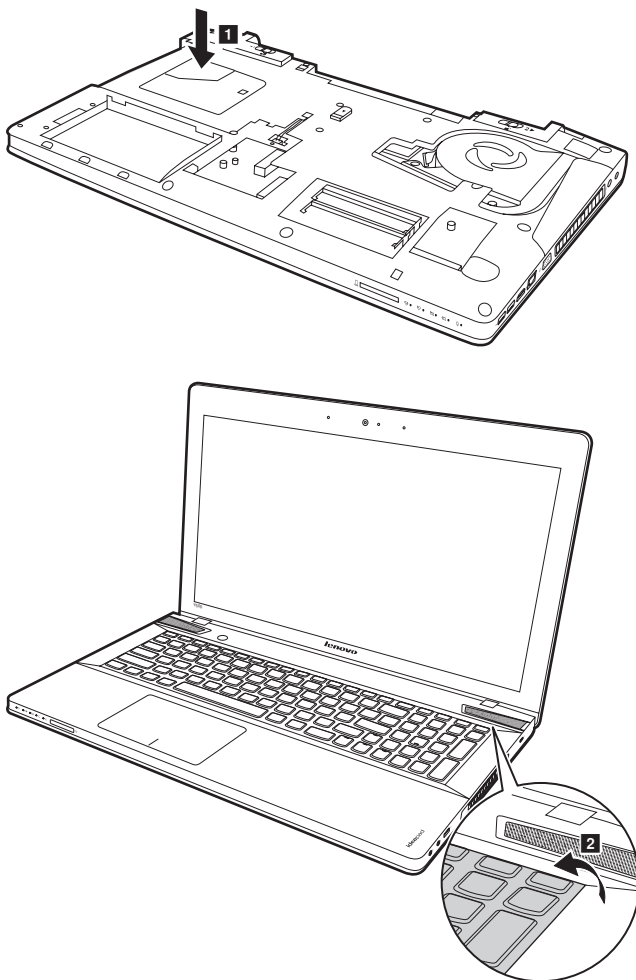

*Figure 8. Removal steps of keyboard (continued)*

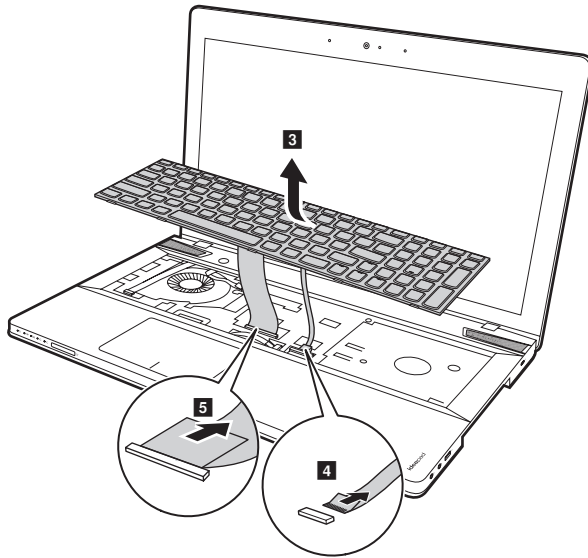


## 1090 Keyboard bezel

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44

Figure 9. Removal steps of keyboard bezel


Y400: Remove three screws **1** and three screws **2** on the bottom.

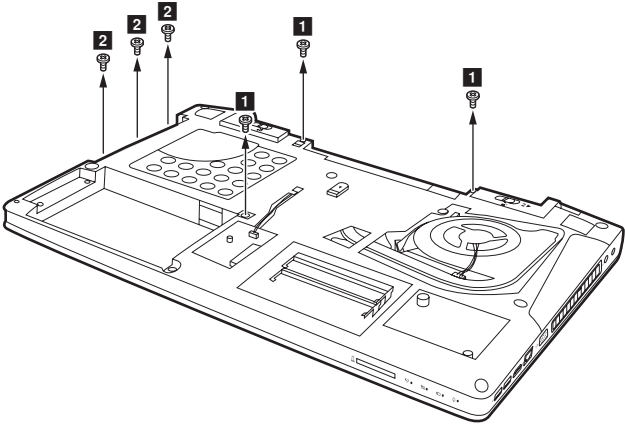

| Step     | Screw (quantity)                         | Color | Torque          |
|----------|------------------------------------------|-------|-----------------|
| <b>1</b> | M2.5 × 8 mm, flat-head, nylok-coated (3) | Black | 1.5 ~ 2.0 kgfcm |
|          | M2 × 3 mm, flat-head, nylok-coated (3)   | Black | 1.0 ~ 1.5 kgfcm |

Figure 9. Removal steps of keyboard bezel (continued)

**Y500:** Remove four screws **1**, three screws **2** on the bottom.

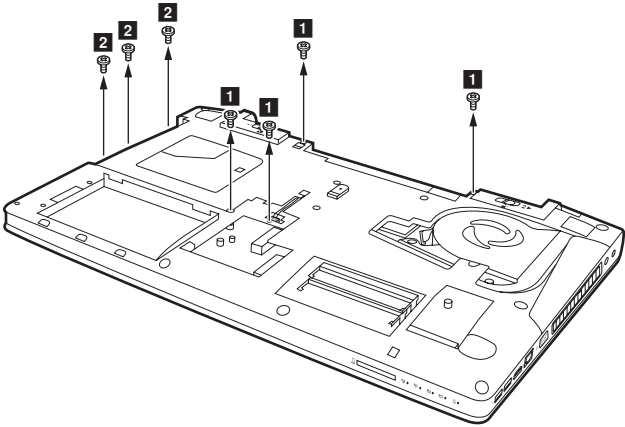

| Step     | Screw (quantity)                          | Color | Torque          |
|----------|-------------------------------------------|-------|-----------------|
| <b>1</b> | M2.5 × 10 mm, flat-head, nylok-coated (4) | Black | 1.5 ~ 2.0 kgfcm |
|          | M2 × 3 mm, flat-head, nylok-coated (3)    | Black | 1.0 ~ 1.5 kgfcm |

**Y400:** Detach the power board connector and TouchPad cable in the direction shown by arrows **3** **4**.


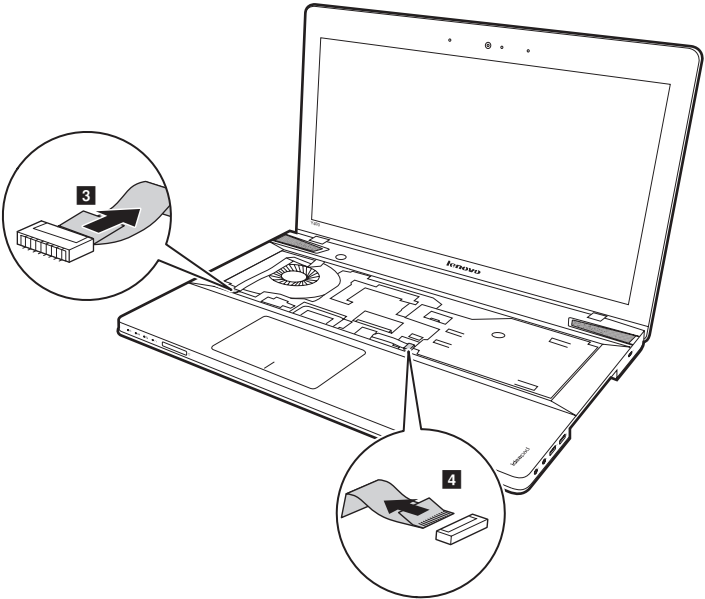




Figure 9. Removal steps of keyboard bezel (continued)

**Y500:** Remove the screw **3**. Detach the power board connector and TouchPad cable in the direction shown by arrows **4** **5**. IO board connector in the direction shown by arrow **6**.

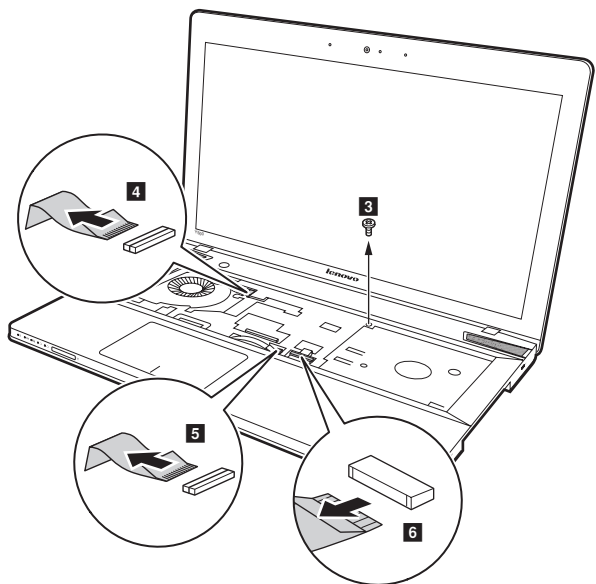


| Step | Screw (quantity)                         | Color | Torque          |
|------|------------------------------------------|-------|-----------------|
| 1    | M2.5 × 4 mm, flat-head, nylok-coated (1) | Black | 1.5 ~ 2.0 kgfcm |

**When installing:** Make sure that the power board connector, TouchPad and IO board cable are attached firmly.

*Figure 9. Removal steps of keyboard bezel (continued)*

Remove the keyboard bezel in the direction shown by arrow **7**.

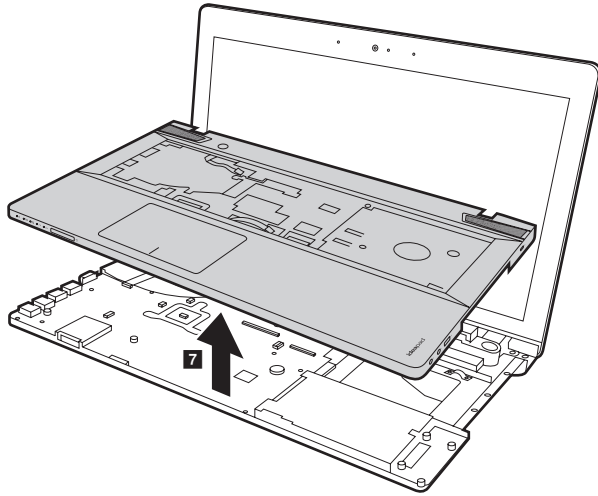

## 1100 System board

### **Important notices for handling the system board:**

When handling the system board, bear the following in mind.


- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47

Figure 10. Removal steps of system board

**Y400:** Remove screws **1**. Detach camera connector in the direction shown by arrow **2**, unplug DC-IN connector in the direction shown by arrow **3**, LCD connector in the direction shown by arrow **4**.

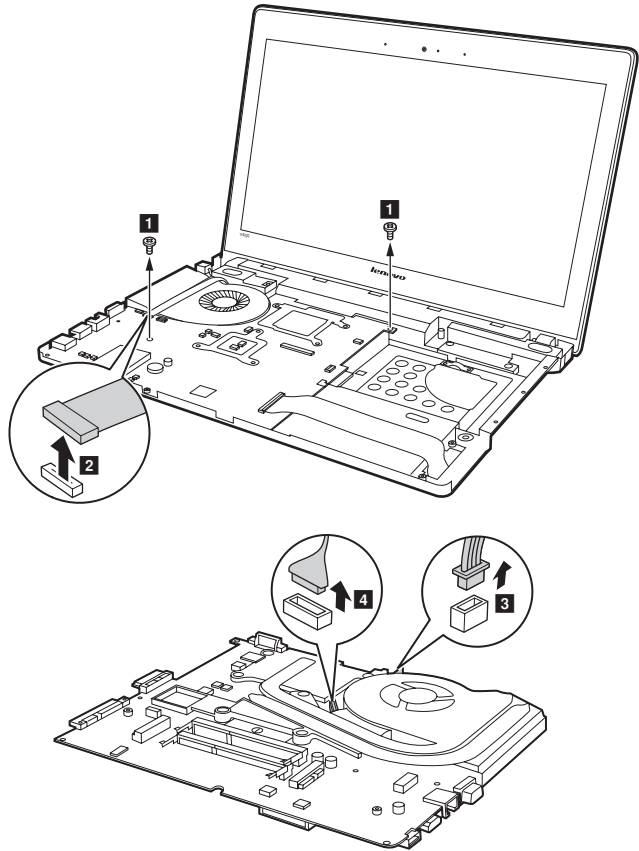

| Step | Screw (quantity)                         | Color | Torque          |
|------|------------------------------------------|-------|-----------------|
| 1    | M2.5 × 4 mm, flat-head, nylok-coated (2) | Black | 2.0 ~ 2.5 kgfcm |

Figure 10. Removal steps of system board

**Y500:** Loosen three screws **1**. Unplug LCD, speakers cable connector, DC-IN, camera connectors in the direction shown by arrows **2**.


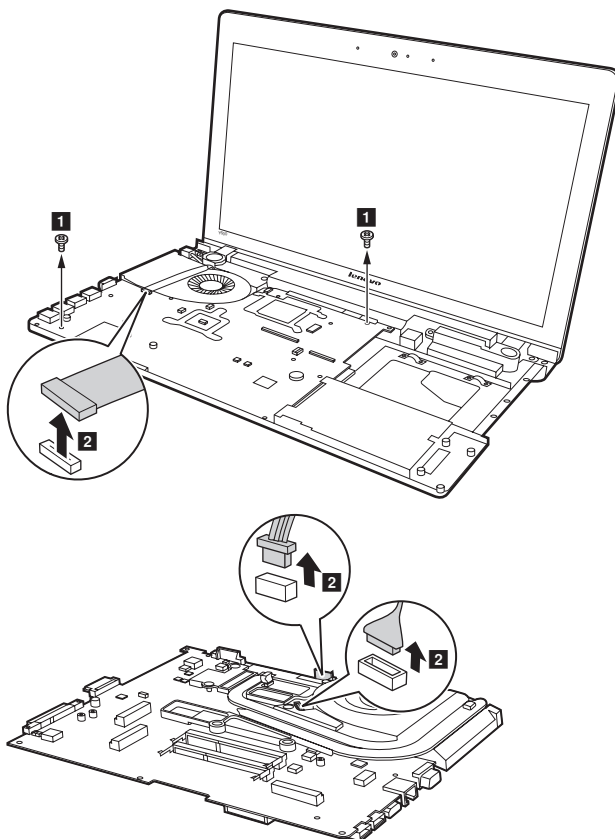



Figure 10. Removal steps of system board

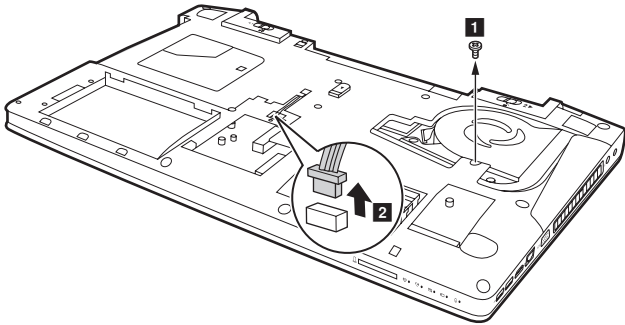

**When installing:** Make sure that all the connectors are attached firmly.

| Step | Screw (quantity)                         | Color | Torque         |
|------|------------------------------------------|-------|----------------|
| 1    | M2.5 × 4 mm, flat-head, nylok-coated (3) | Black | 1.5 ~2.0 kgfcm |

Remove the system board in the direction shown by arrow **3**.

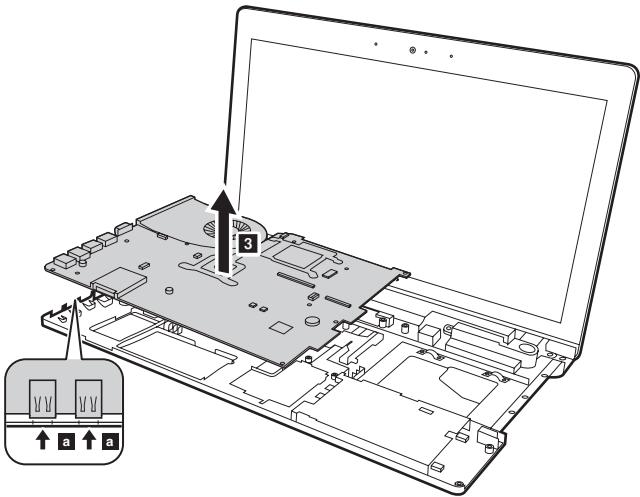

**When installing:** When attaching the system board to the base cover, adjust the placement of the ports as shown in **a**. Improper placement of the ports or those jacks might cause a damage.


1110 LCD unit

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51

Figure 11. Removal steps of LCD unit


**Y400:** Release the antenna cables from the cable guides in the direction shown by arrows **1**. Remove screws **2**.

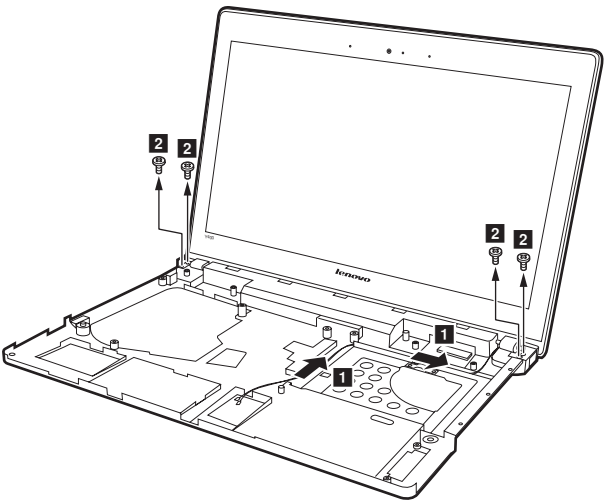

| Step | Screw (quantity)                     | Color | Torque         |
|------|--------------------------------------|-------|----------------|
| 2    | M2.5 × 4 flat-head, nylok-coated (4) | Black | 1.5 ~2.0 kgfcm |

Figure 11. Removal steps of LCD unit (continued)

**Y500:** Release the antenna cables from the cable guides in the direction shown by arrows **1**. Remove four screws **2**.

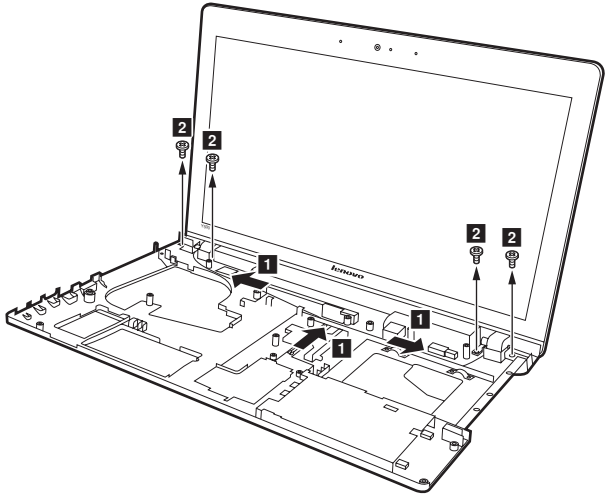

| Step     | Screw (quantity)                         | Color  | Torque          |
|----------|------------------------------------------|--------|-----------------|
| <b>2</b> | M2.5 × 5 mm, flat-head, nylok-coated (4) | Silver | 1.5 ~ 2.0 kgfcm |


**When installing:**

- Route the antenna cables along the cable guides. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.
- Make sure that the LCD connector is attached firmly and make sure that you do not pinch the antenna cables when you attach the LCD assembly. Route the LCD cable along the cable guides.



Figure 11. Removal steps of LCD unit (continued)

Remove the LCD unit in the direction shown by arrows **3**.

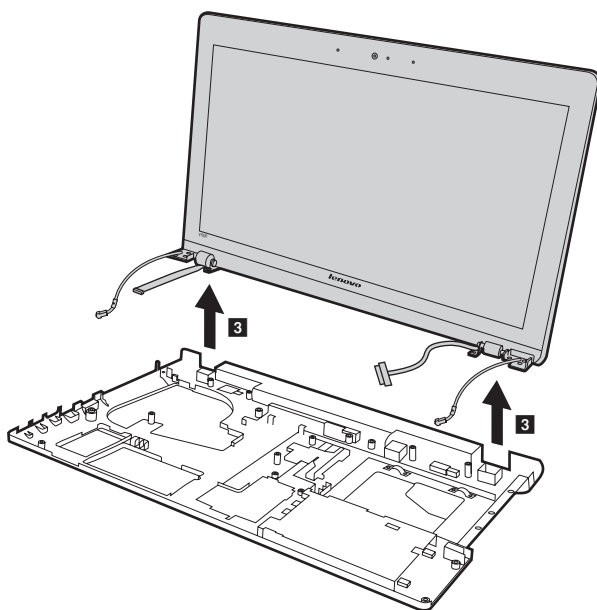


## **1120 Fan assembly and Heat Sink assembly**

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51

Figure 12. Removal steps of fan assembly and heat sink assembly

Detach the fan connector in the direction shown by arrow **1** and loosen six screws **2** to lift the fan assembly.

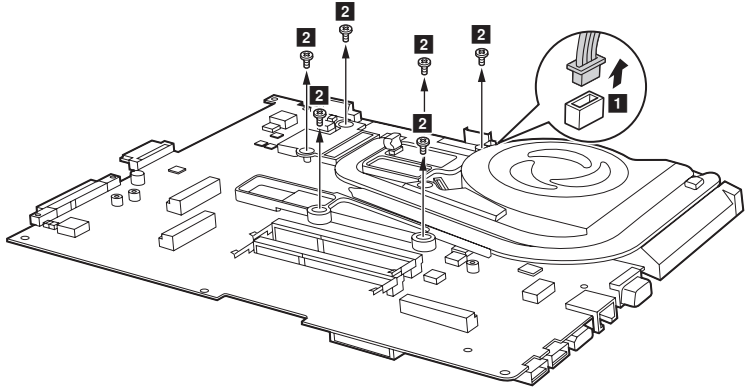

**When installing:** Make sure that the fan connector is attached firmly to the system board.

## 1130 CPU


For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51
- see “1120 Fan assembly and Heat Sink assembly” on page 58

**Attention:** CPU is extremely sensitive. When you service the CPU, avoid any kind of rough handling.

*Figure 13. Removal steps of CPU*

Rotate the head of the screw in the direction shown by arrow **1** to release the lock, then remove the CPU in the direction shown by arrow **2**.

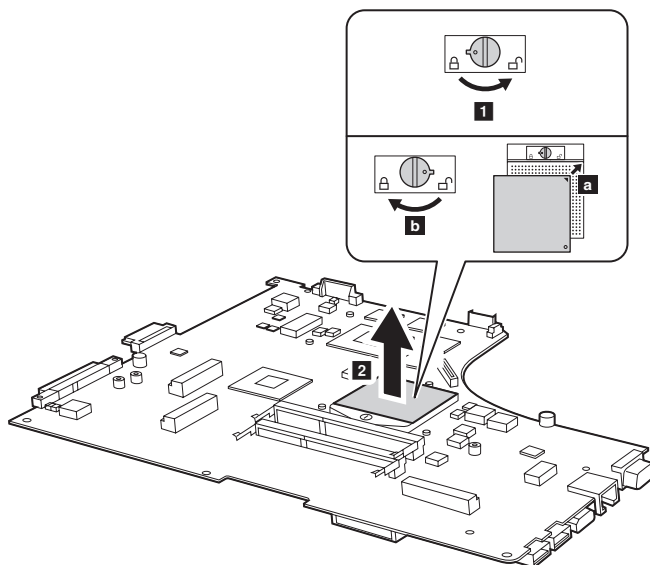

**When installing:** Place the CPU on the CPU socket in the direction shown by arrow **a**, and then rotate the head of the screw in the direction shown by arrow **b** to secure the CPU.

1140 Base cover, speakers and power assembly


For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51
- see “1110 LCD unit” on page 55
- see “1120 Fan assembly and Heat Sink assembly” on page 58

Figure 14. Removal steps of base cover, speakers and power assembly


Loosen four screws **1**, and then remove the speakers **2**.

Y400:

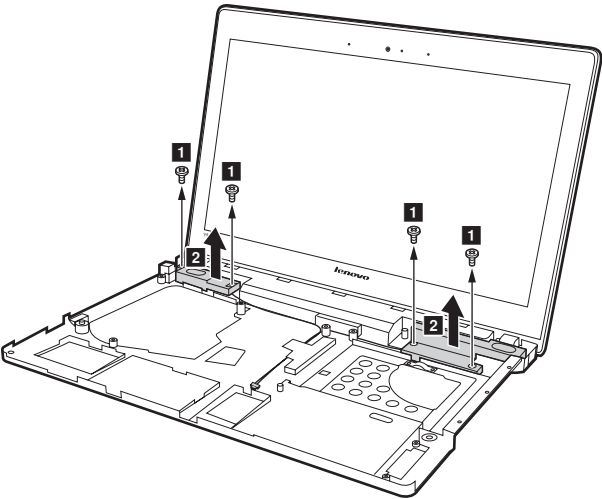

| Step | Screw (quantity)                     | Color | Torque          |
|------|--------------------------------------|-------|-----------------|
| 1    | M2.0 × 2 flat-head, nylok-coated (4) | Black | 1.0 ~ 1.5 kgfcm |


Figure 14. Removal steps of base cover, speakers and power assembly (continued)  
**Y500:**

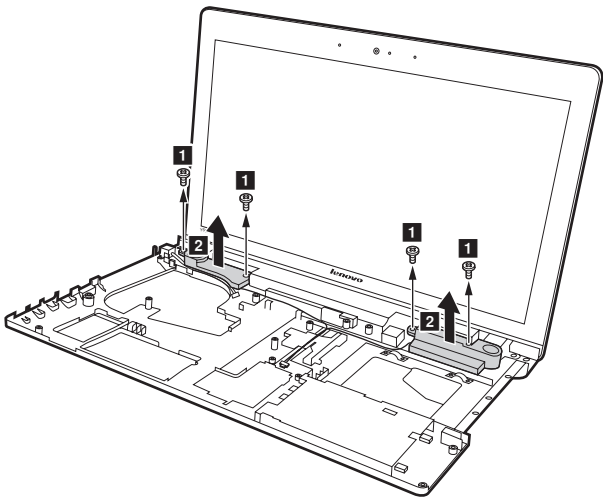

| Step | Screw (quantity)                     | Color | Torque          |
|------|--------------------------------------|-------|-----------------|
| 1    | M2.0 × 3 flat-head, nylok-coated (4) | Black | 1.0 ~ 1.5 kgfcm |

Figure 14. Removal steps of base cover, speakers and power assembly (continued)

**Y400:** Loosen the screws **1**, then remove the power assembly in the direction shown by arrow **2**.

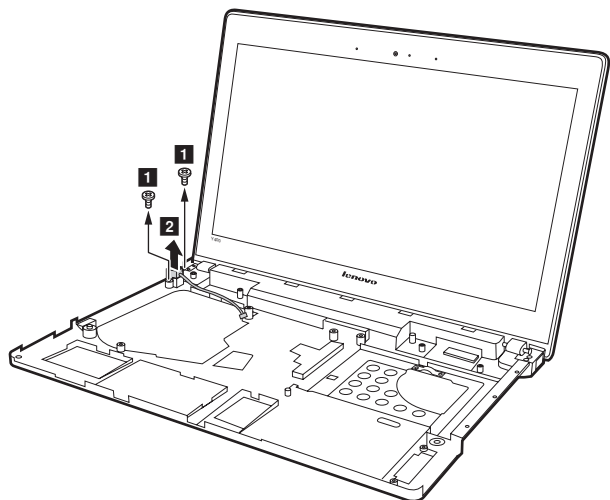


**When installing:** Make sure that the power connector is attached firmly.

| Step | Screw (quantity)                         | Color | Torque          |
|------|------------------------------------------|-------|-----------------|
| 1    | M2.0 × 3 mm, flat-head, nylok-coated (2) | Black | 1.0 ~ 1.5 kgfcm |

Figure 14. Removal steps of base cover, speakers and power assembly (continued)

**Y500:** Loosen the screw **1**, then remove the power assembly in the direction shown by arrow **2**.

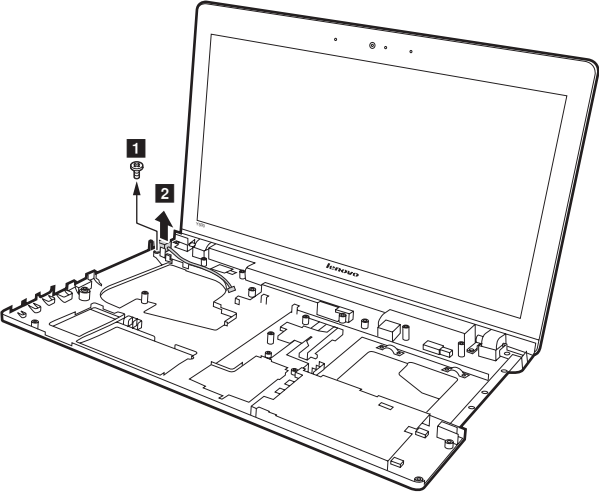

| Step | Screw (quantity)                         | Color | Torque          |
|------|------------------------------------------|-------|-----------------|
| 1    | M2.0 × 3 mm, flat-head, nylok-coated (1) | Black | 1.0 ~ 1.5 kgfcm |



**Note: Applying labels to the base cover**

The new base cover FRU is shipped with a kit containing labels of several kinds. When you replace the base cover, you need to apply the following label:


The following labels need to be peeled off from the old base cover, and need to be put on the new base cover.

- a** Rating Label
- b** INDONESIA D-SIDE LABEL
- c** WLAN Label for BRAZIL
- d** Brazil Label (BT) or WLAN Label for US/CA/TW or WLAN Label for INDONESIA or BT Label for US/CA/TW or Indonesia Label for BT or SIRIM WLAN Label or SIRIM BT Label or ISRAEL WLAN label
- e** PRC/MTM CODE
- f** User guide label


For some models, you also need to apply one or two FCC labels. Check the old base cover; if it has one or two FCC labels, find duplicates of them in the label kit and apply them to the new base cover.

For the location of each label, refer to the following figure:

Y400

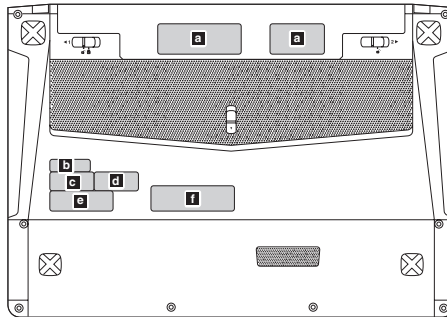

Y500

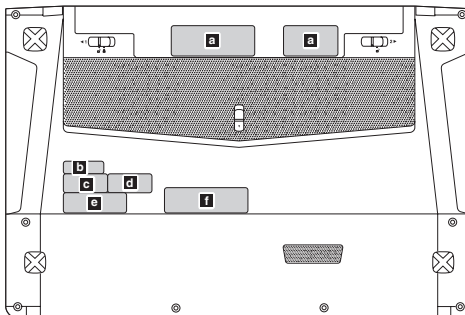


**1150 LCD front bezel**

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51
- see “1110 LCD unit” on page 55

Figure 15. Removal steps of LCD front bezel


**Y400:** Remove two screws **1**.

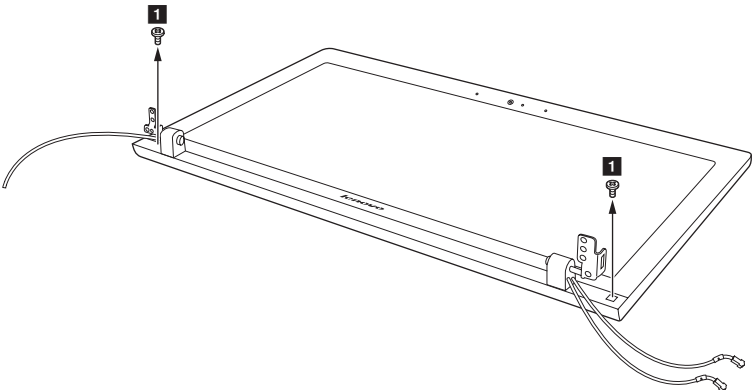

| Step | Screw (quantity)                       | Color  | Torque          |
|------|----------------------------------------|--------|-----------------|
| 1    | M2 × 4 mm, flat-head, nylok-coated (2) | Silver | 1.5 ~ 2.0 kgfcm |

Figure 15. Removal steps of LCD front bezel (continued)

Remove the LCD front bezel in the direction shown by arrows **1**.

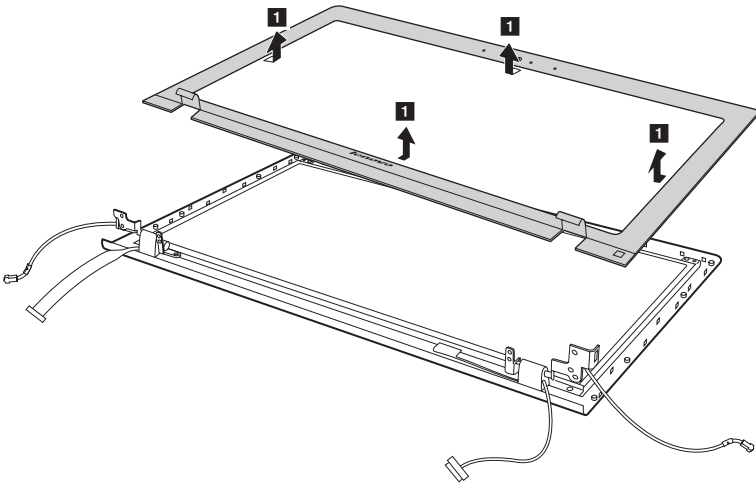

## 1160 LCD panel, LCD cable and hinges

For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51
- see “1110 LCD unit” on page 55
- see “1150 LCD front bezel” on page 66

*Figure 16. Removal steps of LCD panel, LCD cable and hinges*

**Y400:** Remove two screws **1**, two screws **2**. Lift the LCD panel in the direction shown by arrows **3**.


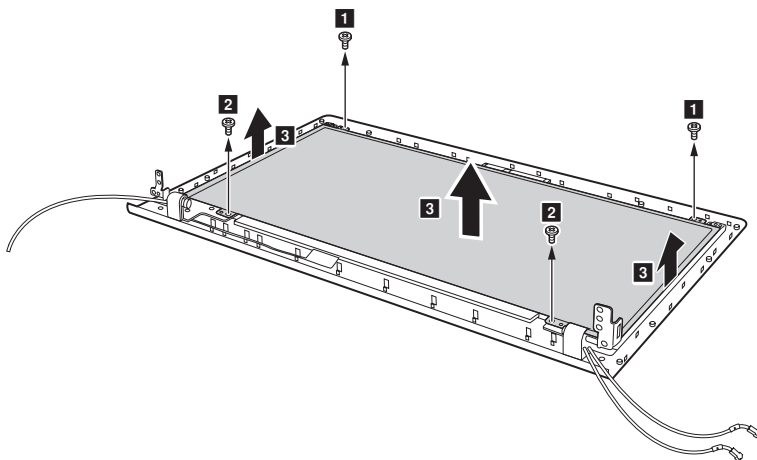


Figure 16. Removal steps of LCD panel, LCD cable and hinges (continued)

**Y500:** Remove two screws **1**, six screws **2**. Lift the LCD panel in the direction shown by arrows **3**.

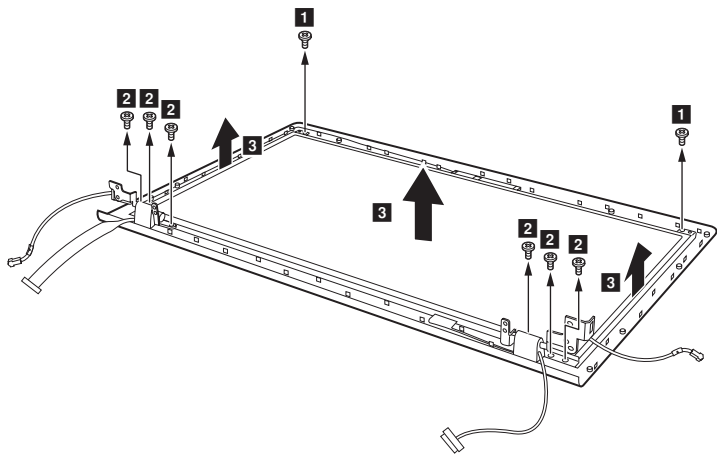


**When installing:** Make sure that the connector is attached firmly.

| Step     | Screw (quantity)                                | Color  | Torque          |
|----------|-------------------------------------------------|--------|-----------------|
| <b>1</b> | M2.0 × 3 mm, flat-head, nylok-coated (2) (Y400) | Black  | 1.5 ~ 2.0 kgfcm |
|          | M2 × 4 mm, flat-head, nylok-coated (2) (Y400)   | Silver | 2.0 ~ 2.5 kgfcm |
|          | M2.5 × 4, flat-head, nylok-coated (2) (Y500)    | Black  |                 |
|          | M2.5 × 5 mm, flat-head, nylok-coated (6) (Y500) | Silver | 2.0 ~ 2.5 kgfcm |

Figure 16. Removal steps of LCD panel, LCD cable and hinges (continued)


**Y400:** Remove four screws **4**, four screws **5** and the hinges in the direction shown by arrows **6**.

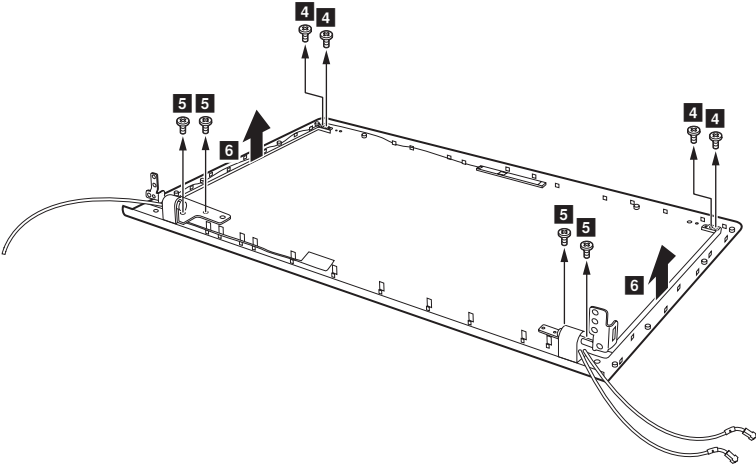

| Step     | Screw (quantity)                         | Color  | Torque          |
|----------|------------------------------------------|--------|-----------------|
| <b>1</b> | M2.0 × 3 mm, flat-head, nylok-coated (4) | Black  | 1.0 ~ 1.5 kgfcm |
|          | M2.0 × 4 mm, flat-head, nylok-coated (4) | Silver |                 |

Figure 16. Removal steps of LCD panel, LCD cable and hinges (continued)


**Y500:** Remove six screws **4** . Lift the LCD panel with hinges in the direction shown by arrows **5** .

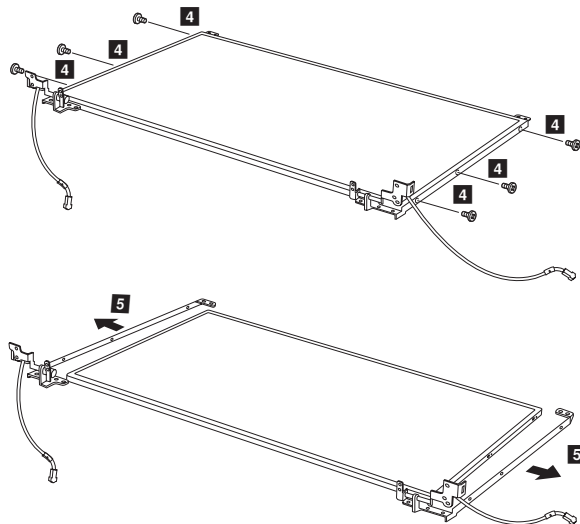

| Step | Screw (quantity)                         | Color | Torque          |
|------|------------------------------------------|-------|-----------------|
| 1    | M2.0 × 3 mm, flat-head, nylok-coated (6) | Black | 1.0 ~ 1.5 kgfcm |

Note: The LCD cables are attached to the LCD panel by a metal connector.

Peel off the adhesive tape and detach the connector in the direction shown by arrow **6** .

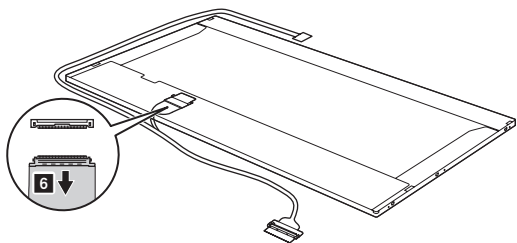

**When installing:** Make sure that the metal connector is attached firmly.

## 1170 Integrated camera


For access, remove these FRUs in order:

- see “1010 Battery pack” on page 35
- see “1020 Dummy card” on page 36
- see “1030 Optical drive” on page 37
- see “1040 Hard disk drive(HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 38
- see “1050 Hard disk drive” on page 39
- see “1060 DIMM” on page 41
- see “1070 PCI Express Mini Card for wireless LAN/WAN” on page 42
- see “1080 Keyboard” on page 44
- see “1090 Keyboard bezel” on page 47
- see “1100 System board” on page 51
- see “1110 LCD unit” on page 55
- see “1150 LCD front bezel” on page 66
- see “1160 LCD panel, LCD cable and hinges” on page 68

*Figure 17. Removal steps of integrated camera*

**Note:** The integrated camera is stuck on the top center of the LCD cover.

Unplug the integrated camera connector in the direction shown by arrow **1**.  
Remove the integrated camera from the LCD cover **2**.

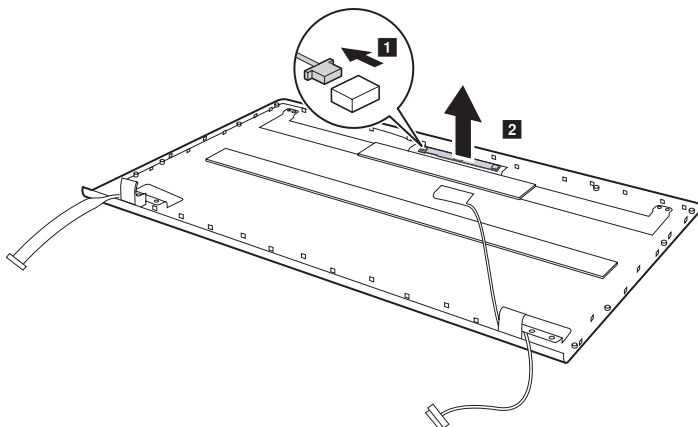


**When installing:** Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.



## Locations

### Front view


- 1** Integrated camera
- 2** Built-in microphone (with noise reduction)
- 3** Computer display
- 4** Power button
- 5** JBL speakers
- 6** Touchpad
- 7** Numeric keypad (Y500)
- 8** System status indicators
- 9** Memory card slot

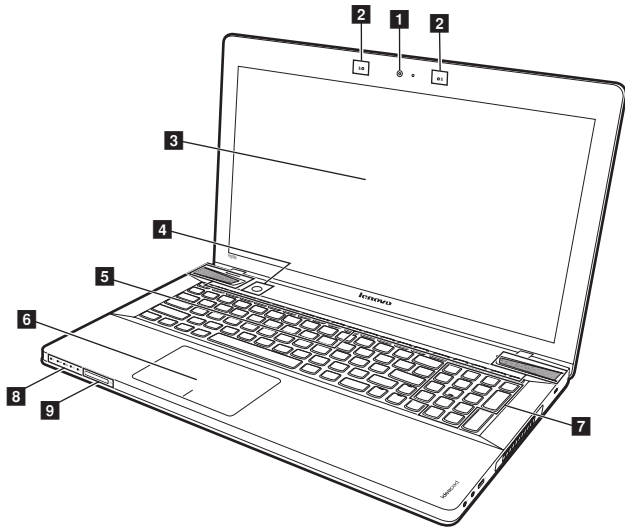

## Right-side view

- 1** Kensington slot
- 2** Optical drive
- 3** USB port
- 4** Microphone jack
- 5** Headphone jack

**Y400:**

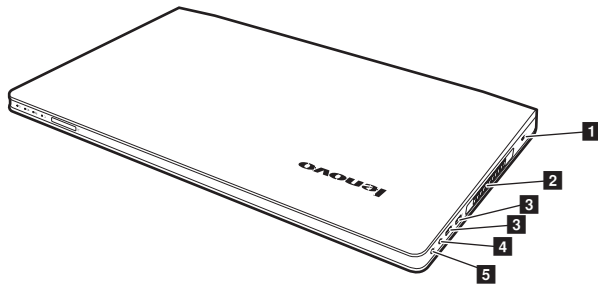


**Y500:**



## Bottom and Left-side view

- 1** Novo button
- 2** AC power adapter jack
- 3** Ventilation slots
- 4** VGA port
- 5** RJ-45 port
- 6** HDMI port
- 7** USB port
- 8** Battery latch - manual
- 9** Removable module lock
- 10** Battery pack
- 11** Battery latch - spring loaded
- 12** Louvers

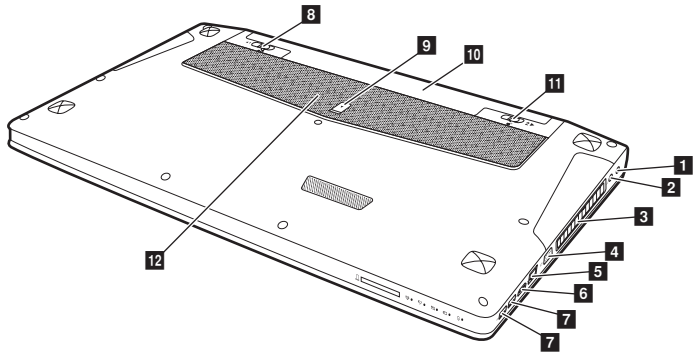

## Parts list

This section presents the following service parts:

- see “Overall” on page 77
- see “LCD FRUs” on page 83
- see “Keyboard” on page 86
- see “Miscellaneous parts” on page 92
- see “AC adapters” on page 93
- see “Power cords” on page 94

### **Notes:**

- Each FRU is available for all types or models, unless specific types or models are specified.

## Overall

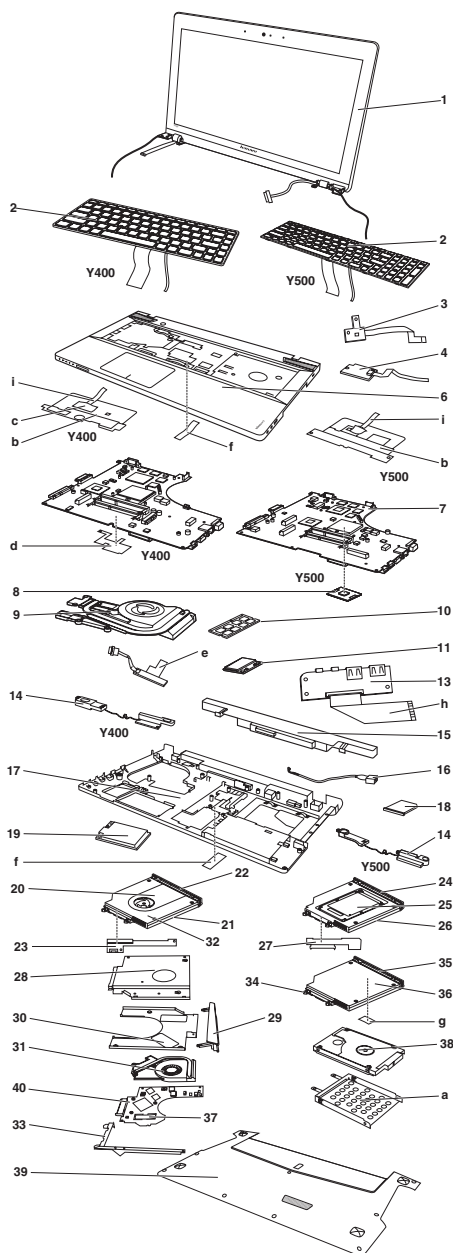


Table 5. Parts list—Overall

| No. | FRU                                                                           | FRU no.   | CRU ID |
|-----|-------------------------------------------------------------------------------|-----------|--------|
| 1   | LCD unit (see “LCD FRUs” on page 83)                                          |           | N      |
| 2   | Keyboard (see “Keyboard” on page 86)                                          |           | N      |
| 3   | QIQY5 Function Board (Y400)                                                   | 90001122  | N      |
| 3   | QIQY6 Function Board W/Cable (Y500)                                           | 90001160  | N      |
| 4   | QIQY5 Power Board (Y400)                                                      | 90001123  | N      |
| 4   | QIQY6 Power Board W/Cable (Y500)                                              | 90001161  | N      |
| 6   | QIQY5 Upper Case (Y400)                                                       | 90201977  | N      |
| 6   | QIQY6 Upper Case (Y500)                                                       | 90202005  | N      |
| 7   | QIQY5 MB 2G 35W W/BT/BL (Y400)                                                | 90001094  | N      |
| 7   | QIQY5 W8P MB 2G 35W W/BT/BL (Y400)                                            | 90001095  | N      |
| 7   | QIQY5 W8 MB 2G 35W W/BT/BL (Y400)                                             | 90001096  | N      |
| 7   | QIQY5 MB 2G 45W W/BT/BL (Y400)                                                | 90001097  | N      |
| 7   | QIQY5 W8P MB 2G 45W W/BT/BL (Y400)                                            | 90001098  | N      |
| 7   | QIQY5 W8 MB 2G 45W W/BT/BL (Y400)                                             | 90001099  | N      |
| 7   | QIQY5 MB 2G 35W W/BT (Y400)                                                   | 90001100  | N      |
| 7   | QIQY5 W8P MB 2G 35W W/BT (Y400)                                               | 90001101  | N      |
| 7   | QIQY5 W8 MB 2G 35W W/BT (Y400)                                                | 90001102  | N      |
| 7   | QIQY5 MB 2G 45W W/BT (Y400)                                                   | 90001103  | N      |
| 7   | QIQY5 W8P MB 2G 45W W/BT (Y400)                                               | 90001104  | N      |
| 7   | QIQY5 W8 MB 2G 45W W/BT (Y400)                                                | 90001105  | N      |
| 7   | QIQY5 MB 1G 35W W/BT/BL (Y400)                                                | 90001106  | N      |
| 7   | QIQY5 W8P MB 1G 35W W/BT/BL (Y400)                                            | 90001107  | N      |
| 7   | QIQY5 W8 MB 1G 35W W/BT/BL (Y400)                                             | 90001108  | N      |
| 7   | QIQY5 MB 1G 45W W/BT/BL (Y400)                                                | 90001109  | N      |
| 7   | QIQY5 W8P MB 1G 45W W/BT/BL (Y400)                                            | 90001110  | N      |
| 7   | QIQY5 W8 MB 1G 45W W/BT/BL (Y400)                                             | 90001111  | N      |
| 7   | QIQY5 MB 1G 35W W/BT (Y400)                                                   | 90001112  | N      |
| 7   | QIQY5 W8P MB 1G 35W W/BT (Y400)                                               | 90001113  | N      |
| 7   | QIQY5 W8 MB 1G 35W W/BT (Y400)                                                | 90001114  | N      |
| 7   | QIQY5 MB 1G 45W W/BT (Y400)                                                   | 90001115  | N      |
| 7   | QIQY5 W8P MB 1G 45W W/BT (Y400)                                               | 90001116  | N      |
| 7   | QIQY5 W8 MB 1G 45W W/BT (Y400)                                                | 90001117  | N      |
| 7   | QIQY6 MB 2G 35W W/BT/BL (Y500)                                                | 90001154  | N      |
| 7   | QIQY6 W8P MB 2G 35W W/BT/BL (Y500)                                            | 90001155  | N      |
| 7   | QIQY6 W8 MB 2G 35W W/BT/BL (Y500)                                             | 90001156  | N      |
| 7   | QIQY6 MB 2G 45W W/BT/BL (Y500)                                                | 90001157  | N      |
| 7   | QIQY6 W8P MB 2G 45W W/BT/BL (Y500)                                            | 90001158  | N      |
| 7   | QIQY6 W8 MB 2G 45W W/BT/BL (Y500)                                             | 90001159  | N      |
| 8   | Processor, Ivy bridge core Quad-Core 45W Intel I7-3610QM 2.3G E1 6M 4cPGA CPU | 102500289 | N      |
| 8   | Processor, Ivy bridge core Quad-Core 45W Intel I7-3720QM 2.6G E1 6M 4cPGA CPU | 102500304 | N      |
| 8   | Processor, Ivy bridge core Quad-Core 45W Intel I7-3820QM 2.7G E1 6M 4cPGA CPU | 102500306 | N      |
| 8   | Processor, Ivy bridge core Quad-Core 45W Intel I7-3630QM 2.4G E1 6M 4cPGA CPU | 102500436 | N      |

Table 5. Parts list—Overall (continued)

| No. | FRU                                                                           | FRU no.   | CRU ID |
|-----|-------------------------------------------------------------------------------|-----------|--------|
| 8   | Processor, Ivy bridge core Quad-Core 35W Intel I7-3612QM 2.1G E1 6M 4cPGA CPU | 102500290 | N      |
| 8   | Processor, Ivy bridge core Quad-Core 35W Intel I7-3632QM 2.2G E1 6M 4cPGA CPU | 102500437 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I7-3520M 2.9G L1 4M 2cPGA CPU  | 102500295 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I5-3360M 2.8G L1 3M 2cPGA CPU  | 102500297 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I5-3320M 2.6G L1 3M 2cPGA CPU  | 102500299 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I5-3210M 2.5G L1 3M 2cPGA CPU  | 102500301 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I5-3230M 2.6G 3M 2cPGA CPU     | 102500484 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I3-3130M 2.6G 3M 2cPGA CPU     | 102500485 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I3-3110M 2.3G L1 3M 2cPGA CPU  | 102500303 | N      |
| 8   | Processor, Ivy bridge core Dual Core 35W Intel I3-3120M 2.5G L1 3M 2cPGA CPU  | 102500435 | N      |
| 9   | QIQY5 Thermal Module (Y400)                                                   | 90201967  | N      |
| 9   | QIQY6 Thermal Module (Y500)                                                   | 90202002  | N      |
| 10  | DDR3 1600 2GB M471B5773DH0-CK0 DDR3 1600 2GB                                  | 11200340  | **     |
| 10  | DDR3 1600 2GB HMT32556CFR8C-PB DDR3 1600 2GB                                  | 11200343  | **     |
| 10  | DDR3 1600 2GB RMT3150ED58E8W-1600 DDR3 1600 2GB                               | 11200392  | **     |
| 10  | DDR3 1600 2GB SP321NH08IAF DDR3 1600 2GB                                      | 11200394  | **     |
| 10  | DDR3 1600 2GB Nan NT2GC64B88G0NS-DI DDR3 1600 2GB                             | 11201041  | **     |
| 10  | DDR3 1600 4GB M471B5273DH0-CK0 DDR3 1600 4GB                                  | 11200341  | **     |
| 10  | DDR3 1600 4GB HMT351S6CFR8C-PB DDR3 1600 4GB                                  | 11200344  | **     |
| 10  | DDR3 1600 4GB RMT3160ED58E9W-1600 DDR3 1600 4GB                               | 11200393  | **     |
| 10  | DDR3 1600 4GB SP322NQ08IAF DDR3 1600 4GB                                      | 11200395  | **     |
| 10  | DDR3 1600 4GB Nan NT4GC64B8HG0NS-DI DDR3 1600 4GB                             | 11201042  | **     |
| 10  | DDR3 1600 8GB M471B1G73BH0-CK0 DDR3 1600 8GB                                  | 11200342  | **     |
| 10  | DDR3 1600 8GB HMT41GS6MFR8C-PB DDR3 1600 8GB                                  | 11200345  | **     |
| 11  | WLAN, WiFi 2x2 BGN+BT4.0 Intel 2230 BGN+BT M PCIE HMC                         | 20200078  | **     |
| 11  | WLAN, 3*3 Intel 6300N MOW M PCIE NB HMC (LI) (Y400)                           | 20002323  | **     |
| 11  | WLAN, WiFi 1x1 BGN Cbt BCM94313HMG 1x1BGN HMC                                 | 20200102  | **     |
| 11  | WLAN, WiFi 1x1 BGN Liteon HB125 1x1BGN HMC                                    | 20200223  | **     |

Table 5. Parts list—Overall (continued)

| No. | FRU                                                                 | FRU no.   | CRU ID |
|-----|---------------------------------------------------------------------|-----------|--------|
| 11  | WLAN, WiFi 2x2 ABGN+BT4.0 Cbt BCM943228HMB 2x2ABGN+BT4.0 HMC (Y400) | 20200221  | **     |
| 11  | WLAN, WiFi 2x2 ABGN+BT4.0 Liteon WB222 2x2ABGN+BT4.0 HMC (Y400)     | 20200225  | **     |
| 11  | WLAN, WiFi 1x1 BGN+BT4.0 Cbt BCM943142HM 1x1BGN+BT4.0 HMC           | 20200222  | **     |
| 11  | WLAN, WiFi 1x1 BGN+BT4.0 Liteon WB225 1x1BGN+BT4.0 HMC              | 20200224  | **     |
| 13  | QIQY5 Audio Board (Y400)                                            | 90001124  | N      |
| 13  | QIQY6 USB Board W/Cable (Y500)                                      | 90001163  | N      |
| 14  | Speaker, JBL Speaker Y490 JBL Blade N Speaker (Y400)                | 101500184 | N      |
| 14  | Speaker, JBL Speaker Y590 JBL Odyssey II Speaker (Y500)             | 101500185 | N      |
| 15  | Battery, 6cell 72/71Wh Y490 Sanyo L11S6R01 3S2P 72Wh bty            | 121500070 | *      |
| 15  | Battery, 6cell 72/71Wh Y490 LG L11L6R02 6cell 71Wh bty              | 121500072 | *      |
| 15  | Battery, 62Wh 6cell Yx0 LG L12L6E01 11.1V62Wh 6cellbty              | 121500126 | *      |
| 15  | Battery, 62Wh 6cell Yx0 SY L12S6E01 10.8V62Wh 6cellbty              | 121500127 | *      |
| 16  | QIQY5 DC-IN Board W/Cable (Y400)                                    | 90001126  | N      |
| 16  | QIQY6 DC-IN Board W/Cable (Y500)                                    | 90001162  | N      |
| 17  | QIQY5 Lower Case (Y400)                                             | 90201978  | N      |
| 17  | QIQY6 Lower Case (Y500)                                             | 90202006  | N      |
| 18  | QIQY5 SD Dummy Card (Y400)                                          | 90201944  | *      |
| 18  | QIQY6 SD Dummy Card (Y500)                                          | 90201944  | *      |
| 19  | SSD, mSATA 16G Samsung MZMPA016HMCD 16G mSATA SSD                   | 16200255  | **     |
| 19  | SSD, mSATA 16G Sandisk U100 16G mSATA SSD                           | 16200215  | **     |
| 20  | QIQY5 2ND Fan Upper Case (Y400)                                     | 90201949  | *      |
| 20  | QIQY6 2ND Fan Upper Case (Y500)                                     | 90201984  | *      |
| 21  | QIQY5 2ND Fan Lower Case (Y400)                                     | 90201950  | *      |
| 22  | QIQY5 2ND Fan Bezel (Y400)                                          | 90201948  | *      |
| 22  | QIQY6 2ND Fan Bezel (Y500)                                          | 90201983  | *      |
| 23  | QIQY5 2ND Fan Board (Y400)                                          | 90001125  | *      |
| 23  | QIQY6 2ND Fan Board (Y500)                                          | 90001125  | *      |
| 24  | QIQY5 2ND HDD Bezel (Y400)                                          | 90201955  | *      |
| 24  | QIQY6 2ND HDD Bezel (Y500)                                          | 90201986  | *      |
| 25  | QIQY5 2ND HDD Upper Case (Y400)                                     | 90201956  | *      |
| 25  | QIQY6 2ND HDD Upper Case (Y500)                                     | 90201987  | *      |
| 26  | QIQY5 2ND HDD Lower Case (Y400)                                     | 90201957  | *      |
| 26  | QIQY6 2ND HDD Lower Case (Y500)                                     | 90201988  | *      |
| 27  | QIQY5 HDD Board (Y400)                                              | 90001119  | *      |
| 27  | QIQY6 HDD Board (Y500)                                              | 90001119  | *      |
| 28  | QIQY5 2ND VGA Lower Case (Y400)                                     | 90201964  | *      |
| 28  | QIQY6 2ND VGA Lower Case (Y500)                                     | 90201964  | *      |
| 29  | QIQY5 2ND VGA Bezel (Y400)                                          | 90201961  | *      |



Table 5. Parts list—Overall (continued)

| No. | FRU                                                                                | FRU no.  | CRU ID |
|-----|------------------------------------------------------------------------------------|----------|--------|
| 29  | QIQY6 2ND VGA Bezel (Y500)                                                         | 90201991 | *      |
| 30  | QIQY5 2ND VGA Upper Case (Y400)                                                    | 90201963 | *      |
| 30  | QIQY6 2ND VGA Upper Case (Y500)                                                    | 90201993 | *      |
| 31  | QIQY5 2ND VGA Thermal Module (Y400)                                                | 90201966 | *      |
| 31  | QIQY6 2ND VGA Thermal Module (Y500)                                                | 90201966 | *      |
| 32  | QIQY5 2ND Fan (Y400)                                                               | 90201968 | *      |
| 32  | QIQY6 2ND Fan (Y500)                                                               | 90201968 | *      |
| 33  | QIQY5 Module Frame For ODD (Y400)                                                  | 90201959 | *      |
| 33  | QIQY5 2ND Module Frame For (VGA/Fan/HDD) (Y400)                                    | 90201962 | *      |
| 33  | QIQY6 Module Frame For ODD (Y500)                                                  | 90201990 | *      |
| 33  | QIQY6 2ND Module Frame For(VGA/Fan/HDD) (Y500)                                     | 90201992 | *      |
| 34  | ODD, 9.5mm Tray in Rambo HLDS GU70N Slim Tray DVD Rambo ODD                        | 25205807 | *      |
| 34  | ODD, 9.5mm Tray in Rambo PSN UJ8B2 Slim Tray DVD Rambo ODD                         | 25204157 | *      |
| 34  | ODD, 9.5mm Tray in Rambo PLDS DU-8A5SH Slim Tray DVD Rambo ODD                     | 25204155 | *      |
| 34  | ODD, 9.5mm BD Tray in Rambo PSN UJ262 9.5mm BD Rambo w/o bezel-LH(ES sample ready) | 25209259 | *      |
| 34  | ODD, 9.5mm BD Tray in Rambo HLDS BU10N 9.5mm BD Rambo w/o bezel-LH                 | 25209260 | *      |
| 35  | QIQY5 ODD Bezel (Y400)                                                             | 90201958 | *      |
| 35  | QIQY6 ODD Bezel (Y500)                                                             | 90201989 | *      |
| 36  | QIQY5 ODD Dummy Card (Y400)                                                        | 90201939 | *      |
| 36  | QIQY6 ODD Dummy Card (Y500)                                                        | 90201981 | *      |
| 37  | QIQY5 VGA Thermal Pad (Y400)                                                       | 90201965 | N      |
| 37  | QIQY6 VGA Thermal Pad (Y500)                                                       | 90201965 | N      |
| 38  | Hard disk drive, 500G 5400rpm ST500LM012 5.4K 9.5 500G HDD                         | 16200210 | **     |
| 38  | Hard disk drive, 500G 5400rpm WD5000LPVT-08G33T1 7mm 5.4K rpm 500G HDD             | 16200264 | **     |
| 38  | Hard disk drive, 500G 5400rpm WD WD5000BPVT-24A1YT0 5400PRM 9.5mm 500 HDD          | 16200089 | **     |
| 38  | Hard disk drive, 500G 5400rpm ST500LT012 5.4K 7mm 500G HDD                         | 16200211 | **     |
| 38  | Hard disk drive, 500G 5400rpm HTS545050A7E380 RV 7mm 5.4K 500G HDD                 | 16200297 | **     |
| 38  | Hard disk drive, 750G 5400rpm ST750LM022 5.4K 9.5 750G HDD                         | 16200209 | **     |
| 38  | Hard disk drive, 750G 5400rpm WD7500BPVT-24HXZT1/WD7500BPVT-24HXZ                  | 16004848 | **     |
| 38  | Hard disk drive, 750G 5400rpm HTS541075A9E680 9.5 5.4K 750G HDD                    | 16200192 | **     |
| 38  | Hard disk drive, 750G 5400rpm WD WD7500BPVT-24A1YT0 5400PRM 9.5mm 750 HDD          | 16200088 | **     |
| 38  | Hard disk drive, 1TB 5400rpm ST1000LM024 5.4K 9.5 1T HDD                           | 16200208 | **     |


*Table 5. Parts list—Overall (continued)*

| No. | FRU                                                                   | FRU no.  | CRU ID |
|-----|-----------------------------------------------------------------------|----------|--------|
| 38  | Hard disk drive, 1TB 5400rpm WD WD10JPVT-24A1YT0 5400PRM 9.5mm 1T HDD | 16200071 | **     |
| 38  | Hard disk drive, 1TB 5400rpm HTS541010A9E680 9.5 5.4K 1T HDD          | 16200193 | **     |
| 38  | Hard disk drive, 750G 7200rpm hybrid ST750LX003 9.5mm 7.2K 750G SSHD  | 16200299 | **     |
| 39  | QIQY5 Thermal Door (Y400)                                             | 90201951 | **     |
| 39  | QIQY6 Thermal Door (Y500)                                             | 90201985 | **     |
| 40  | QIQY5 2ND VGA Board (Y400)                                            | 90001120 | *      |
| 40  | QIQY6 2ND VGA Board (Y500)                                            | 90001120 | *      |

## LCD FRUs

In Lenovo Y400/Y500, there are following types of LCDs.

- "14.0-in. HD TFT" Y400
- "15.6-in. HD TFT" Y500

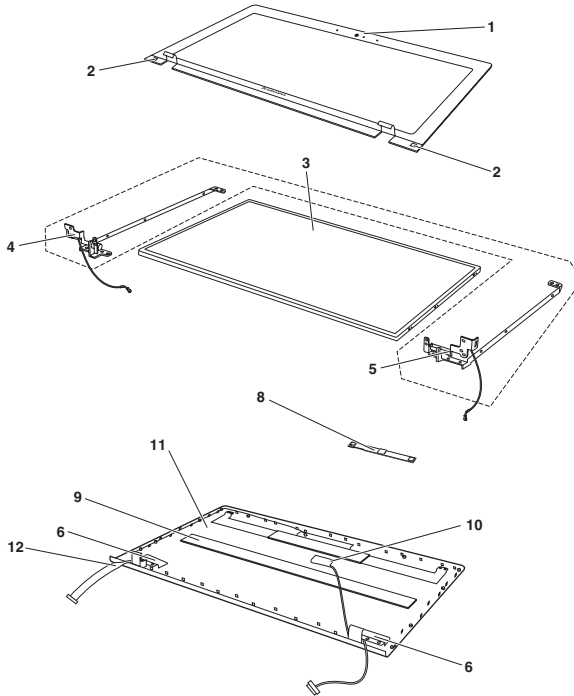

## 14.0-in. HD TFT (Y400)

Table 6. Parts list—14.0-in. HD TFT

| No. | FRU                                                      | FRU no.  | CRU ID |
|-----|----------------------------------------------------------|----------|--------|
| 1   | QIQY5 LCD Bezel                                          | 90201975 | N      |
| 2   | QIQY5 LCD Bezel Mylar                                    | 90201946 | N      |
| 2   | QIQY5 TP Tape                                            | 90201947 | N      |
| 3   | Panel, 14.0W Glare AUO B140XTN03.0 9A HD G F LED1 NB LCD | 18200625 | N      |
| 3   | Panel, 14.0W Glare SDC LTN140AT20 L02 HD G F LED1 NB LCD | 18200697 | N      |
| 3   | Panel, 14.0W Glare LGD LP140WH2-TLE2 HD G F LED1 NB LCD  | 18200152 | N      |
| 3   | Panel, 14.0W Glare LGD LP140WH2 TLS1 HD G F LED1 NB LCD  | 18200820 | N      |
| 3   | Panel, 14.0W Glare CMI N140BGE-L42 HD G F LED1 NB LCD    | 18200153 | N      |
| 4   | QIQY5 Hinge L                                            | 90201973 | N      |
| 5   | QIQY5 Hinge R                                            | 90201972 | N      |
| 6   | QIQY5 Antenna                                            | 90201940 | N      |
| 8   | Camera, USB3.0 BIS BN6N1NVT5-000(HF) HD USB3 NB camera   | 20200193 | N      |
| 8   | Camera, USB3.0 CCY CNFB1C021003350LH HD USB3 NB camera   | 20200194 | N      |
| 8   | Camera, USB3.0 LTN 11P2SF170 HD USB3 NB camera           | 20200203 | N      |
| 9   | QIQY5 LCD Cover Sponge                                   | 90201974 | N      |
| 10  | QIQY5 LCD Cable W/Camera Cable                           | 90201970 | N      |
| 11  | QIQY5 LCD Cover                                          | 90201976 | N      |

**15.6-in. HD TFT (Y500)**

Table 7. Parts list—15.6-in. HD TFT

| No. | FRU                                                                      | FRU no.  | CRU ID |
|-----|--------------------------------------------------------------------------|----------|--------|
| 1   | QIQY6 LCD Bezel                                                          | 90202003 | N      |
| 2   | QIQY6 TP Tape                                                            | 90201982 | N      |
| 3   | Panel, 15.6W Wedge AUO B156XTN02.0 HD G W LED1 NB LCD                    | 18200157 | N      |
| 3   | Panel, 15.6W Wedge SEC LTN156AT24-L01 HD G W LED1 NB LCD                 | 18200114 | N      |
| 3   | Panel, 15.6W Wedge LGD LP156WH4-TLN1 HD G W LED1 NB LCD                  | 18200158 | N      |
| 3   | Panel, 15.6W Wedge CMIN156BGE-L21 HD G W LED1 NB LCD                     | 18004787 | N      |
| 3   | Panel, 15.6W Wedge BOE HB156WX1-100 HD G W LED1 NB LCD                   | 18200677 | N      |
| 3   | Panel, 15.6W Wedge FHD LGD LP156WF1-TLC1 FHD G W LED1 NB LCD             | 18200442 | N      |
| 3   | Panel, 15.6W Wedge FHD LGD LP156WF1-TLB2 FHD AG W LED1 NB LCD            | 18200453 | N      |
| 4   | QIQY6 Hinge L Bracket                                                    | 90201996 | N      |
| 5   | QIQY6 Hinge R Bracket                                                    | 90201997 | N      |
| 6   | Hinge Antenna 2.3/2.7GHz Chengjun Acon Chengjun Y500 2.4/2.5 Hinge ANT L | 20200332 | N      |
| 6   | Hinge Antenna 2.3/2.7GHz Sinher Acon Sinher Y500 2.4/2.5 Hinge ANT L     | 20200334 | N      |
| 6   | Hinge Antenna 2.4/2.5GHz SZS Acon SZS Y500 2.4/2.5 Hinge ANT L           | 20200343 | N      |
| 7   | Hinge Antenna 2.3/2.7GHz Chengjun Acon Chengjun Y500 2.4/2.5 Hinge ANT R | 20200333 | N      |
| 7   | Hinge Antenna 2.3/2.7GHz Sinher Acon Sinher Y500 2.4/2.5 Hinge ANT R     | 20200335 | N      |
| 7   | Hinge Antenna 2.4/2.5GHz SZS Acon SZS Y500 2.4/2.5 Hinge ANT R           | 20200344 | N      |
| 8   | Camera, USB3.0 BIS BN6N1NVT5-000(HF) HD USB3 NB camera                   | 20200193 | N      |
| 8   | Camera, USB3.0 CCY CNFB1C021003350LH HD USB3 NB camera                   | 20200194 | N      |
| 8   | Camera, USB3.0 LTN 11P2SF170 HD USB3 NB camera                           | 20200203 | N      |
| 10  | QIQY6 LCD Cable                                                          | 90202008 | N      |
| 11  | QIQY6 LCD Cover                                                          | 90202004 | N      |
| 12  | QIQY6 Camera Board Cable                                                 | 90202009 | N      |

## Keyboard

Table 8. Parts list—Keyboard

| Language                |                        |                         | P/N      | CRU ID |
|-------------------------|------------------------|-------------------------|----------|--------|
| Y400<br>(Win 8)         | Chicony                | English                 | 25205228 | N      |
|                         |                        | U.K. English            | 25205229 | N      |
|                         |                        | Italian                 | 25205230 | N      |
|                         |                        | Spanish                 | 25205231 | N      |
|                         |                        | Turkish                 | 25205232 | N      |
|                         |                        | Thai                    | 25205233 | N      |
|                         |                        | Portuguese              | 25205234 | N      |
|                         |                        | Latin                   | 25205235 | N      |
|                         |                        | Canadian English&French | 25205236 | N      |
|                         |                        | Korean                  | 25205237 | N      |
|                         |                        | Traditional Chinese     | 25205238 | N      |
|                         |                        | Russian                 | 25205239 | N      |
|                         |                        | French                  | 25205240 | N      |
|                         |                        | German                  | 25205241 | N      |
|                         |                        | Arabic                  | 25205242 | N      |
|                         |                        | Brazilian               | 25205243 | N      |
|                         |                        | Japanese                | 25205244 | N      |
|                         |                        | Dutch                   | 25205245 | N      |
|                         |                        | Greek                   | 25205246 | N      |
|                         |                        | Hebrew                  | 25205247 | N      |
|                         |                        | Hungarian               | 25205248 | N      |
|                         |                        | Four Nordic countries   | 25205249 | N      |
|                         |                        | Belgian                 | 25205250 | N      |
|                         |                        | Icelandic               | 25205251 | N      |
|                         | Slovenian              | 25205252                | N        |        |
|                         | Swiss                  | 25205253                | N        |        |
|                         | International English  | 25205254                | N        |        |
|                         | Czechoslovakian        | 25205255                | N        |        |
|                         | Bulgarian              | 25205256                | N        |        |
|                         | Indian                 | 25205257                | N        |        |
|                         | Chicony<br>(Backlight) | English                 | 25205318 | N      |
|                         |                        | U.S. English            | 25205513 | N      |
|                         |                        | U.K. English            | 25205319 | N      |
|                         |                        | Italian                 | 25205320 | N      |
|                         |                        | Spanish                 | 25205321 | N      |
|                         |                        | Turkish                 | 25205322 | N      |
| Thai                    |                        | 25205323                | N        |        |
| Portuguese              |                        | 25205324                | N        |        |
| Latin                   |                        | 25205325                | N        |        |
| Canadian English&French |                        | 25205326                | N        |        |
| Korean                  |                        | 25205327                | N        |        |
| Traditional Chinese     |                        | 25205328                | N        |        |
| Russian                 | 25205329               | N                       |          |        |
| French                  | 25205330               | N                       |          |        |
| German                  | 25205331               | N                       |          |        |
| Arabic                  | 25205332               | N                       |          |        |
| Brazilian               | 25205333               | N                       |          |        |
| Dutch                   | 25205335               | N                       |          |        |

Table 8. Parts list—Keyboard

| Language        |                                       |                         | P/N      | CRU ID |
|-----------------|---------------------------------------|-------------------------|----------|--------|
| Y400<br>(Win 8) | Chicony<br>(Backlight)<br>(continued) | Greek                   | 25205336 | N      |
|                 |                                       | Hebrew                  | 25205337 | N      |
|                 |                                       | Hungarian               | 25205338 | N      |
|                 |                                       | Four Nordic countries   | 25205339 | N      |
|                 |                                       | Belgian                 | 25205340 | N      |
|                 |                                       | Icelandic               | 25205341 | N      |
|                 |                                       | Slovenian               | 25205342 | N      |
|                 |                                       | Swiss                   | 25205343 | N      |
|                 |                                       | International English   | 25205344 | N      |
|                 |                                       | Czechoslovakian         | 25205345 | N      |
|                 |                                       | Bulgarian               | 25205346 | N      |
|                 | Sunrex                                | Indian                  | 25205347 | N      |
|                 |                                       | English                 | 25205258 | N      |
|                 |                                       | U.K. English            | 25205259 | N      |
|                 |                                       | Italian                 | 25205260 | N      |
|                 |                                       | Spanish                 | 25205261 | N      |
|                 |                                       | Turkish                 | 25205262 | N      |
|                 |                                       | Thai                    | 25205263 | N      |
|                 |                                       | Portuguese              | 25205264 | N      |
|                 |                                       | Latin                   | 25205265 | N      |
|                 |                                       | Canadian English&French | 25205266 | N      |
|                 |                                       | Korean                  | 25205267 | N      |
|                 |                                       | Traditional Chinese     | 25205268 | N      |
|                 |                                       | Russian                 | 25205269 | N      |
|                 |                                       | French                  | 25205270 | N      |
|                 |                                       | German                  | 25205271 | N      |
|                 |                                       | Arabic                  | 25205272 | N      |
|                 |                                       | Brazilian               | 25205273 | N      |
|                 |                                       | Dutch                   | 25205275 | N      |
|                 |                                       | Greek                   | 25205276 | N      |
|                 |                                       | Hebrew                  | 25205277 | N      |
|                 |                                       | Hungarian               | 25205278 | N      |
|                 |                                       | Four Nordic countries   | 25205279 | N      |
|                 |                                       | Belgian                 | 25205280 | N      |
|                 |                                       | Icelandic               | 25205281 | N      |
|                 |                                       | Slovenian               | 25205282 | N      |
|                 |                                       | Swiss                   | 25205283 | N      |
|                 |                                       | International English   | 25205284 | N      |
|                 |                                       | Czechoslovakian         | 25205285 | N      |
|                 |                                       | Bulgarian               | 25205286 | N      |
|                 |                                       | Indian                  | 25205287 | N      |

Table 8. Parts list—Keyboard

| Language        |                       |                         | P/N      | CRU ID |
|-----------------|-----------------------|-------------------------|----------|--------|
| Y400<br>(Win 8) | Sunrex<br>(Backlight) | English                 | 25205348 | N      |
|                 |                       | U.S. English            | 25205514 | N      |
|                 |                       | U.K. English            | 25205349 | N      |
|                 |                       | Italian                 | 25205350 | N      |
|                 |                       | Spanish                 | 25205351 | N      |
|                 |                       | Turkish                 | 25205352 | N      |
|                 |                       | Thai                    | 25205353 | N      |
|                 |                       | Portuguese              | 25205354 | N      |
|                 |                       | Latin                   | 25205355 | N      |
|                 |                       | Canadian English&French | 25205356 | N      |
|                 |                       | Korean                  | 25205357 | N      |
|                 |                       | Traditional Chinese     | 25205358 | N      |
|                 |                       | Russian                 | 25205359 | N      |
|                 |                       | French                  | 25205360 | N      |
|                 |                       | German                  | 25205361 | N      |
|                 |                       | Arabic                  | 25205362 | N      |
|                 |                       | Brazilian               | 25205363 | N      |
|                 |                       | Dutch                   | 25205365 | N      |
|                 |                       | Greek                   | 25205366 | N      |
|                 |                       | Hebrew                  | 25205367 | N      |
|                 |                       | Hungarian               | 25205368 | N      |
|                 |                       | Four Nordic countries   | 25205369 | N      |
|                 |                       | Belgian                 | 25205370 | N      |
|                 |                       | Icelandic               | 25205371 | N      |
|                 |                       | Slovenian               | 25205372 | N      |
|                 |                       | Swiss                   | 25205373 | N      |
|                 |                       | International English   | 25205374 | N      |
|                 |                       | Czechoslovakian         | 25205375 | N      |
|                 |                       | Bulgarian               | 25205376 | N      |
|                 | Indian                | 25205377                | N        |        |
|                 | Darfon                | English                 | 25205288 | N      |
|                 |                       | U.K. English            | 25205289 | N      |
|                 |                       | Italian                 | 25205290 | N      |
|                 |                       | Spanish                 | 25205291 | N      |
|                 |                       | Turkish                 | 25205292 | N      |
|                 |                       | Thai                    | 25205293 | N      |
|                 |                       | Portuguese              | 25205294 | N      |
|                 |                       | Latin                   | 25205295 | N      |
|                 |                       | Canadian English&French | 25205296 | N      |
|                 |                       | Korean                  | 25205297 | N      |
|                 |                       | Traditional Chinese     | 25205298 | N      |
|                 |                       | Russian                 | 25205299 | N      |
|                 |                       | French                  | 25205300 | N      |
|                 |                       | German                  | 25205301 | N      |
|                 |                       | Arabic                  | 25205302 | N      |
|                 |                       | Brazilian               | 25205303 | N      |
|                 |                       | Dutch                   | 25205305 | N      |



Table 8. Parts list—Keyboard

| Language        |                       |                         | P/N      | CRU ID |
|-----------------|-----------------------|-------------------------|----------|--------|
| Y400<br>(Win 8) | Darfon<br>(continued) | Greek                   | 25205306 | N      |
|                 |                       | Hebrew                  | 25205307 | N      |
|                 |                       | Hungarian               | 25205308 | N      |
|                 |                       | Four Nordic countries   | 25205309 | N      |
|                 |                       | Belgian                 | 25205310 | N      |
|                 |                       | Icelandic               | 25205311 | N      |
|                 |                       | Slovenian               | 25205312 | N      |
|                 |                       | Swiss                   | 25205313 | N      |
|                 |                       | International English   | 25205314 | N      |
|                 |                       | Czechoslovakian         | 25205315 | N      |
|                 | Darfon<br>(Backlight) | Bulgarian               | 25205316 | N      |
|                 |                       | Indian                  | 25205317 | N      |
|                 |                       | English                 | 25205378 | N      |
|                 |                       | U.K. English            | 25205515 | N      |
|                 |                       | U.S. English            | 25205379 | N      |
|                 |                       | Italian                 | 25205380 | N      |
|                 |                       | Spanish                 | 25205381 | N      |
|                 |                       | Turkish                 | 25205382 | N      |
|                 |                       | Thai                    | 25205383 | N      |
|                 |                       | Portuguese              | 25205384 | N      |
|                 |                       | Latin                   | 25205385 | N      |
|                 |                       | Canadian English&French | 25205386 | N      |
|                 |                       | Korean                  | 25205387 | N      |
|                 |                       | Traditional Chinese     | 25205388 | N      |
|                 |                       | Russian                 | 25205389 | N      |
|                 |                       | French                  | 25205390 | N      |
|                 |                       | German                  | 25205391 | N      |
|                 |                       | Arabic                  | 25205392 | N      |
|                 |                       | Brazilian               | 25205393 | N      |
|                 |                       | Japanese                | 25205394 | N      |
|                 |                       | Dutch                   | 25205395 | N      |
|                 |                       | Greek                   | 25205396 | N      |
|                 |                       | Hebrew                  | 25205397 | N      |
|                 |                       | Hungarian               | 25205398 | N      |
|                 |                       | Four Nordic countries   | 25205399 | N      |
|                 |                       | Belgian                 | 25205400 | N      |
|                 |                       | Icelandic               | 25205401 | N      |
|                 |                       | Slovenian               | 25205402 | N      |
|                 |                       | Swiss                   | 25205403 | N      |
|                 |                       | International English   | 25205404 | N      |
|                 |                       | Czechoslovakian         | 25205405 | N      |
|                 |                       | Bulgarian               | 25205406 | N      |
|                 |                       | Indian                  | 25205407 | N      |

Table 8. Parts list—Keyboard

| Language        |                        |                         | P/N      | CRU ID |
|-----------------|------------------------|-------------------------|----------|--------|
| Y500<br>(Win 8) | Chicony<br>(Backlight) | English                 | 25205408 | N      |
|                 |                        | U.S. English            | 25205516 | N      |
|                 |                        | U.K. English            | 25205409 | N      |
|                 |                        | Italian                 | 25205410 | N      |
|                 |                        | Spanish                 | 25205411 | N      |
|                 |                        | Turkish                 | 25205412 | N      |
|                 |                        | Thai                    | 25205413 | N      |
|                 |                        | Portuguese              | 25205414 | N      |
|                 |                        | Latin                   | 25205415 | N      |
|                 |                        | Canadian English&French | 25205416 | N      |
|                 |                        | Korean                  | 25205417 | N      |
|                 |                        | Traditional Chinese     | 25205418 | N      |
|                 |                        | Russian                 | 25205419 | N      |
|                 |                        | French                  | 25205420 | N      |
|                 |                        | German                  | 25205421 | N      |
|                 |                        | Arabic                  | 25205422 | N      |
|                 |                        | Brazilian               | 25205423 | N      |
|                 |                        | Dutch                   | 25205425 | N      |
|                 |                        | Greek                   | 25205426 | N      |
|                 |                        | Hebrew                  | 25205427 | N      |
|                 |                        | Hungarian               | 25205428 | N      |
|                 |                        | Four Nordic countries   | 25205429 | N      |
|                 |                        | Belgian                 | 25205430 | N      |
|                 |                        | Icelandic               | 25205431 | N      |
|                 |                        | Slovenian               | 25205432 | N      |
|                 |                        | Swiss                   | 25205433 | N      |
|                 |                        | International English   | 25205434 | N      |
|                 |                        | Czechoslovakian         | 25205435 | N      |
|                 |                        | Bulgarian               | 25205436 | N      |
|                 |                        | Indian                  | 25205437 | N      |
|                 | OKI<br>(Backlight)     | English                 | 25205438 | N      |
|                 |                        | U.S. English            | 25205518 | N      |
|                 |                        | U.K. English            | 25205439 | N      |
|                 |                        | Italian                 | 25205440 | N      |
|                 |                        | Spanish                 | 25205441 | N      |
|                 |                        | Turkish                 | 25205442 | N      |
|                 |                        | Thai                    | 25205443 | N      |
|                 |                        | Portuguese              | 25205444 | N      |
|                 |                        | Latin                   | 25205445 | N      |
|                 |                        | Canadian English&French | 25205446 | N      |
|                 |                        | Korean                  | 25205447 | N      |
|                 |                        | Traditional Chinese     | 25205448 | N      |
|                 |                        | Russian                 | 25205449 | N      |
|                 |                        | French                  | 25205450 | N      |
|                 |                        | German                  | 25205451 | N      |
|                 |                        | Arabic                  | 25205452 | N      |
|                 |                        | Brazilian               | 25205453 | N      |
|                 |                        | Dutch                   | 25205455 | N      |

Table 8. Parts list—Keyboard

| Language        |                                   |                         | P/N      | CRU ID |
|-----------------|-----------------------------------|-------------------------|----------|--------|
| Y500<br>(Win 8) | OKI<br>(Backlight)<br>(continued) | Greek                   | 25205456 | N      |
|                 |                                   | Hebrew                  | 25205457 | N      |
|                 |                                   | Hungarian               | 25205458 | N      |
|                 |                                   | Four Nordic countries   | 25205459 | N      |
|                 |                                   | Belgian                 | 25205460 | N      |
|                 |                                   | Icelandic               | 25205461 | N      |
|                 |                                   | Slovenian               | 25205462 | N      |
|                 |                                   | Swiss                   | 25205463 | N      |
|                 |                                   | International English   | 25205464 | N      |
|                 |                                   | Czechoslovakian         | 25205465 | N      |
|                 | Dafon<br>(Backlight)              | Bulgarian               | 25205466 | N      |
|                 |                                   | Indian                  | 25205467 | N      |
|                 |                                   | English                 | 25205474 | N      |
|                 |                                   | U.S. English            | 25205517 | N      |
|                 |                                   | U.K. English            | 25205475 | N      |
|                 |                                   | Italian                 | 25205476 | N      |
|                 |                                   | Spanish                 | 25205477 | N      |
|                 |                                   | Turkish                 | 25205478 | N      |
|                 |                                   | Thai                    | 25205479 | N      |
|                 |                                   | Portuguese              | 25205480 | N      |
|                 |                                   | Latin                   | 25205481 | N      |
|                 |                                   | Canadian English&French | 25205482 | N      |
|                 |                                   | Korean                  | 25205483 | N      |
|                 |                                   | Traditional Chinese     | 25205484 | N      |
|                 |                                   | Russian                 | 25205485 | N      |
|                 |                                   | French                  | 25205486 | N      |
|                 |                                   | German                  | 25205487 | N      |
|                 |                                   | Arabic                  | 25205488 | N      |
|                 |                                   | Japanese                | 25205490 | N      |
|                 |                                   | Brazilian               | 25205489 | N      |
|                 |                                   | Dutch                   | 25205491 | N      |
|                 |                                   | Greek                   | 25205492 | N      |
|                 |                                   | Hebrew                  | 25205493 | N      |
|                 |                                   | Hungarian               | 25205494 | N      |
|                 |                                   | Four Nordic countries   | 25205495 | N      |
|                 |                                   | Belgian                 | 25205496 | N      |
|                 |                                   | Icelandic               | 25205497 | N      |
|                 |                                   | Slovenian               | 25205498 | N      |
|                 |                                   | Swiss                   | 25205499 | N      |
|                 |                                   | International English   | 25205500 | N      |
|                 |                                   | Czechoslovakian         | 25205501 | N      |
|                 |                                   | Bulgarian               | 25205502 | N      |
|                 |                                   | Indian                  | 25205503 | N      |

## Miscellaneous parts

Table 9. Parts list—Miscellaneous parts

| FRU                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | P/N                                                                                                                                          | CRU ID |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|--------|
| System miscellaneous parts: <ul style="list-style-type: none"> <li>• (a) QIQY5 HDD Bracket (Y400)</li> <li>• (a) QIQY6 HDD Bracket (Y500)</li> <li>• (b) QIQY5 TP Sheet (Y400)</li> <li>• (b) QIQY6 TP Bracket (Y500)</li> <li>• (c) QIQY5 TP Mylar (Y400)</li> <li>• (d) QIQY5 MB Mylar WO/BT (Y400)</li> <li>• (d) QIQY5 MB Mylar W/BT (Y500)</li> <li>• (e) QIQY5 BT Foil (Y400)</li> <li>• (f) QIQY5 Antenna Mylar (Y400)</li> <li>• (f) QIQY6 Cable Mylar (Y500)</li> <li>• (g) QIQY5 ODD Mylar (Y400)</li> <li>• (g) QIQY6 ODD Mylar (Y500)</li> </ul> | 90201952<br>90201952<br>90201953<br>90201994<br>90201954<br>90201942<br>90201943<br>90201945<br>90201941<br>90201995<br>90201960<br>90201960 | N      |
| Cable miscellaneous parts: <ul style="list-style-type: none"> <li>• (h) QIQY5 Audio Cable (Y400)</li> <li>• (i) QIQY5 TP Cable (Y400)</li> <li>• (i) QIQY6 TP Cable (Y500)</li> </ul> <p><b>Note:</b> Italicized letters in parentheses are references to the exploded view in “Overall” on page 77.</p>                                                                                                                                                                                                                                                     | 90201971<br>90201969<br>90202007                                                                                                             | N      |

## AC adapters

Table 10. Parts list—3-pin AC adapters

| FRU                                                     | P/N      | CRU ID |
|---------------------------------------------------------|----------|--------|
| 90W, Delta ADP-90DD BD 20V4.5A adapter (Y400)           | 36001941 | *      |
| 90W, Delta ADP-90DD BD 20V4.5A adapter-CCC (Y400)       | 36200397 | *      |
| 90W, Liteon PA-1900-56LC 20V4.5A adapter (330PF) (Y400) | 36001927 | *      |
| 90W, Liteon PA-1900-56LC 20V4.5A adapter-CCC (Y400)     | 36200404 | *      |
| 90W, Chicony CPA-A090 20V4.5A adapter (330PF) (Y400)    | 36001942 | *      |
| 90W, Chicony CPA-A090 20V4.5A adapter-CCC (Y400)        | 36200414 | *      |
| 120W, Liteon PA-1121-16 19.5V6.15A adapter              | 36002079 | *      |
| 120W, Liteon PA-1121-16 19.5V6.15A adapter-CCC          | 36200403 | *      |
| 120W, Delta ADP-120LH BA 19.5V6.15A adapter             | 36002031 | *      |
| 120W, Delta ADP-120LH BA 19.5V6.15A adapter-CCC         | 36200400 | *      |
| 170W, Delta ADP-170BB B 20V8.5A adapter                 | 36200232 | *      |
| 170W, Delta 45N0111 20V8.5A adapter-CCC                 | 36200401 | *      |

## Screw

Table 11. Parts list—screw

| FRU                                             | P/N      | CRU ID |
|-------------------------------------------------|----------|--------|
| QIQY5 SCREW 2D 3L K 4.5D ZK NL +CR3+0.4T (Y400) | 90001118 | *      |
| QIQY5 SCREW 2D 4.0L K 4.0D NI NL +0.3T (Y400)   | 90201932 | *      |
| QIQY5 SCREW 2 2.0D 2L K 7D ZK NL + CR3+ (Y400)  | 90201933 | *      |
| QIQY5 SCREW 2.5D 4.0L K 5.5D ZK NL +CR3+ (Y400) | 90201934 | *      |
| QIQY5 SCREW 2.45D 8.0L 5.5D 0.8T ZK NL+ (Y400)  | 90201935 | *      |
| QIQY5 SCREW 3.0D 3.0L K 4.9D NI +(Y400)         | 90201936 | *      |
| QIQY5 SCREW 2D 3.2+2.8L K 6.5 1.0T NI + (Y400)  | 90201937 | *      |
| QIQY5 SCREW MM 2D4.0L K 4.0D ZK NL+0.3T (Y400)  | 90201938 | *      |

## Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

*Table 11. Parts list—3-pin power cords*

| Region                                | P/N       | CRU ID |
|---------------------------------------|-----------|--------|
| China                                 | 145000600 | *      |
| • LINETEK PC323+RVV300/300+LS15 1m    |           |        |
| Argentina                             | 145000599 | *      |
| • LINETEK LS15+H03VV-F+LP39 1m        |           |        |
| Danmark                               | 145000598 | *      |
| • LINETEK LS15+H03VV-F+LP-38 1m       |           |        |
| Switzerland                           | 145000597 | *      |
| • LINETEK LS15+H03VV-F+LP-37 1m       |           |        |
| Brazil                                | 145000596 | *      |
| • LINETEK LS15 H03VV-F LP26A 1m       |           |        |
| Israel                                | 145000595 | *      |
| • LINETEK LS15+H03VV-F+LP-41 1m       |           |        |
| UL                                    | 145000594 | *      |
| • LINETEK LP-30B + SPT-2 + LS15 1m    |           |        |
| UK                                    | 145000593 | *      |
| • LINETEK LP-61L+ H03VV-F+ LS15 1m    |           |        |
| India                                 | 145000592 | *      |
| • LINETEK PE-361+ H05VV-F+ LS15 1m    |           |        |
| Italy                                 | 145000591 | *      |
| • LINETEK LS15+H03VV-F+PE-336 1m      |           |        |
| Korea                                 | 145000590 | *      |
| • LINETEK LS15+H05VV-F+LP-E04A 1m     |           |        |
| ANZ                                   | 145000589 | *      |
| • LINETEK LS15+H03VV-F+LP-23A 1m      |           |        |
| TW                                    | 145000588 | *      |
| • LINETEK LS15+VCTF+LP-53 1m          |           |        |
| Japan                                 | 145000587 | *      |
| • LINETEK LS15+VCTF+LP-54 1m          |           |        |
| SA                                    | 145000586 | *      |
| • LINETEK LS15+H03VV-F+PE-364 1m      |           |        |
| CE                                    | 145000585 | *      |
| • LINETEK LP-34+H03VV-F + LS15 1m     |           |        |
| China                                 | 145000568 | *      |
| • Longwell LSG-31+RVV300/300+LS-18 1m |           |        |
| Argentina                             | 145000567 | *      |
| • Longwell LP-24+H03VV-F+LS-18 1m     |           |        |
| Danmark                               | 145000566 | *      |
| • Longwell LP-40+H03VV-F+LS-18 1m     |           |        |
| Switzerland                           | 145000565 | *      |
| • Longwell LP-37+H03VV-F+LS-18 1m     |           |        |

Table 11. Parts list—3-pin power cords (continued)

| Region                                 | P/N       | CRU ID |
|----------------------------------------|-----------|--------|
| Brazil                                 | 145000564 | *      |
| • Longwell LP-46+H03VV-F+LS-18 1m      |           |        |
| Israel                                 | 145000563 | *      |
| • Longwell LP-41+H03VV-F+LS-18 1m      |           |        |
| UL                                     | 145000562 | *      |
| • Longwell LP-30B+SPT-2 18AWG+LS-18 1m |           |        |
| UK                                     | 145000561 | *      |
| • Longwell LP-61L+H03VV-F+LS-18 1m     |           |        |
| India                                  | 145000560 | *      |
| • Longwell LP-67+BIS+LS-18 1m          |           |        |
| Italy                                  | 145000559 | *      |
| • Longwell LP-22+H03VV-F+LS-18 1m      |           |        |
| Korea                                  | 145000558 | *      |
| • Longwell LP-486+KTLH03VV-F+LS-5 1m   |           |        |
| ANZ                                    | 145000557 | *      |
| • Longwell LP-23A+LFC-3R+LS-18 1m      |           |        |
| TW                                     | 145000556 | *      |
| • Longwell LP-71+VCTF+LS-33 1m         |           |        |
| Japan                                  | 145000555 | *      |
| • Longwell LP-54+VCTF+LS-18 1m         |           |        |
| SA                                     | 145000554 | *      |
| • Longwell LP-39+H03VV-F+LS-18 1m      |           |        |
| CE                                     | 145000553 | *      |
| • Longwell LP-34A+H03VV-F+LS-18 1m     |           |        |
| China                                  | 145000538 | *      |
| • VOLEX GB10S3+RVV 300/500+VAC5S 1m    |           |        |
| UL                                     | 145000537 | *      |
| • Volex US15S3+SPT-2 +VAC5S 1m         |           |        |
| India                                  | 145000536 | *      |
| • VOLEX IA6A3+IS694+VAC5S 1m           |           |        |
| Italy                                  | 145000535 | *      |
| • VOLEX IT10S3+HO3VV-F+VAC5S 1m        |           |        |
| Denmark                                | 145000534 | *      |
| • VOLEX MP233D+H03VV-F+VAC5S 1m        |           |        |
| Korea                                  | 145000533 | *      |
| • VOLEX M2511+KETI IEC+VAC5S 1m        |           |        |
| ANZ                                    | 145000532 | *      |
| • VOLEX AU10S3+H03VV-F+VAC5S 1m        |           |        |
| TW                                     | 145000531 | *      |
| • VOLEX TW15CS3+VCTF+VAC5S 1m          |           |        |
| Japan                                  | 145000530 | *      |
| • VOLEX VAC5S+VCTF+M755 1m             |           |        |
| SA                                     | 145000529 | *      |
| • VOLEX SA16A+HO3VV-F+VAC5S 1m         |           |        |

*Table 11. Parts list—3-pin power cords (continued)*

| Region                                 | P/N       | CRU ID |
|----------------------------------------|-----------|--------|
| Argentina                              | 145000528 | *      |
| • VOLEX VA2073+H03VV-F+VAC5S 1m        |           |        |
| Brazil                                 | 145000527 | *      |
| • VOLEX CH10S3+H03VV-F+VAC5S 1m        |           |        |
| Israel                                 | 145000526 | *      |
| • VOLEX SI16S3+H03VV-F+VAC5S 1m        |           |        |
| CE                                     | 145000525 | *      |
| • VOLEX M2511+H03VV-F+VAC5S 1m         |           |        |
| Switzerland                            | 145000524 | *      |
| • VOLEX MP232+H03VV-F+VAC5S 1m         |           |        |
| UK                                     | 145000605 | *      |
| • VOLEX MP5004+H03VV-F+VAC5S 1m        |           |        |
| UK                                     | 145500000 | *      |
| • lux 0031+H03VV-F 0.75/3C+0011 1m     |           |        |
| CE                                     | 145500001 | *      |
| • lux 0033+H03VV-F 0.75/3C+0011 1m     |           |        |
| UL                                     | 145500002 | *      |
| • lux 0014+SPT-2 60°C 18/3C+0016 1m    |           |        |
| China                                  | 145500003 | *      |
| • lux 0036+RVV 300/300 0.75/3C+0002 1m |           |        |
| India                                  | 145500004 | *      |
| • lux 0046+IS694 0.75/3C+0011 1m       |           |        |
| Japan                                  | 145500005 | *      |
| • lux 0018(E)+VCTF 0.75/3C+0021 1m     |           |        |
| ANZ                                    | 145500006 | *      |
| • lux 0038+H03VV-F 0.75/3C+0011 1m     |           |        |
| TW                                     | 145500007 | *      |
| • lux 0019+VCTF 0.75/3C+0021 1m        |           |        |
| Korea                                  | 145500008 | *      |
| • lux 0033+H03VV-F 0.75/3C+0011 1m     |           |        |
| Italy                                  | 145500009 | *      |
| • lux 0029+H03VV-F 0.75/3C+0011 1m     |           |        |
| SA                                     | 145500010 | *      |
| • lux 0044+H03VV-F 0.75/3C+0011 1m     |           |        |
| Brazil                                 | 145500011 | *      |
| • lux 0034+H03VV-F 0.75/3C+0011 1m     |           |        |
| Israel                                 | 145500012 | *      |
| • lux 0041+H03VV-F 0.75/3C+0011 1m     |           |        |
| Switzerland                            | 145500013 | *      |
| • lux 0027+H03VV-F 0.75/3C+0011 1m     |           |        |
| Danmark                                | 145500014 | *      |
| • lux 0048+H03VV-F 0.75/3C+0011 1m     |           |        |
| Argentina                              | 145500015 | *      |
| • lux 0040+H03VV-F 0.75/3C+0011 1m     |           |        |



---

## Notices

---

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

---

### Trademarks

The following terms are either registered trademarks or trademarks of Lenovo in the United States and/or other countries:

Lenovo®

Lenovo logo®

IdeaPad®

VeriFace®

OneKey Rescue® (OneKey Recovery, OneKey Antivirus)

APS®

Power Express®

Energy Management and ReadyComm®

The following terms are trademarks of Microsoft Corporation in the United States, other countries, or both:

Windows®

Windows® 7

The following are trademarks of Intel Corporation or its subsidiaries in the United States, other countries, or both:

Intel®

Intel® Core™ 2 Duo

Other company, product, or service names may be the trademarks or service marks of others.