


## RAISING OR LOWERING THE PRESSER FOOT

- ① By raising or lowering the presser foot lifter, the presser foot goes up and down respectively.
- ② For additional clearance, the foot lifter can be raised higher to sew on heavy fabrics.

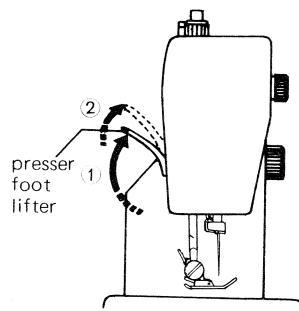

## REGULATING THE PRESSER FOOT PRESSURE (Patch-0-Matic)

To release the pressure, push ring (A) downwards. This causes the regulator to spring up to its highest position. The material is now free from any pressure of the presser foot.

For sewing thin or light materials, push regulator (B) down just a little to provide the light pressure required.

If you are sewing thick or heavy materials, push the regulator (B) farther down to increase the pressure on the material.

