


002-0255-XX or 002-0257-XX Upholstery Kit

KIT COMPONENTS		
Part Number	Description	Qty.
002-0255-00	Upholstery Kit (Model 404).....	1
or		
002-0257-00	Upholstery Kit (Model 405).....	1
003-0411-00	Installation Instructions.....	1

REQUIRED TOOLS	
None	
INTRODUCTION	
To provide replacement upholstery and drawer front inserts due to wear or remodeling of office decor.	


INSTALLATION (1)

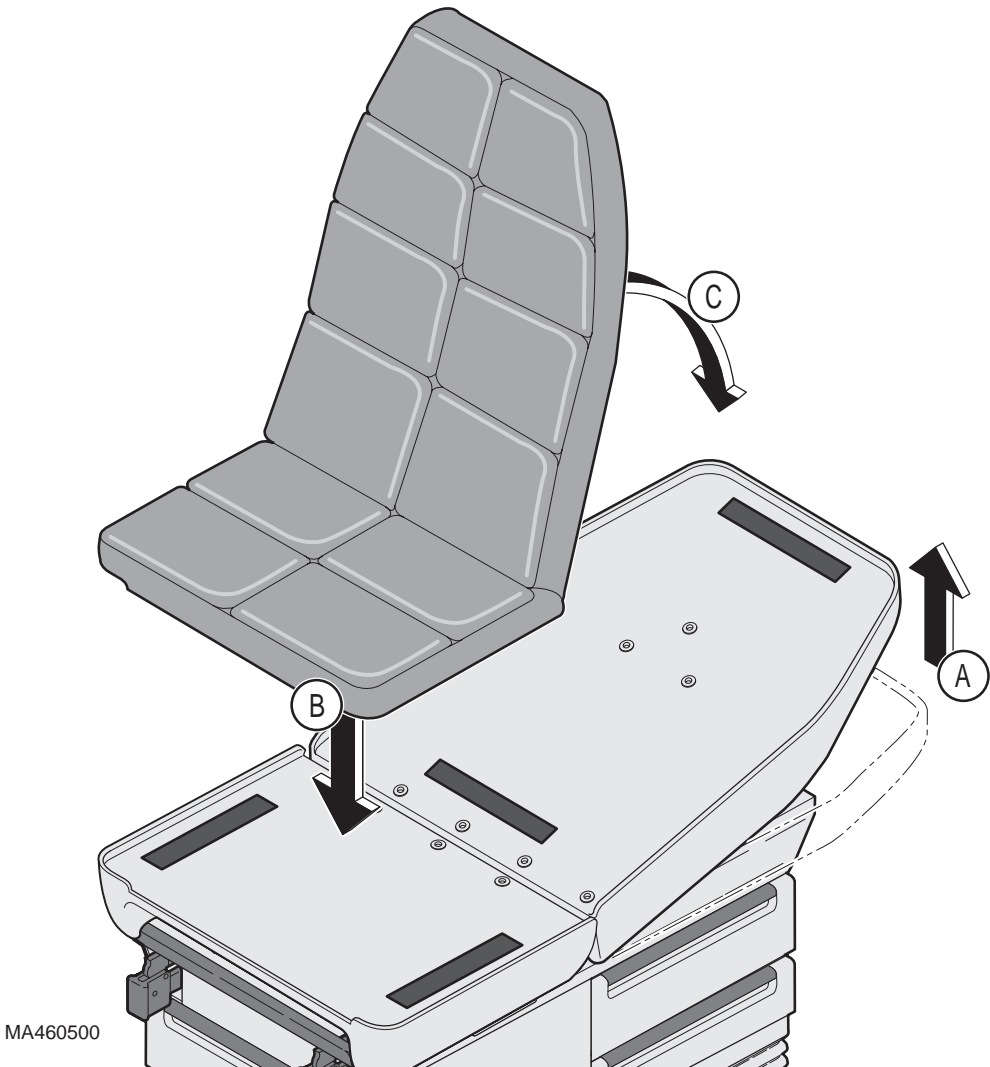

- A. Position table top at approximately 10°.
- B. Position SEAT/BACK cushion on SEAT section first, align front corners and press firmly to velcro.
- C. Pull up lightly on upholstered BACK section, align upper corners and press firmly to velcro.

INSTALLATION (2)


MA460600

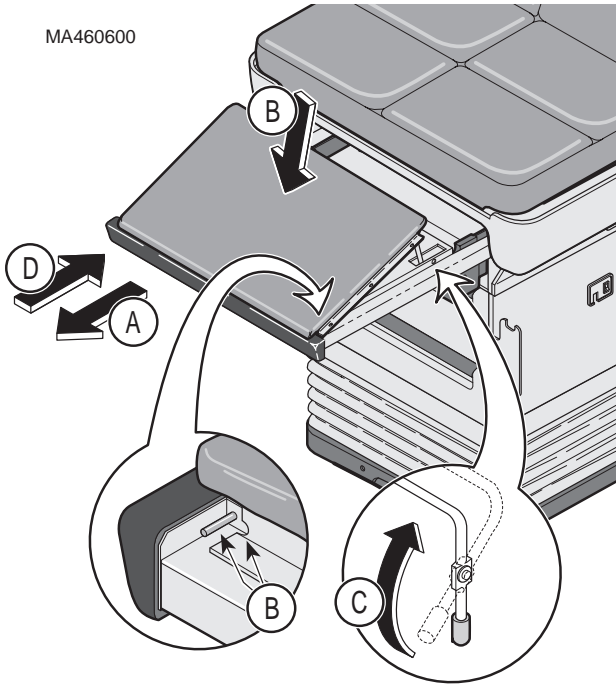

- A. Pull foot extension out.
- B. Position footrest pad so retaining hooks face toward pins at foot end of extension.
- C. Rotate footrest lift to stowed position while lowering footrest pad.
- D. Push footrest extension in.

INSTALLATION (3)

MA460700

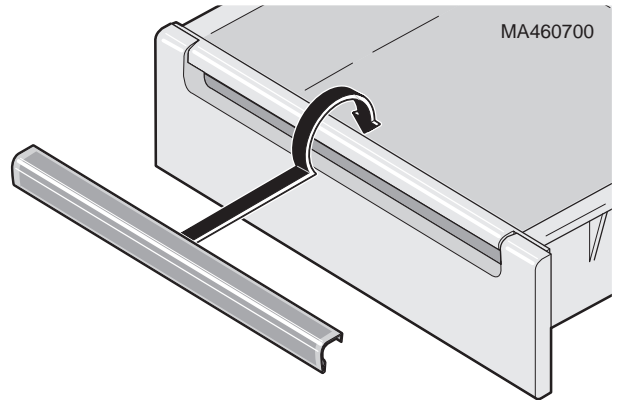

- A. Hook bottom notch of drawer pull over flange of drawer face.
- B. Press drawer pull against face of drawer until top flange on drawer pull snaps over top edge of drawer.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0411-00 Rev. D (1/00)