


## HUAWEI G630-U00, HUAWEI G630-U10 AND OTHER G630 MODELS

1. download **Qualcomm HS-USB QDLoader 9008** drivers from <http://www.androidbrick.com/download/qdloader-hs-usb-driver/> or you can download from any other site and make sure that if you have 64bits or 32bits operating system you install the exact version.


2. Download **Huawei\_Qualcomm\_Platform\_Bootloader-Fastboot\_Multi-Download-1.0.0.2** And Extract It on your desktop and you will find these files

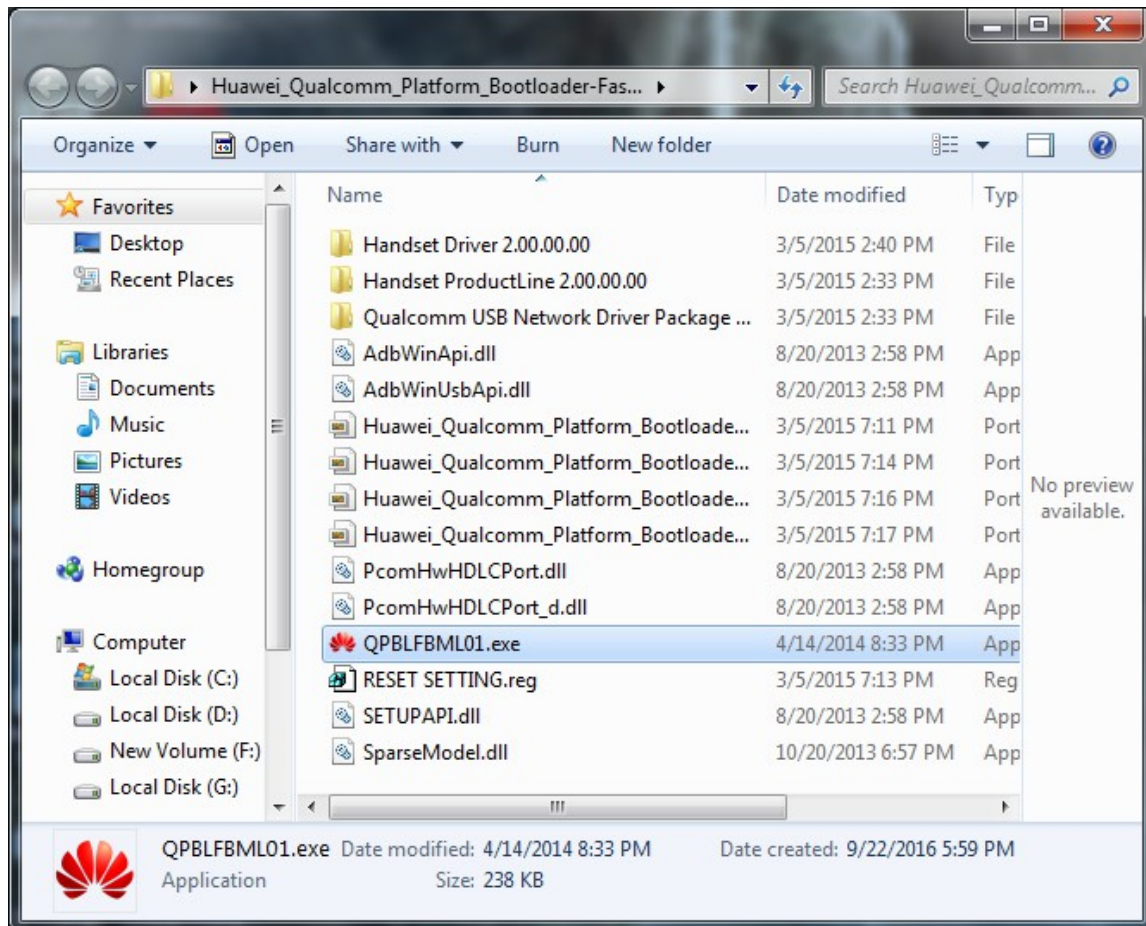


3. THEN DOWNLOAD HUAWEI G630 BOARD FIRMWARE from "<http://www.mppgmyanmar.com/2016/02/25/huawei-qualcomm-board-firmware-save-brick/>" and extract it onto your desktop.

**The file name is that below;**


**(G630-U00 Board Software (M001012,Burma,Android4.3,EmotionUI 2.0 Lite,05021KRV) 489.13 MB) and you will find these files so rename the last folder to g630 Or anything and open it**

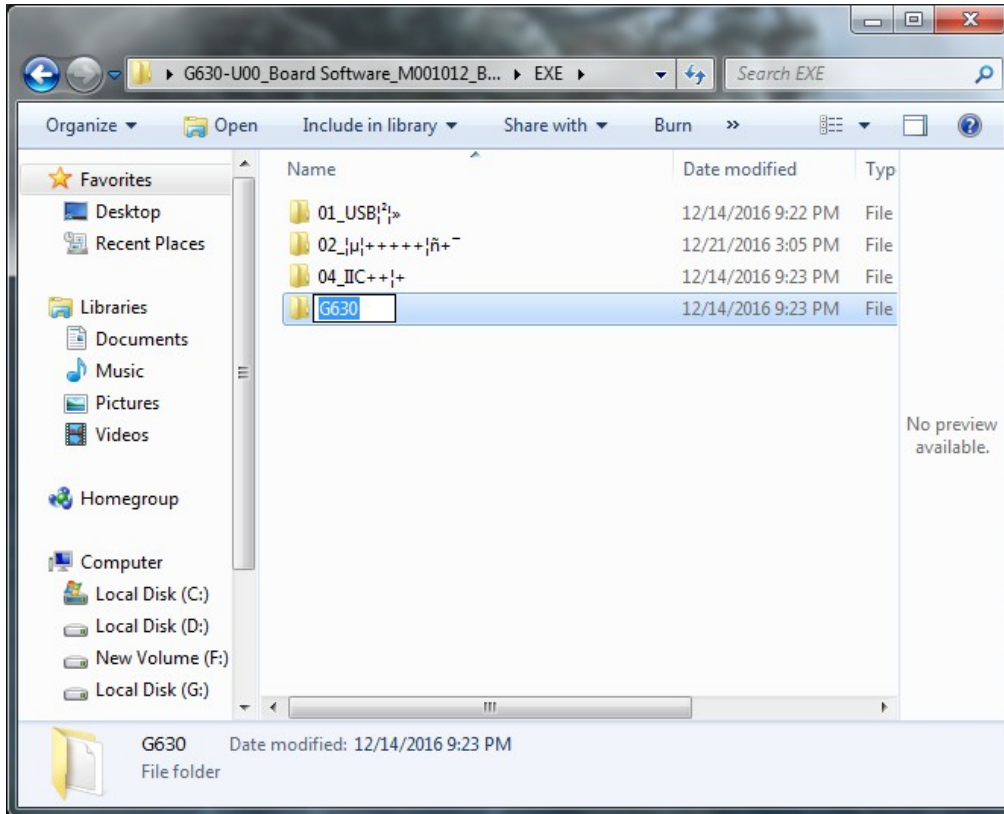

4. You will find these important files for unbricking your device

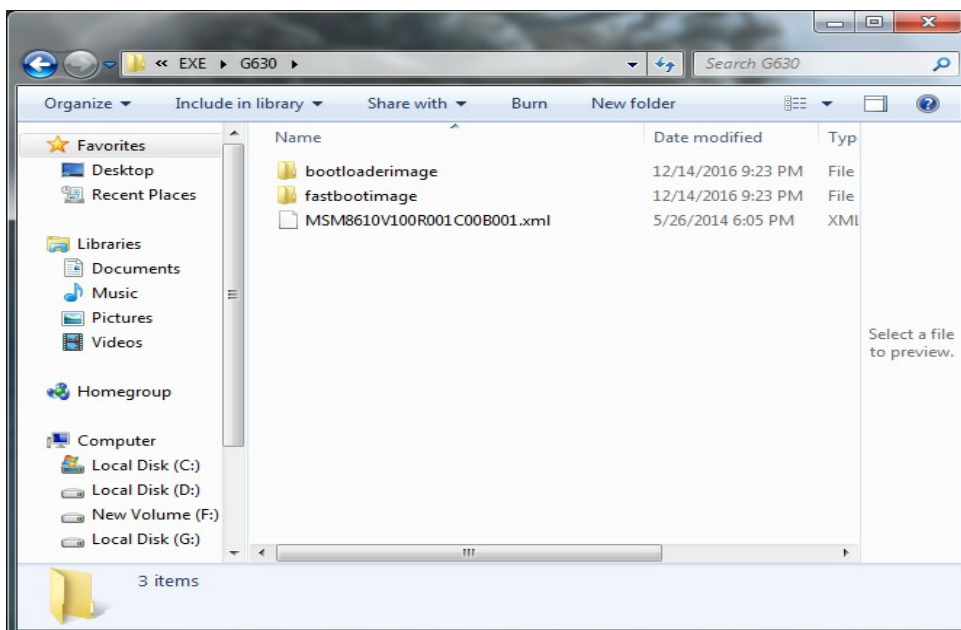


Open and launch QPBLFBML01.exe as shown in figure 2

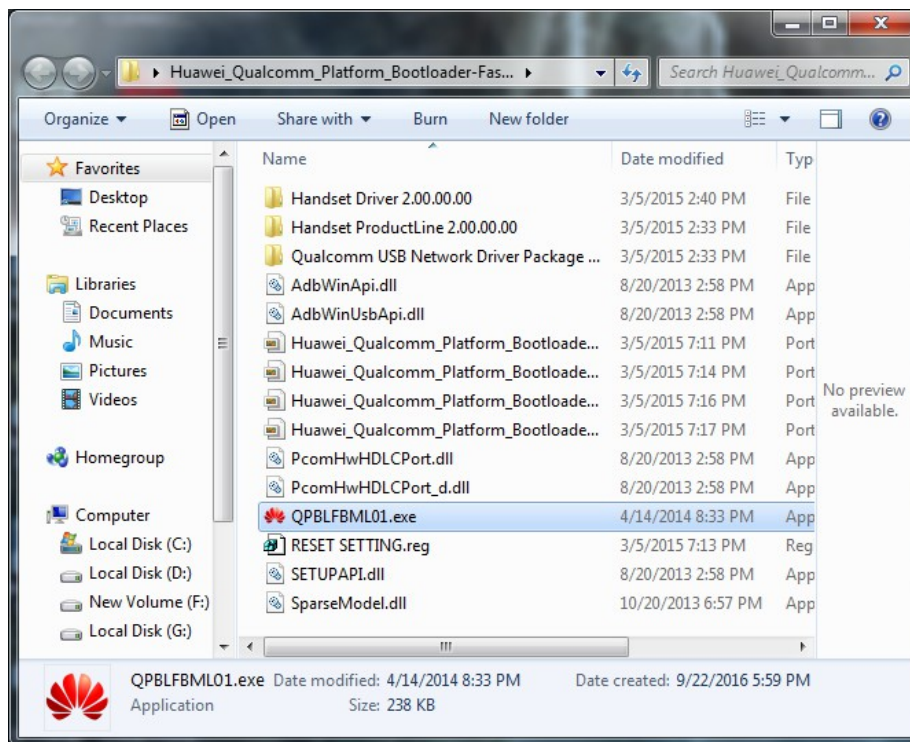


5. Open QPBLFBML01.exe, select manufacturer and you will get to this below

Note: if you ask for password you can put any as your new password

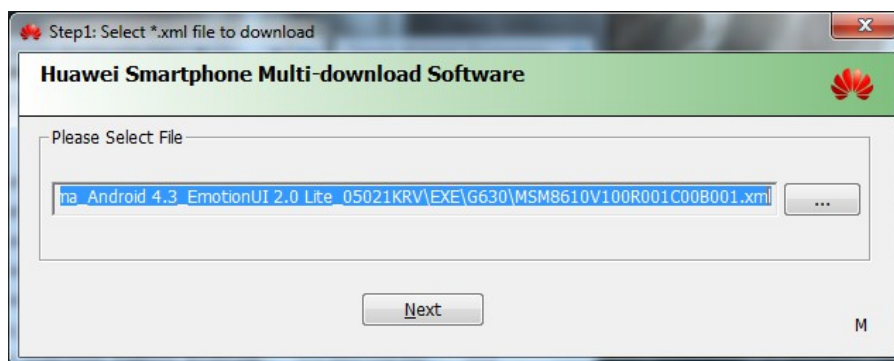

6. Click ... to browser the location of the folder you named G630 and select MSM8610V100R001C00B001.xml file and then click next.

It will open up this dialogue box

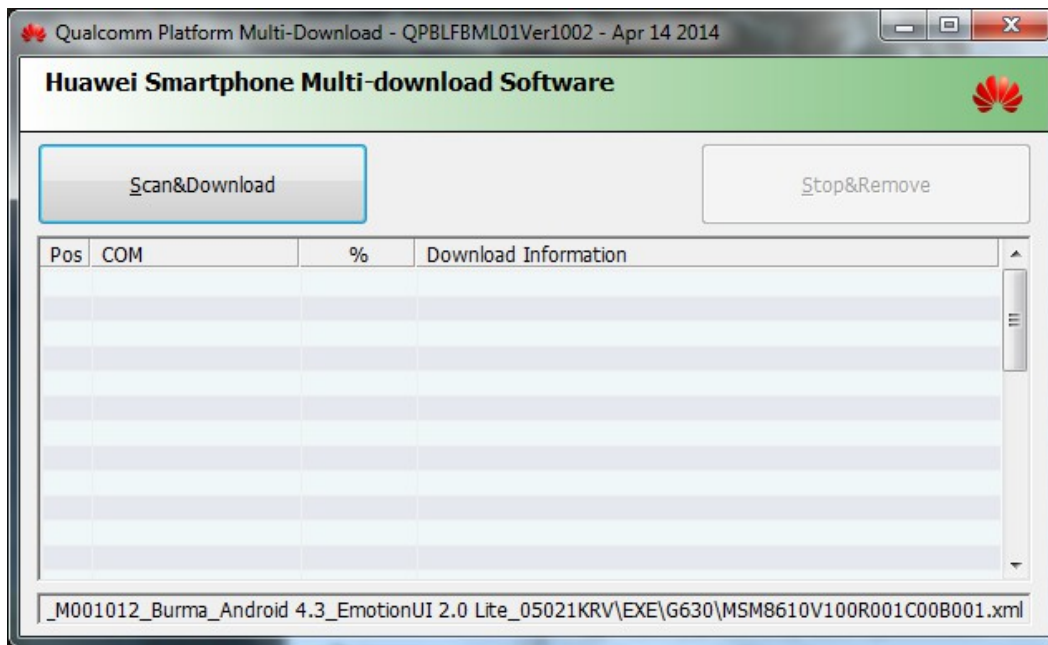

7. Hit scan&download and make sure that your phone is connected.

Now the download will start and when it reaches 40% your dead phone will light up and the download will proceed up to 100%.

**And that's it for Huawei G630-U00**

**GOOD LUCK.**

### **FOR HUAWEI G630-U10 AND OTHER G630 MODELS**


1. When the download reaches 40% it will also light up but the download will fail because we have no boot folder (G630-U00) so your devices will now boot as shown image below so don't panic




2. Download the original firmware of your phone from huawei website and extract it.

**Note: if you have huawei G630-U10 or other model then download the exact firmware of your model and extract it onto your desktop**


**you will see the folder named dload, open it and there is a file named update.app.**

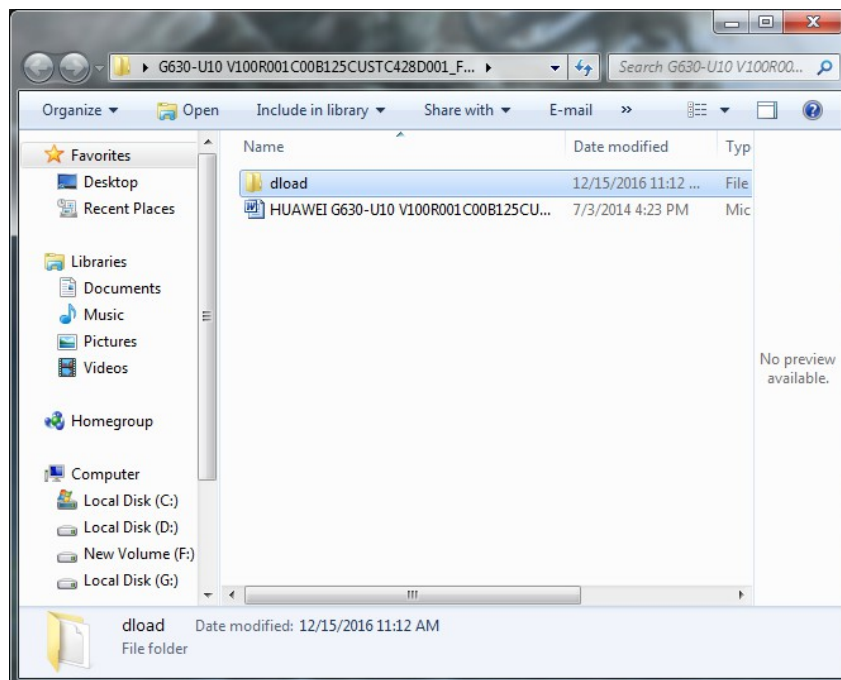


3. download huawei update extractor and install it on your pc and launch it as

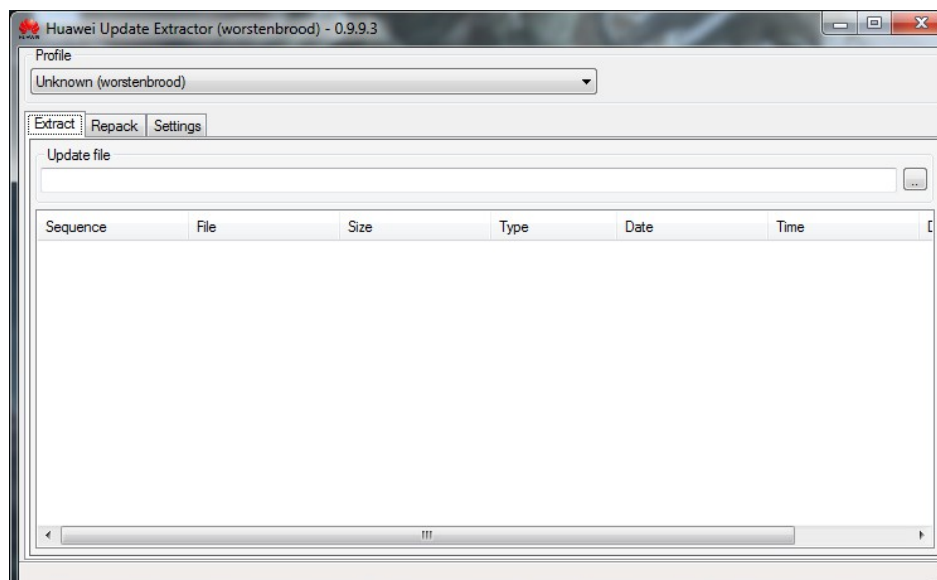

4. Click ... to browser the location of your update.app file, create a folder on your to store the extracted update.app files.

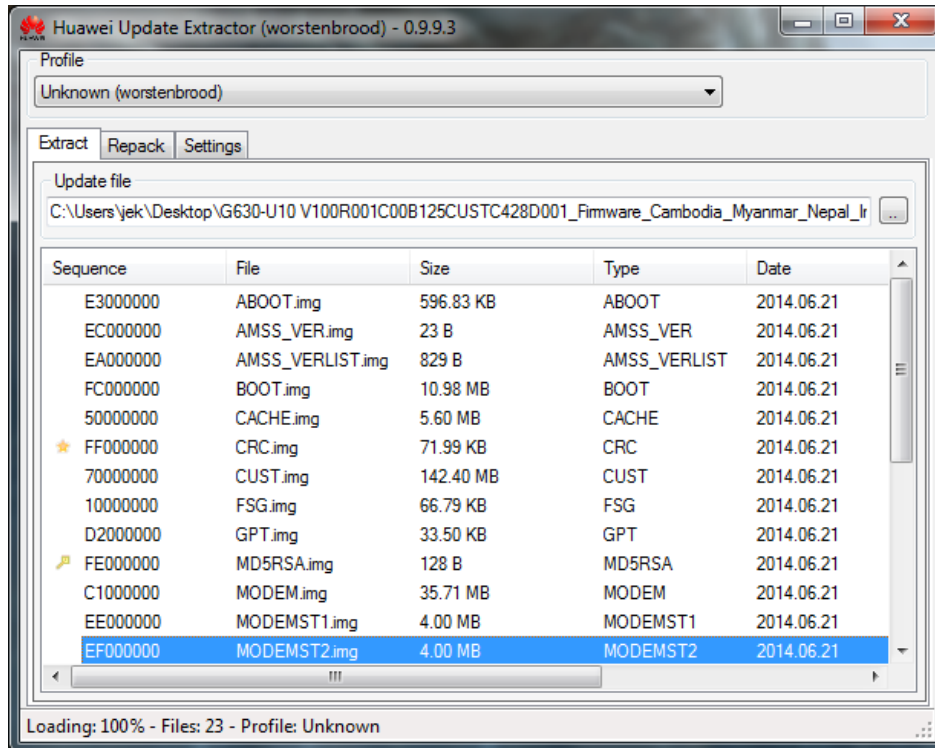


Right click and select extract all files . select the folder that created on the desktop and click ok

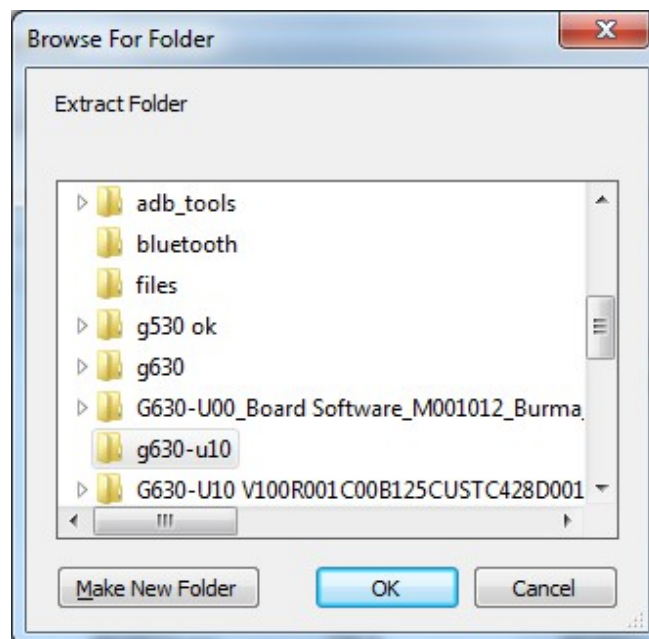


Wait for the process to complete.

5. Download fastboot tool onto your computer. You can use any fastboot tools but if you don't have then you can download from (<https://androiddatahost.com/789ju>) and install it on your computer.
6. Right click on minimal adb and fastboot icon on you desktop and go to properties>open file location

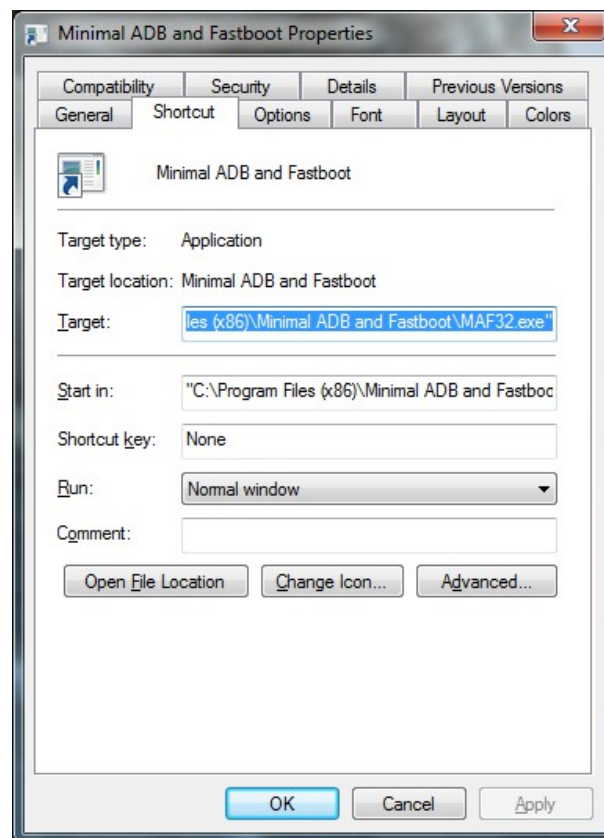

You will get to this below;

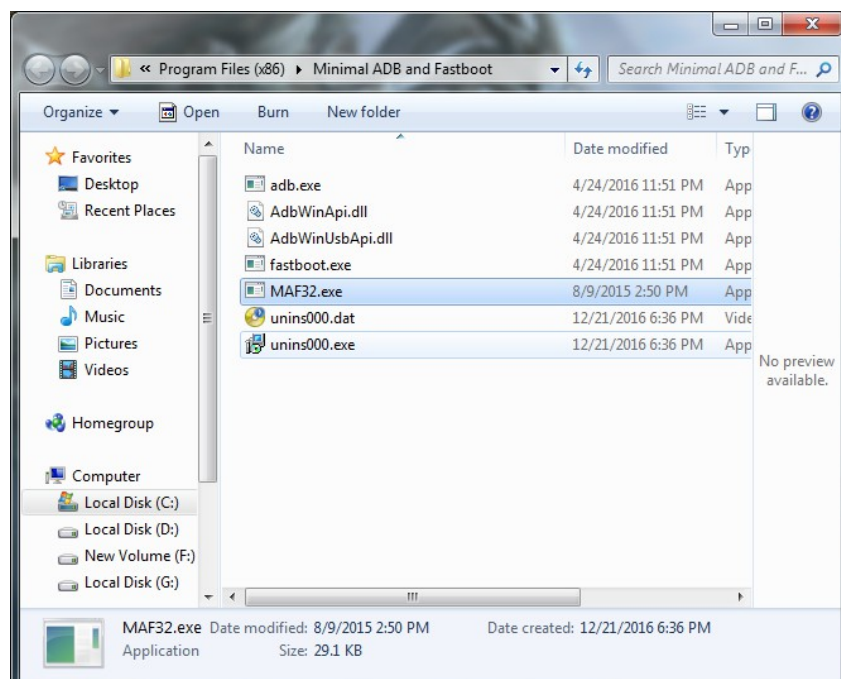

Don't close that dialogue box until we are done.

Now that we are going to use fastboot, we need to copy all our images extracted in 4 above to the folder above for easy command line.


**You need to put the images in the same folder of your fastboot tools don't forget**

Now connect your device and make sure it has enough battery and if not am worried you will have to unscrew and remove the unremoved battery to charge it separately

You can use universal charger to help you the battery and then come back after you have atleast 60% battery charge ok

**LETS START OFF**

Launch minimal and fastboot on your desktop shown below

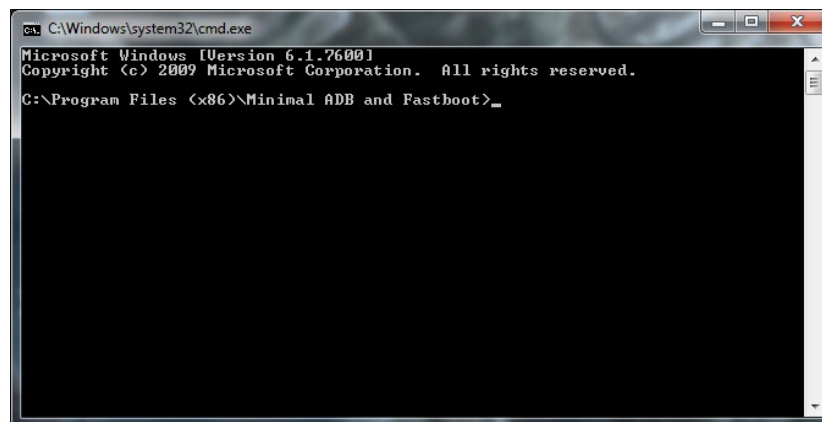

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7600]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.
C:\Program Files (x86)\Minimal ADB and Fastboot>
```

TYPE

1. Fastboot flash partition GPT GPT.img and press enter
2. Fastboot flash about about.img and press enter
3. Fastboot flash recovery recovery recovery.img
4. Fastboot flash boot boot.img
5. Fastboot flash system system.img
6. Fastboot flash modem modem.img

Do that until all images are done and after completing all the image type fastboot reboot and you are done

**Good luck**

For any assistant contact me at [ka.kakembo@gmail.com](mailto:ka.kakembo@gmail.com)

whatsapp me at +256774745672