
Oral-B White Pro 1000 Battery Replacement

Battery Replacement guide for Oral-B White Pro...

Written By: Carl Kinsey

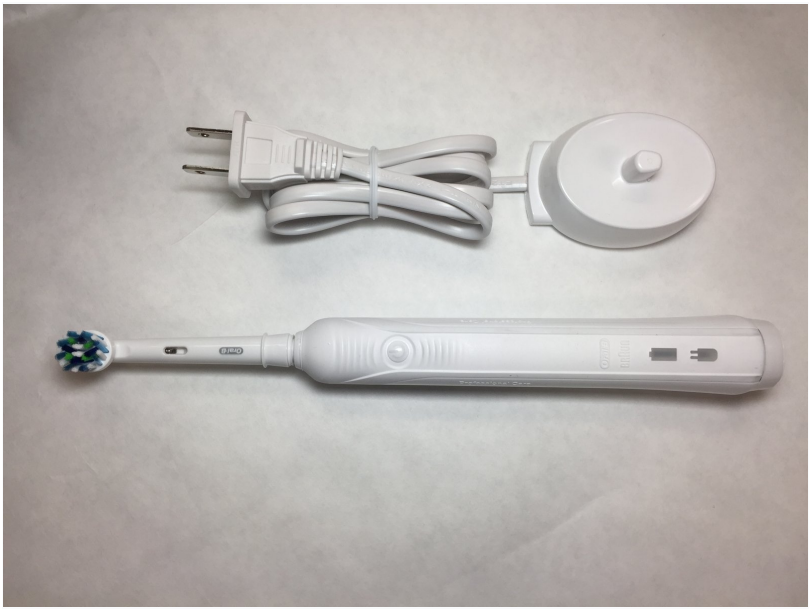

INTRODUCTION

Battery Replacement guide for Oral-B White Pro 1000 **type 3756** rechargeable electric toothbrush due to faulty battery. This guide illustrates the disassembly of the Oral-B White Pro 1000 **type 3756** electric toothbrush. Use caution not to short the positive (+) and negative (-) terminals when handling the battery. This guide also requires the use of a soldering tool which reaches high temperatures. Refer to this helpful guide for some soldering and desoldering tips.


TOOLS:

Lead-Free Solder (1)
Flathead 3/32" or 2.5 mm Screwdriver (1)
Soldering Iron (1)

PARTS:



Ni-MH 42mm x 14mm Braun Toothbrush Battery (1)

Step 1 — Motherboard

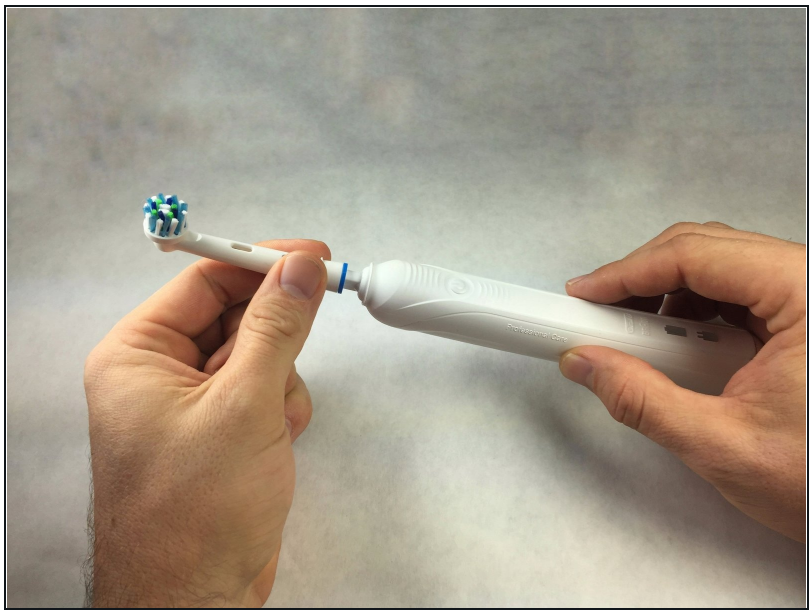



- Remove the brush head by pulling the top away from the base.

Step 2

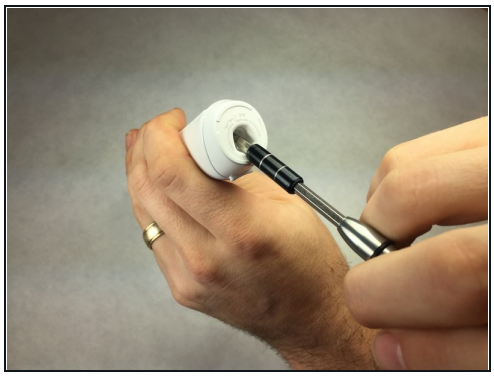
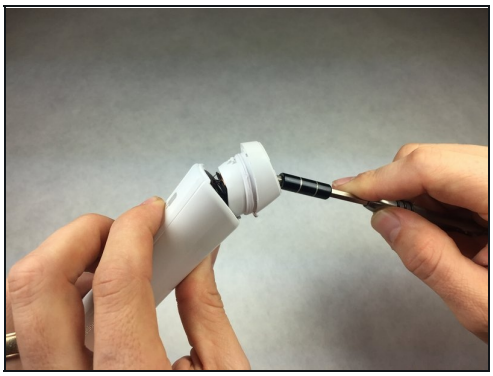

- Pry open the end cap from the toothbrush body.
- Remove the spring.

Step 3




- Apply pressure on the brush shaft to release the toothbrush internals.
- Remove the internals through the bottom of the toothbrush body.

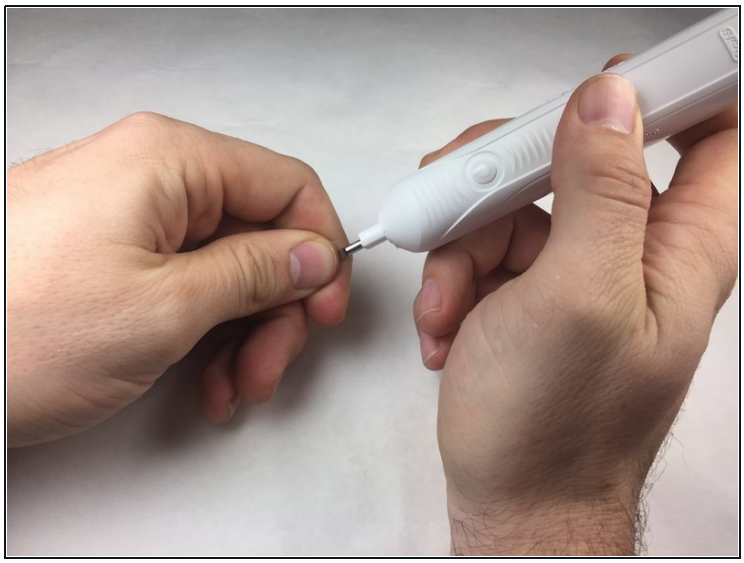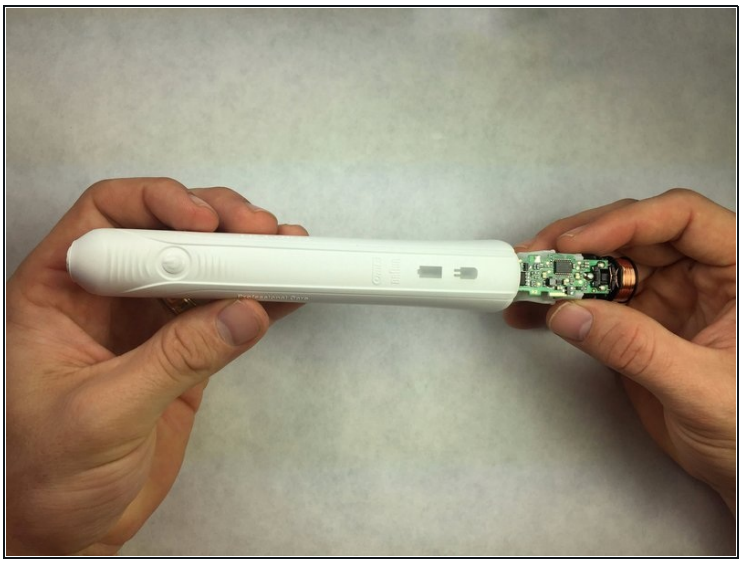Step 4

- Use flat head screwdriver to remove power button pressure plate.

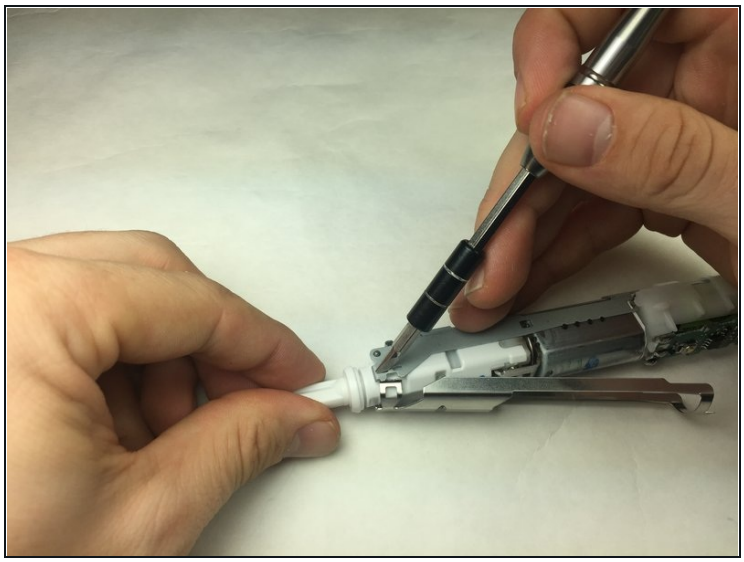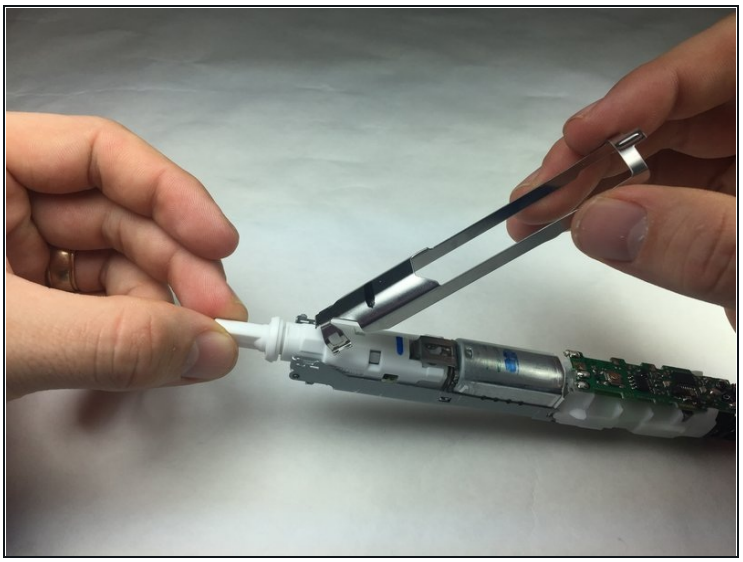Step 5




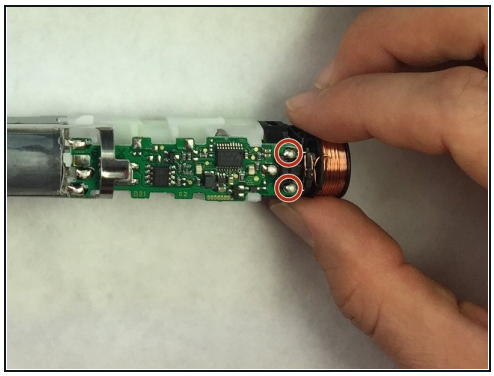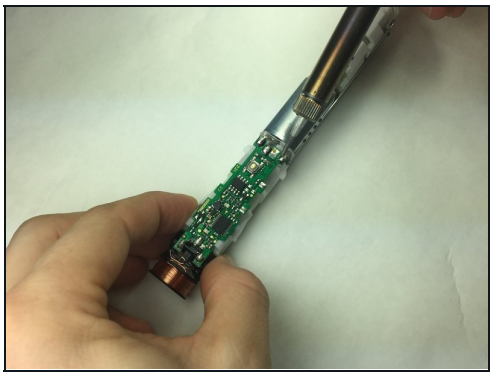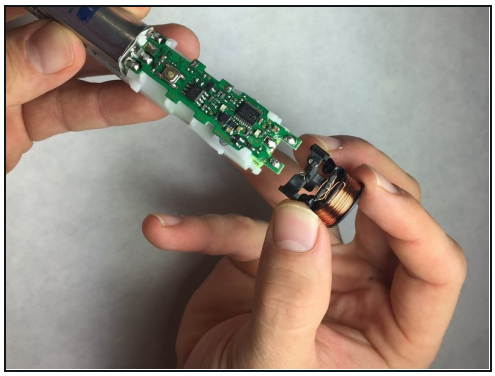


- Desolder the coil wire from the motherboard.

  ⓘ Check out this helpful guide for some soldering and desoldering tips.

- Squeeze and remove coil from motherboard.

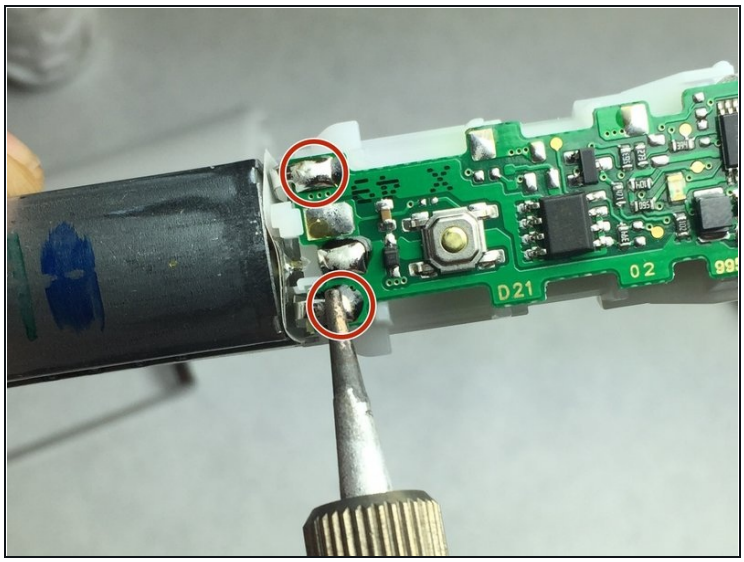
Step 6




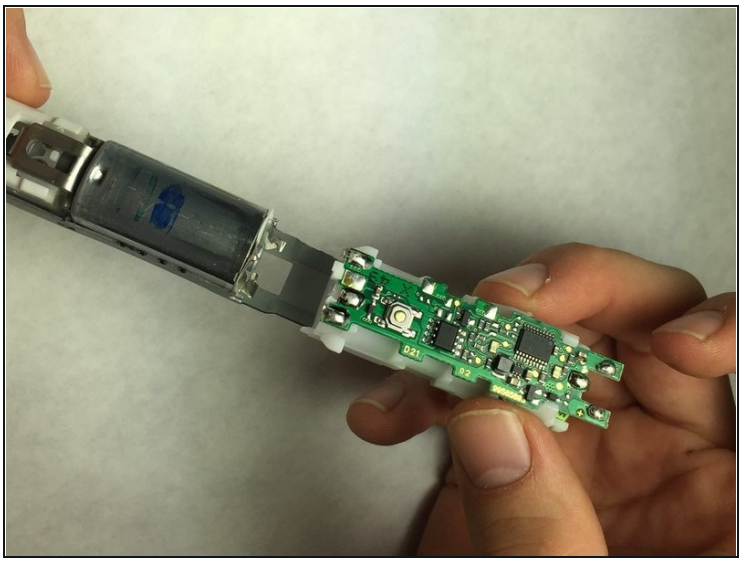

- Desolder the motor from motherboard.
- Remove motherboard and battery from body of toothbrush internals.


Step 7

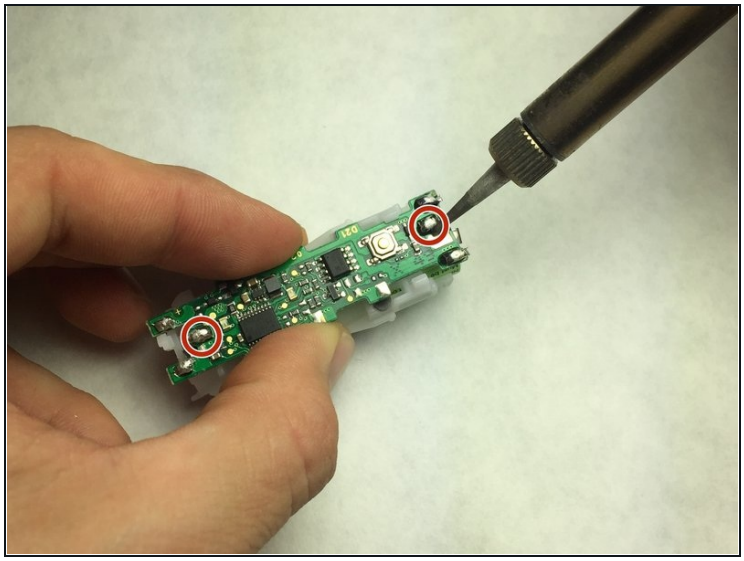


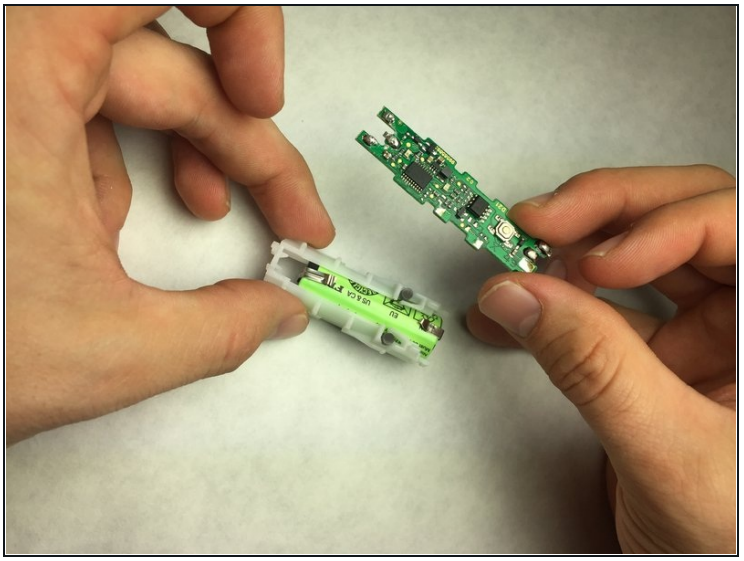

- Desolder the battery connections from the motherboard.
- Remove motherboard from battery holder.

Step 8 — Battery

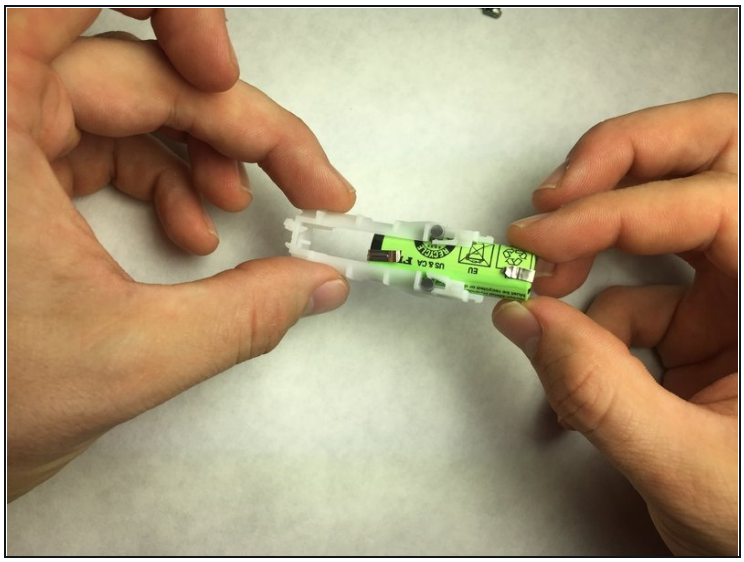

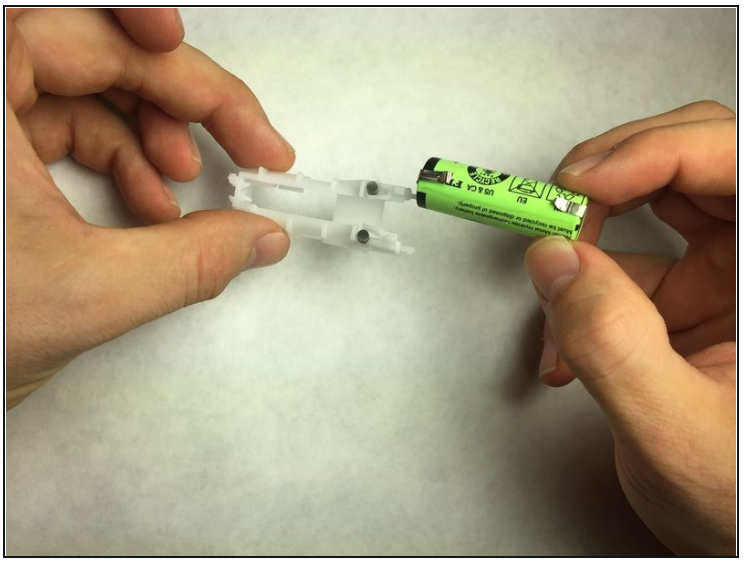

- Pull to slide battery from battery housing.
- Remove battery.

To reassemble your device, follow these instructions in reverse order.